

OM 402UNI - B

4 DIGIT PROGRAMMABLE UNIVERSAL 4-CHANNEL INSTRUMENT

DC VOLTMETER/AMMETER
PROCESS MONITOR
OHMMETER
THERMOMETER FOR PT 100/500/1 000
THERMOMETER FOR NI 1 000
THERMOMETER FOR THERMOCOUPLES
DISPLAYS FOR LIN. POTENTIOMETERS



SAFETY INSTRUCTIONS

Please, read the enclosed safety instructions carefully and observe them! These instruments should be safeguarded by isolated or common fuses (breakers)! For safety information the EN 61 010-1 + A2 standard must be observed. This instrument is not explosion-safe!

TECHNICAL DATA

Measuring instruments of the OM 402 series conform to the European regulation 89/336/EWG and the Ordinance 168/1997 Coll.

The instruments are up to the following European standards:

EN 55 022, class B

EN 61000-4-2, -4, -5, -6, -8, -9, -10, -11

The instruments are applicable for unlimited use in agricultural and industrial areas.

CONNECTION

Supply of energy from the main line has to be isolated from the measuring leads.









ORBIT MERRET, spol. s r.o.

Vodnanska 675/30 198 00 Prague 9 Czech Republic

Tel: +420 - 281 040 200 Fax: +420 - 281 040 299 e-mail: orbit@merret.cz www.orbit.merret.cz







1.	Conte					
2.	Instrument description					
3.	Instrument connection.					
4.	. Instrument setting					
			n the instructions.			
	Setting	g the DP o	and the (-) sign			
		ol keys fu		11		
	Setting	g/permitti	ing items into "USER" menu	11		
5.	Settin	a "LIGH	T" menu.	. 12		
	5.0	Descripti	ion "LIGHT" menu	. 12		
			nput - Type "DC"			
		Setting in	nput - Type "PM"	. 18		
		Setting in	nput - Type "DU"	. 20		
			nput - Type "OHM"			
		Setting input - Type "RTD - Pt"				
			nput - Type "RTD - Ni"			
			nput - Type "T/C"			
		Selection	of the instrument mesuring range - Channel B, C, D	. 30		
		Setting o	lisplay projection - Channel B	. 32		
			lisplay projection - Channel C			
			lisplay projection - Channel D			
		Setting L				
			inalog output			
			n of programming menu "LIGHT"/"PROFI"			
			on or manufacture seming			
			n of instrument menu language version			
			ew access password			
			nt identification.			
,	c					
6.			I" menu			
	6.0		on of "PROFI" menu	. 40		
	6.1		menu - INPUT			
		6.1.1	Resetting internal values			
		6.1.2	Setting measuring type, range, mode, rate,			
		6.1.3	Setting the Real Time			
		6.1.4	External input function selection.			
		6.1.5	Optional accessory functions of the keys.	. 60		
	6.2		menu - CHANNEL			
		6.2.1	Setting measuring parameters (projection, filters, decimal point, description)			
		6.2.2	Setting mathematic functions			
		6.2.3	Selection of evaluation of min/max. value	. 72		
	6.3		menu - OUTPUT			
		6.3.1	Setting data logging			
		6.3.2	Setting Limits			
		6.3.3	Setting data output			
		6.3.4	Setting analog output.			
		6.3.5	Selection of display projection.	. 82		
	6.4		menu - SERVICE			
		6.4.1	Selection of programming menu "LIGHT"/"PROFI"			
		6.4.2	Restoration manufacture setting			
		6.4.3	Calibration - input range (DU)			
		6.4.4	Selection of instrument menu language version.			
		6.4.5	Setting new access password			
		6.4.6	Instrument identification			
7.	Settin		nto "USER" menu			
	7.0	Configu	ration "USER" menu	. 88		
8.	Meth	od of me	easuring of the cold junction	. 90		
9.			g			
10.	Error statements 9					
12.	Table of symbols 93					
12.	Technical data					
12.						
14.	. Certificate of guarantee					

2.1 Description

The OM 402 model series are 4 digit panel programmable instruments designed for maximum efficiency and user comfort while maintaining their favourable price. Two models are available: UNI and PWR.

Type OM 402UNI is a multifunction instrument with the option of configuration for 7 various input options, easily configurable in the instrument menu. By further options of input modules it is feasible to measure larger ranges of DC voltage and current or increase the number of inputs up to 4 (applies for PM).

The instrument is based on an 8-bit microcontroller with a multichannel 24-bit sigma-delta converter, which secures high accuracy, stability and easy operation of the instrument.

The OM 402 is a multifunction instrument available in following types and ranges

type UNI

DC: 0...60/150/300/1200 mV

PM: 0...5 mA/0...20 mA/4...20 mA/±2 V/±5 V/±10 V/±40 V

OHM: 0...100 Ω /0...1 kΩ/0...10 kΩ/0...100 kΩ

RTD-Pt: Pt 100/Pt 500/Pt 1000 RTD-Ni: Ni 1 000/Ni 10 000 T/C: J/K/T/E/B/S/R/N

DU: Linear potentiometer (min. 500 Ω)

type UNI, option A

DC: 0...1 A/0...5 A/±30 V/±120 V/±500 V

type UNI, option B (expansion by 3 more inputs)

PM: 3x 0...5 mA/0...20 mA/4...20 mA/±2 V/±5 V/±10 V/±40 V

PROGRAMMABLE PROJECTION

Selection: of type of input and measuring range

Measuring range: adjustable as fixed or with automatic change

Setting: manual, optional projection on the display may be set in the menu for both limit values of

the input signal, e.g. input 0...20 mA > 0...850,0

Projection: -9999...9999 (-99999...999999)

COMPENSATION

of conduct: in the menu it is possible to perform compensation for 2-wire connection

of conduct in probe: internal connection (conduct resistance in measuring head)

of CJC (T/C): manual or automatic, in the menu it is possible to perform selection of the type of

thermocouple and compensation of cold junctions, which is adjustable or automatic

(temperature at the brackets)

LINEARIZATION

Linearization:* by linear interpolation in 50 points (solely via OM Link)

DIGITAL FILTERS

Exponen.average: from 2...100 measurements

Rounding: setting the projection step for display

MATHEMATIC FUCTIONS

Min/max. value: registration of min./max. value reached during measurement

Tare: designed to reset display upon non-zero input signal

Peak value: the display shows only max. or min. value

Mat. operations: polynome, 1/x, logarithm, exponential, power, root, sin x

EXTERNAL CONTROL

Lock: control keys blocking

Hold: display/instrument blocking

Tare: tare activation/resetting tare to zero

Resetting MM: resetting min/max value

Memory: data storage into instrument memory

2.2 Operation

The instrument is set and controlled by five control keys located on the front panel. All programmable settings of the instrument are performed in three adjusting modes:

LIGHT Simple programming menu

- contains solely items necessary for instrument setting and is protected by optional number code

PROFI Complete programming menu

- contains complete instrument menu and is protected by optional number code

USER User programming menu

-may contain arbitrary items selected from the programming menu (LIGHT/PROFI), which determine the right (see or change)

- acces without password

All programmable parameters are stored in the EEPROM memory (they hold even after the instrument is switched off).



Complete instrument operation and setting may be performed via OM Link communication interface, which is a standard equipment of all instruments.

The operation program is freely accessible (www.orbit.merret.cz) and the only requirement is the purchase of OML cable to connect the instrument to PC. It is manufactured in version RS 232 and USB and is compatible with all ORBIT MERRET instruments. Another option for connection is with the aid of data output RS 232 or RS 485 (without the need of the OML cable).

The program OM LINK in "Basic" version will enable you to connect one instrument with the option of visualization and archiving in PC. The OM Link "Standard" version has no limitation of the number of instruments connected.

2.3 Options

Excitation is suitable for supplying power to sensors and transmitters. It has a galvanic separation.

Comparators are assigned to monitor one, two, three or four limit values with relay output. The user may select limits regime: LIMIT/DOSING/FROM-TO. The limits have adjustable hysteresis within the full range of the display as well as selectable delay of the switch-on in the range of 0...99,9 s. Reaching the preset limits is signalled by LED and simultaneously by the switch-on of the relevant relay.

Data outputs are for their rate and accuracy suitable for transmission of the measured data for further projection or directly into the control systems. We offer an isolated RS232 and RS485 with the ASCII or DIN MessBus protocol.

Analog outputs will find their place in applications where further evaluating or processing of measured data is required in external devices. We offer universal analog output with the option of selection of the type of output -voltage/current. The value of analog output corresponds with the displayed data and its type and range are selectable in Menu.

Measured data record is an internal time control of data collection. It is suitable where it is necessary to register measured values. Two modes may be used. FAST is designed for fast storage (40 records/s) of all measured values up to 8 000 records. Second mode is RTC, where data record is governed by Real Time with data storage in a selected time segment and cycle. Up to 250 000 values may be stored in the instrument memory. Data transmis sion into PC via serial interface RS232/485 and OM Link.

INSTRUMENT CONNECTION

The instrument supply leads should not be in proximity of the incoming low-potential signals.

Contactors, motors with larger input power should not be in proximity of the instrument.

The leads into the instrument input (measured quantity) should be in sufficient distance from all power leads and appliances. Provided this cannot be secured it is necessary to use shielded leads with connection to ground (bracket E).

The instruments are tested in compliance with standards for use in industrial area, yet we recommend to abide by the above mentioned principles.

MEASURING PANGES


Туре	Input I	Input U
DC	060/150/300/1 200 mV	
PM	05/20 mA/420 mA	±2/±5/±10/±40 V
ОНМ	$00,1/1/10/100 k\Omega$	
RTD-Pt	Pt 100/Pt 500/ Pt 1 000	
RTD-Ni	Ni 1 000/10 000	
T/C	J/K/T/E/B/S/R/N	
DU	Linear potentiometer (min. 500 Ω)	

OPTION "A"

Туре	Input I	Input U
DC	01/5 A	±120 V/±250 V/±500 V


OPTION "B"

Туре	Input 2, 3, 4/I	Input 2, 3, 4/U
PM	05/20 mA/420 mA	±2/±5/±10/±40 V

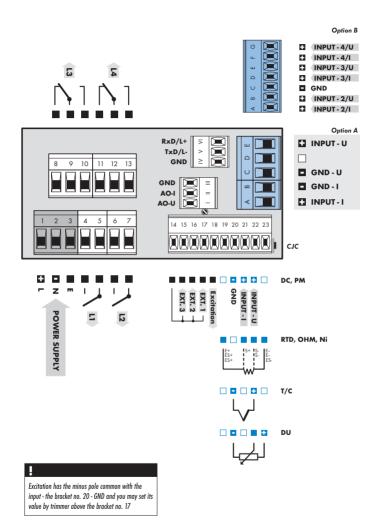



- · For expert users
- Complete instrument menu
- Access is password protected
- Possibility to arrange items of the "User" menu
- · Tree menu structure

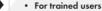

- Only items necessary for instrument setting
- · Access is password protected
- Possibility to arrange items of the "User" menu
- · Linear menu structure

- For user operation
- Menu items are set by the user (Profi/Light) as per request
- Access is not password protected
- Optional menu structure either tree (PROFI) or linear (LIGHT)

4.1 Setting

The instrument is set and controlled by five control keys located on the front panel. All programmable settings of the instrument are performed in three adjusting modes:

LIGHT Simple programming menu

- contains solely items necessary for instrument setting and is protected by optional number code

PROFI Complete programming menu

- contains complete instrument menu and is protected by optional number code

USER User programming menu

-may contain arbitrary items selected from the programming menu (LIGHT/PROFI), which determine the right (see or change)

- acces without password


All programmable parameters are stored in the EEPROM memory (they hold even after the instrument is switched off).

Complete instrument operation and setting may be performed via OM Link communication interface, which is a standard equipment of all instruments.

The operation program is freely accessible (www.orbit.merret.cz) and the only requirement is the purchase of OML cable to connect the instrument to PC. It is manufactured in version RS 232 and USB and is compatible with all ORBIT MERRET instruments.


Another option for connection is with the aid of data output RS 232 or RS 485 (without the need of the OML cable).

Scheme of processing the measured signal

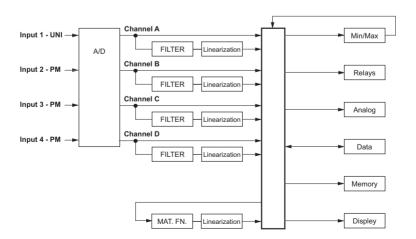

INSTRUMENT SETTING

Setting and controlling the instrument is performed by means of 5 control keys located on the front panel. With the aid of these keys it is possble to browse through the operation menu and to select and set required values.

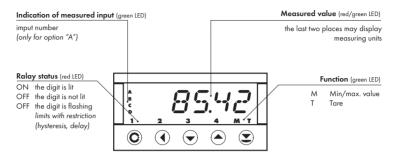

Symbols used in the instructions

values preset from manufacture

values preset from manufacture

symbol indicates a flashing light (symbol)

inverted triangle indicates the item that can be placed in USER menu

broken line indicates a dynamic item, i.e. it is displayed only in particular selection/version

after pressing the key the set value will not be stored

after pressing the key the set value will be stored

continues on page 30

Setting the decimal point and the minus sign

DECIMAL POINT

Its selection in the menu, upon modification of the number to be adjusted it is performed by the control key ③ with transition beyond the highest decade, when the decimal point starts flashing. Positioning is performed by ④/②.

THE MINUS SIGN

Setting the minus sign is performed by the key \bigcirc on higher decade. When editing the item substraction must be made from the current number (e.g.:: 013 > \bigcirc , on class 100 > -87)

Control keys functions			
Key	Measurement	Menu	Setting numbers/selection
•	access into USER menu	exit menu	quit editing
0	programmable key function	back to previous level	move to higher decade
	programmable key function	move to previous item	move down
0	programmable key function	move to next item	move up
Θ	programmable key function	confirm selection	confirm setting/selection
0+0			numeric value is set to zero
⊕+⊖	access into LIGHT/PROFI menu		
• + •	direct access into PROFI menu		
9+0		configuration of an item for "USER" menu	
9 + 0		determine the sequence of items in "USER - LIGHT"	

menu

Setting items into "USER" menu

in LIGHT or PROFI menu

YE5

SHOU

- no items permitted in USER menu from manufacture
- · on items marked by inverted triangle





NO item will not be displayed in USER menu

item will be displayed in USER menu with the option of setting

item will be solely displayed in USER menu



"LIGHT" Setting

LIGHT

Simple programming menu

- contains only items necessary for instrument setting and is protected by optional number code






- For capable users
- · Only items necessary for instrument setting
- · Access is password protected
- · Possibility to arrange items of the "User" menu
- · Linear menu structure


Preset from manufacture

Password	"0"	
Menu	LIGHT	
USER menu	off	
Setting the items	DEF	




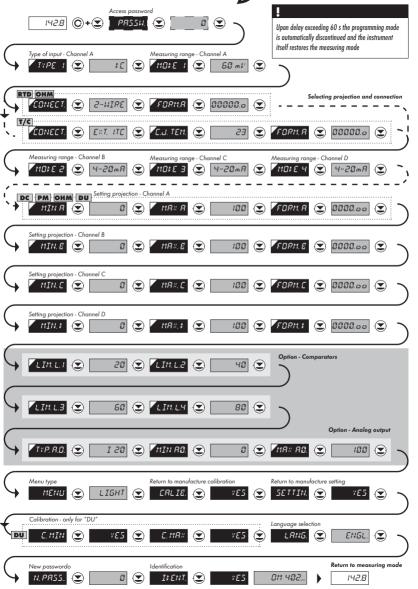




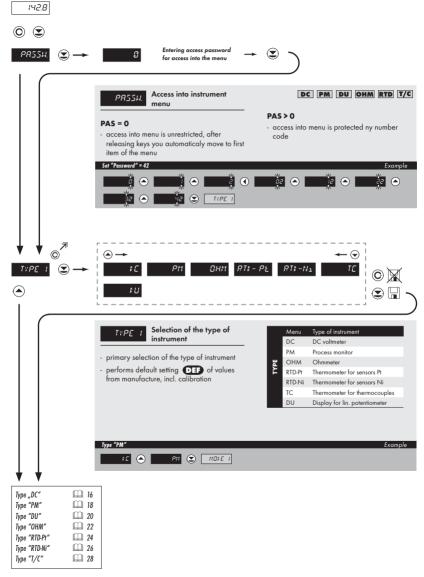



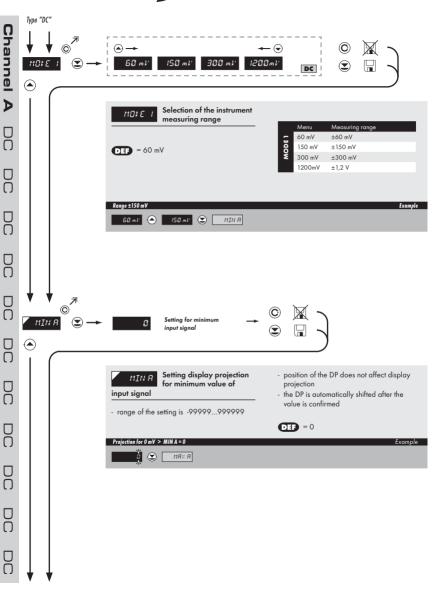

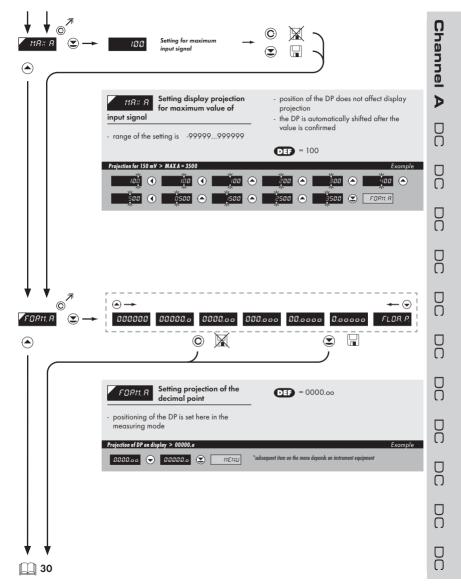


Channel A


D S


PM PM PM


PX PX PX

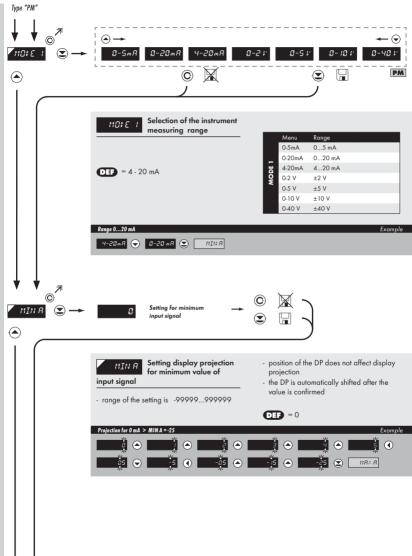




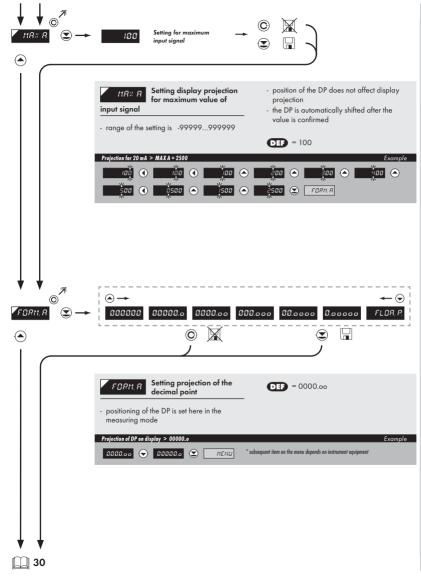


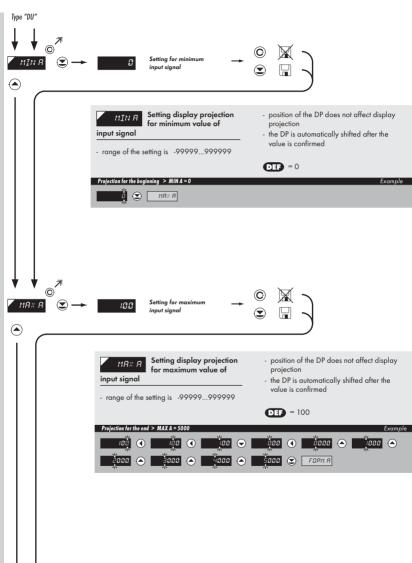

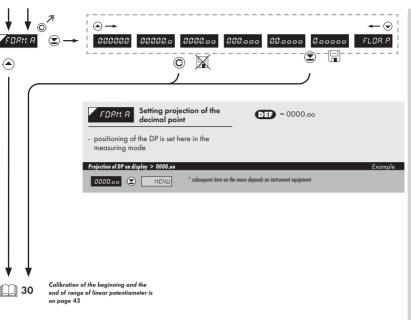


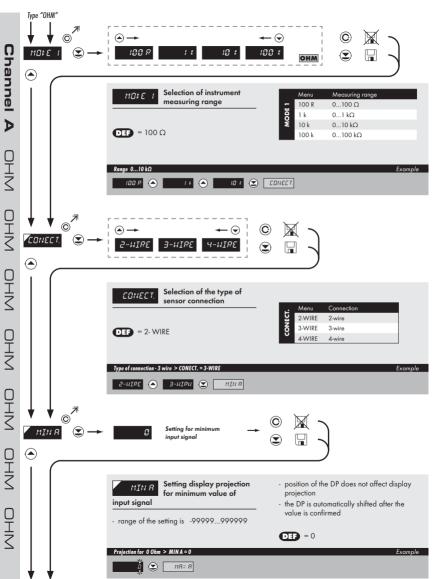





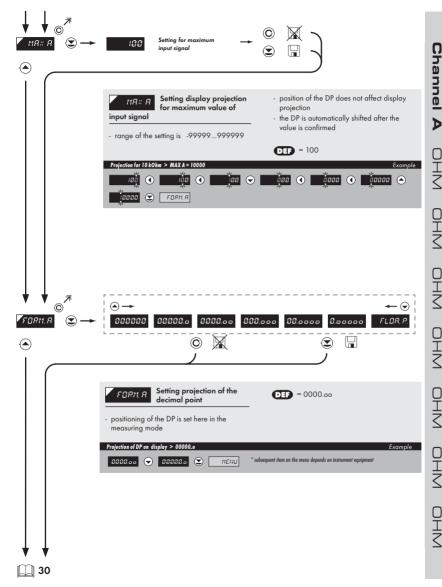



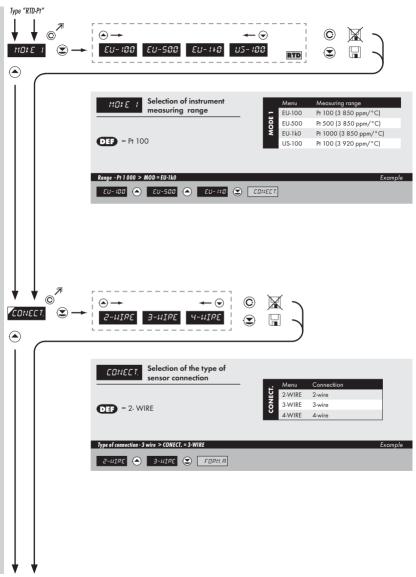


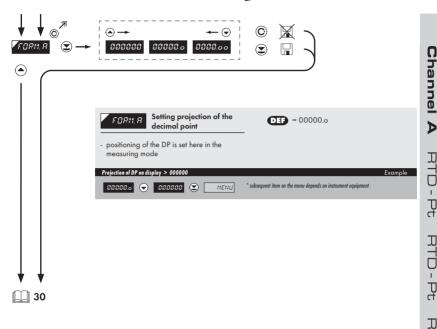

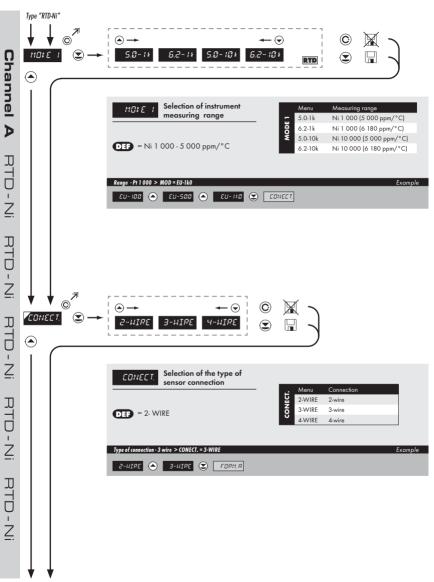


Channel A



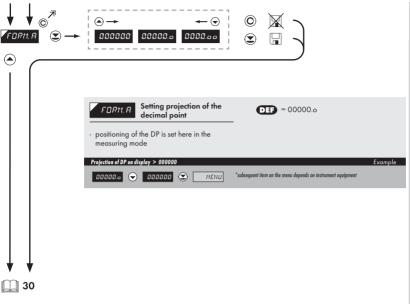



T/C


7/0 7/0 7/0

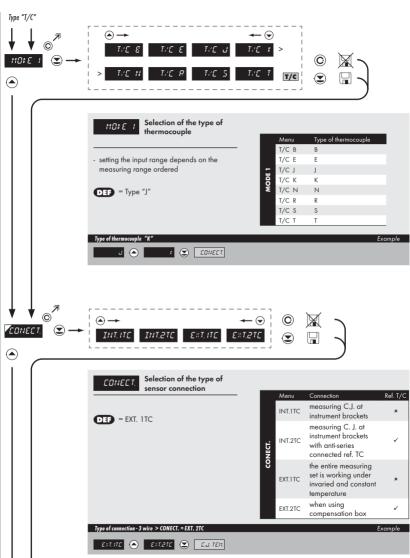



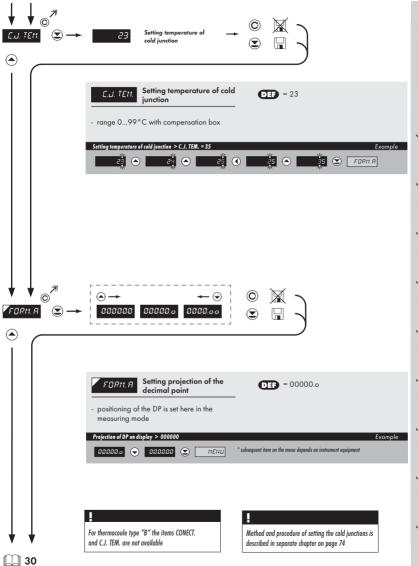

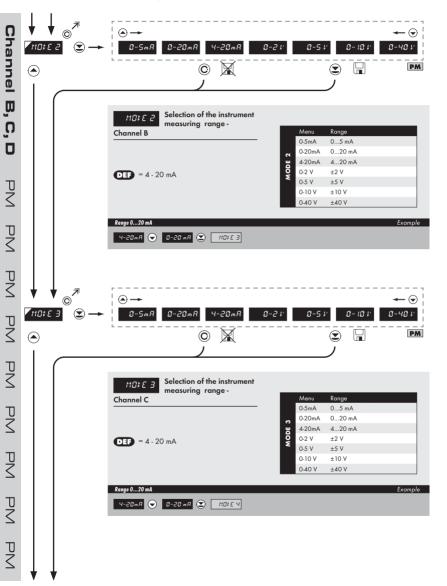

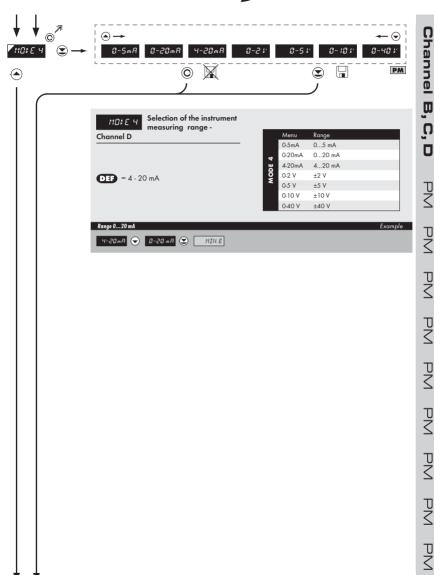

for minimum value of input signal - Channel B

Setting for minimum input signal

- range of the setting is -99999...999999
- position of the DP does not affect display projection
- the DP is automatically shifted after the value is confirmed

 $\mathbf{DF} = 0$

MR× E

iaa

Setting for maximum input signal

PM PM PM

PZ

Channel B

•

input signal - Channel B

Setting display projection for maximum value of

- range of the setting is -99999...999999
- position of the DP does not affect display projection
- the DP is automatically shifted after the value is confirmed

DFF = 100












Example

Channel B



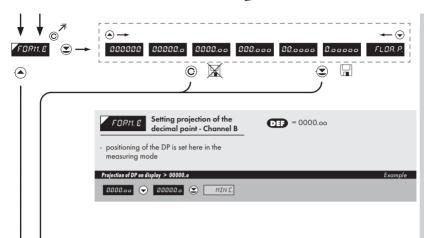

Setting display projection for minimum value of input signal - Channel C

Setting for minimum input signal

- range of the setting is -99999...999999
- position of the DP does not affect display projection
- the DP is automatically shifted after the value is confirmed

 $\mathbf{DF} = 0$

MR× E

iaa

Setting for maximum input signal



Channel C

•

input signal - Channel C

Setting display projection for maximum value of

- range of the setting is -99999...999999
- position of the DP does not affect display projection
- the DP is automatically shifted after the value is confirmed

DFF = 100












Example

PM PM PM

Channel C



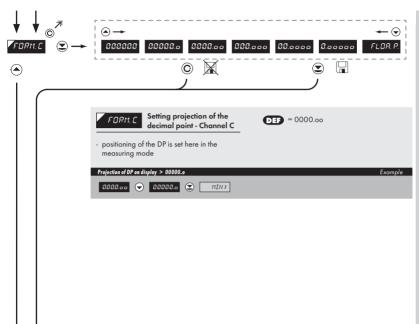

Setting display projection for minimum value of input

- range of the setting is -99999...999999

Setting for minimum input signal

- position of the DP does not affect display projection
- the DP is automatically shifted after the value is confirmed

 $\mathbf{DF} = 0$

MR# #

iaa

Setting for maximum input sianal



Channel D

T Z

PM PM PM

(

Setting display projection for maximum value of input signal - Channel D

- range of the setting is -99999...999999
- position of the DP does not affect display projection
- the DP is automatically shifted after the value is confirmed

DIF = 100













Example

PM PM PM

Channel D




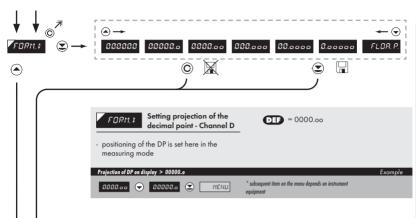


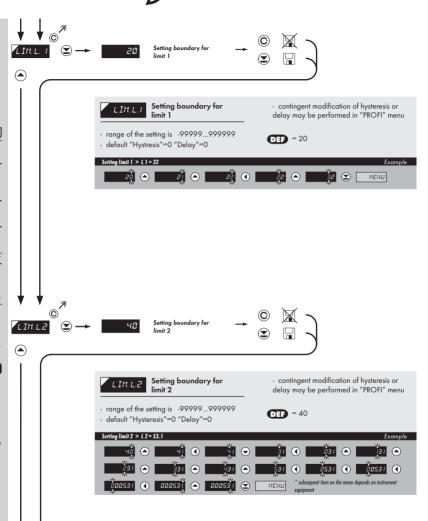

Items for "Limits" and "Analog output" are accessible only if incorporated in the instrument.




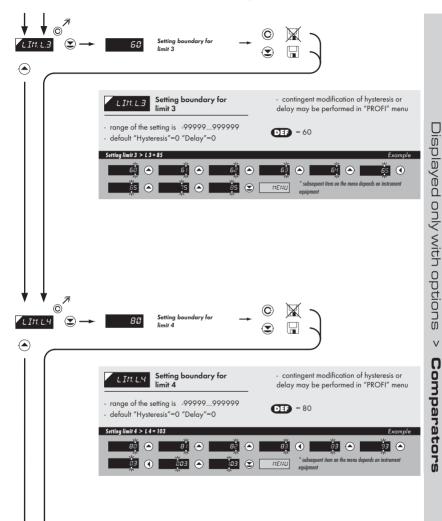


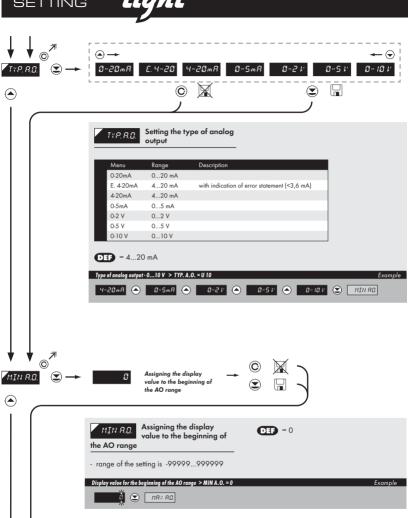



Items for "Limits" and "Analog output" are accessible only if incorporated in the instrument.




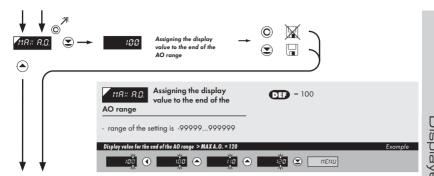

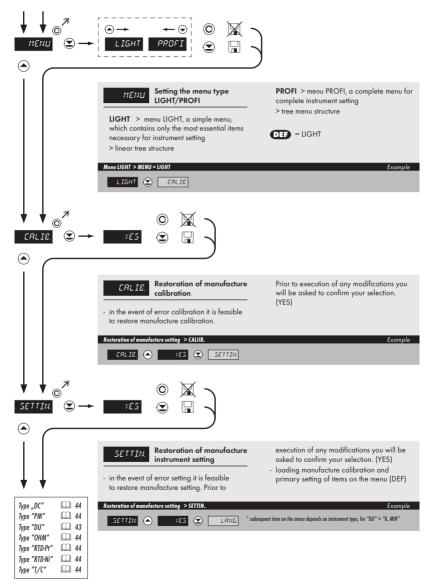

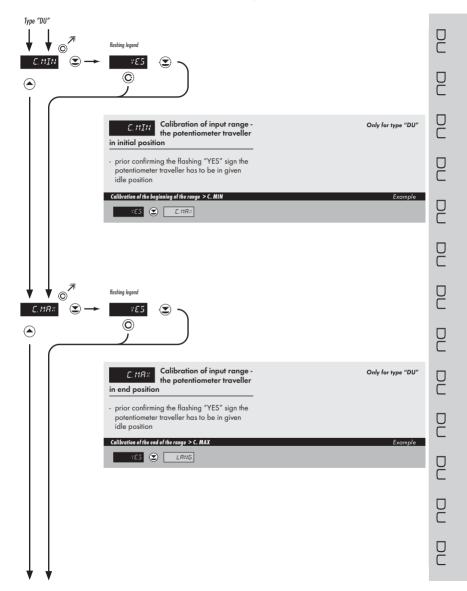

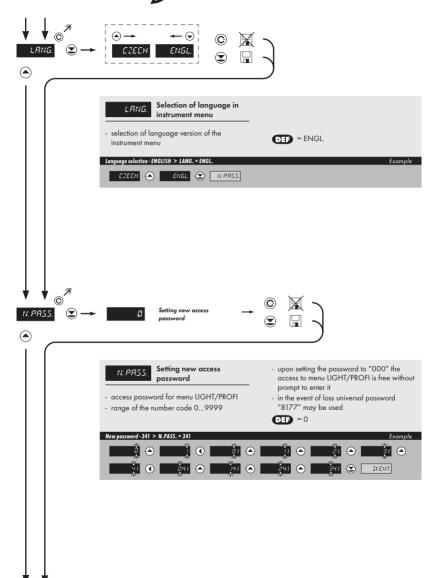

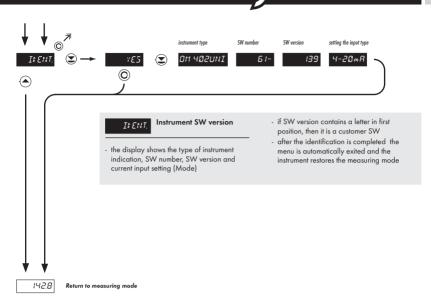



6.0 Setting "PROFI"

PROFI Complete programming menu

- · contains complete instrument menu and is protected by optional number code
- · designed for expert users
- · preset from manufacture is menu LIGHT





- For expert users
- Complete instrument menu
- Access is password protected
- Possibility to arrange items of the "User" menu
- Tree menu structure

Switching over to "PROFI" menu




- temporary switch-over to PROFI menu, which is suitable to edit a few items
- after quitting PROFI menu the instrument automatically switches to LIGHT menu
- access is password protected (if it was not set under item N. PASS. =0)




- · access into LIGHT menu and transition to item "MENU" with subsequent selection of "PROFI" and confirmation
- after re-entering the menu the PROFI type is active
- access is password protected (if it was not set under item N. PASS. =0)

Setting "PROFI" - INPUT

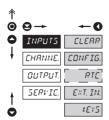

The primary instrument parameters are set in this menu Resetting internal CLERR values Selection of measuring CONFIG range and parameters Setting date and time for RTC option with RTC Setting external inputs EXT. IN. functions Assigning further KEY5 functions to keys on the instrument

6.1.1 Resetting internal values

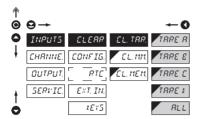

Resetting TARE CL. TRR. Tare resetting - Channel A TRRE R Tare resetting - Channel B TRRE E Tare resetting - Channel C TRRE C Tare resetting - Channel D TRRE : Tare resetting - Channel RLL A, B, C and D Resetting min/max value CL. M.M. - resetting memory for the storage of minimum and maximum value achieved during measurement

- Resetting the instrument CL. MEM. memory
- resetting memory with data measured in the "FAST" or "RTC" modes
- not in standard equipment




6.1.2a Selection of measuring rate


↟					
0	⊖ →			~ 0	
0	INPUTS	ELEAR	RERE//5	40.0	
ŧ	EHRNNE.	CONFIG.	INPUTS	20.0	
	ОИТРИТ.	RTC	IN.MOF.	10.0	
	SERVIC.	EXT. IN.	SUITEH	5.0	DEF
		£275	TIM. 511.	2.0	
			INP. 1	1.0	
			1101 E 2	<i>0.</i> 5	
ŧ			1101 E 3	8.2	
0			1101 E 4	Ø. 1	


RERE/5 Sel	ection of measuring e				
the number of acti evaluation mode '	- measuring rate very significantly affects the number of active inputs "INPUTS" and evaluation mode "IN.MOD." (the factual measuring rates are listed in chapter Technical data)				
4 0.0 40	,0 measurements/s				
20.0	,0 measurements/s				
10.0	,0 measurements/s				
5.0 5,0) measurements/s				
2.0 2,0) measurements/s				
I.Ø 1,0) measurement/s				
0,5	measurements/s				
0,2	2 measurements/s				
Ø. 1 0,1	measurements/s				

Selection of the number of active inputs

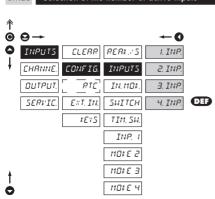


INPUTS Selection of the number of active inputs				
- measuring rate depends on the number of active inputs (the factual measuring rates are listed in chapter Technical data)				
I. INP. Active input 1				
2. INP. Active inputs 1 and 2				
3. INP. Active inputs 1, 2 and 3				
Active inputs 1, 2, 3 and 4				

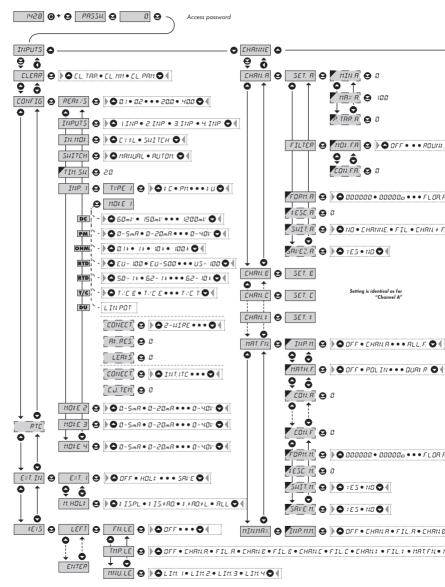

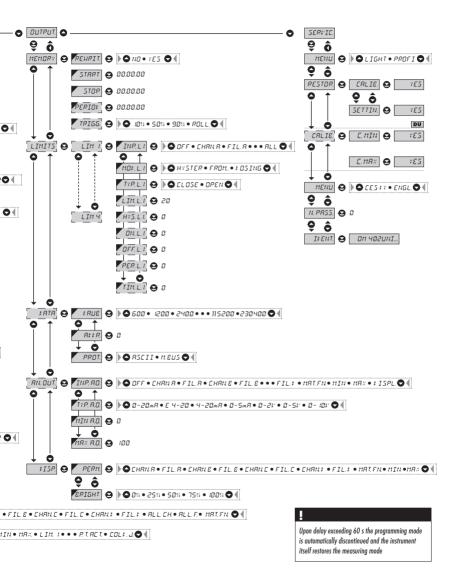

6.1.2c Selection of measuring mode for multichannel instrument

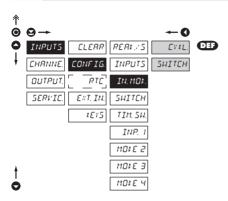

Selection of measuring IN. MO# mode in multichannel instrument

Cyclic measuring on all FYKI channels


- instrument evaluates measured data simultaneously on all channels

- selection of cycle very significantly affects measuring rate and depends also on the number of active inputs (factual measuring rates are listed in the chapter Technical data)

Measuring on selected SWITCH channel

- instrument evaluates measured data only on selected channel

Selection of inputs switching

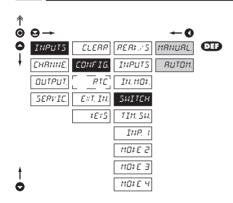

Selection of inputs SWITCH switchina


Manual inputs switching MANUAL.

- inputs switching is controlled by selected key on the front panel or selected external input

Automatic inputs RUTOM. switchina

- inputs switching is automatic in a time period set in "TIM. SW."


6.1.2e Setting the period for inputs switching

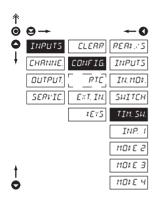

Setting the period for TIM, SH. inputs switching

- setting the time period for projection of channels in automatic mode ode of inputs switching ("AUTOM.")
- range of setting 0,5...99,9 s
- DEF TIM. SW. = 2 s

6.1.2f Selection of "instrument" type for channel A

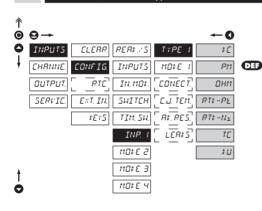

	of "instrument" channel A
- selection of particular ty is bound to relevant dyn	
DC voltn	neter
Process r	monitor
Ohmmet	er
PT:-PE Thermon	neter for Pt xxx
ATI-N2 Thermon	neter for Ni xxxx
TE Thermon pro therr	neter nocouples
Display fi potention	



6.1.2g Selection of measuring range for channel A



111.31. H. RES. PM

111.1 LERES. 0-5mR

110:E 2 0-20mR

110:E 3 4-20mR

0-5 r 0-10 r

0-21

T/C 8

T/E 8

T/E 1

MOREY

T./E t

THE N
THE S
THE S

RTD-Pt ΕU- 100

US-100

EU-500

DEF

Œ

Œ

RTD-Ni 5.0-1k □目

5.0-10 k 5.2-10 k

OHM
100 R

1 k

DU LINPOT, **DEF**

100 k

Selection of instrument measuring range

	Menu	Measuring range
	60 mV	±60 mV
Z	150 mV	±150 mV
	300 mV	±300 mV
	1200mV	±1,2 V

	Menu	Range
	0-5mA	05 mA
	0-20mA	020 mA
ž	4-20mA	420 mA
I =	0-2 V	±2 V
	0-5 V	±5 V
	0-10 V	±10 V
	0-40 V	±40 V

	Menu	Measuring range
_	100 R	0100 Ω
WH0	1 k	01 kΩ
0	10 k	010 kΩ
	100 k	0100 kΩ


	Menu	Measuring range
*	EU-100	Pt 100 (3 850 ppm/°C)
RTD-Pt	EU-500	Pt 500 (3 850 ppm/°C)
₽	EU-1k0	Pt 1000 (3 850 ppm/°C)
	US-100	Pt 100 (3 920 ppm/°C)

	Menu	Measuring range
7	5.0-1k	Ni 1 000 (5 000 ppm/°C)
RTD-Ni	6.2-1k	Ni 1 000 (6 180 ppm/°C)
	5.0-10k	Ni 10 000 (5 000 ppm/°C)
	6.2-10k	Ni 10 000 (6 180 ppm/°C)


	Menu	Type of thermocouple
	T/C B	В
	T/C E	E
	T/C J	J
2,	T/C K	K
1	T/C N	N
	T/C R	R
	T/C S T/C T	S
	T/C T	T


Selection of type of sensor connection for channel A

RTD онм T/C

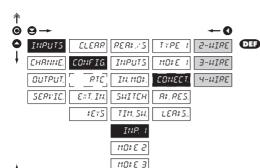

6.1.2h

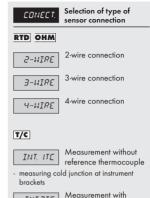

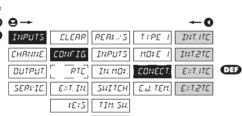

MO18 4

Measurement without EXT.ITE reference thermocouple

- measuring cold junction at instrument brackets with anti-series connected reference thermocouple

reference thermocouple

- the entire measuring set is working under invaried and constant temperature Measurement with EXT.2TC


reference thermocouple - when using compensation box

TNT2TC

Method and procedure of setting the cold junctions is described in separate chapter on page 90



For thermocoule type "B" the items CONECT. and C.J. TEM, are not available

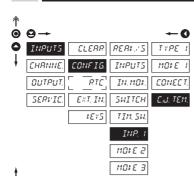


MO18 4

Setting temperature of C.J. TEM. cold junction

- range 0...99°C with compensation box

- DEF = 23°C

6.1.2j Compensation of 2-wire conduct RTD OHM

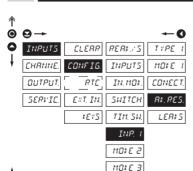


Offset of the beginning RI.RES. of the measuring range

- in cases when it is necessary to offset the beginning of the range by certain value, e.g. while using sensor in measuring head
- entered directly in Ohm (0...9999)
- **DEF** = 0

1101E 4

RTD онм

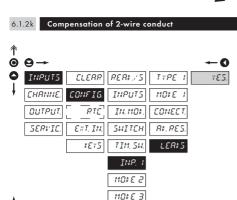


Compensation of LER#S 2-wire conduct

- for measurement accuracy it is necessary to perform compensation of conduct always in case of 2-wire connection
- prior confirmation of the displayed prompt "YES" it is necessary to substitute the sensor at the end of the conduct by a short-circuit
- DEF = 0


Selection of measuring range for channel B

MO18 4

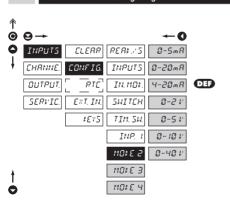

nar	nnel B	
	Menu	Range
	0-5mA	05 mA
	0-20mA	020 mA
Ā	4-20mA	420 mA
4	0-2 V	±2 V
	0-5 V	±5 V
	0-10 V	±10 V
	0-40 V	±40 V
*		
	ing procedure MOD. 4	is identical for MOD. 3

6.1.3 Setting the real time clock

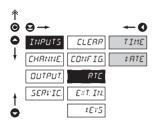

Setting the real time clock (RTC)

Time setting TIME

- format 23.59.59

Date setting 1 RTF

format DD.MM.YY

External input function selection 6.1.4a

↟				
↑ ⊚	⊖→			-0
1	INPUTS	CLERR	E # T. 1	OFF
ŧ	CHRNNE.	CONFIG.	E # T. 2	HOL:
	ОИТРИТ.		E # T. 3	LOCK K.
	SERVIC.	EXT. IN.	M. HOLF	E. PRS 5.
		#E75		TRRE R
				TARE E
				TRRE C
				TARE :
				TARALL
				TRRRCT.
				EL. 1111
				ELR. TR
				ELR. TE
				ELR. TE
				ELR.TJ
				E.T. RLL
				E.T. RE T.
				SUCH, I
				5UCH. 2
A				5 <i>UEH. 3</i>
Ī				STORE
~				

External input function EXT. IN selection

Input is off OFF

Activation of HOLD HOL:

Locking keys on the LOCK K. instrument

Activation of locking 8. PRSS. access into programming

menu LIGHT/PROFI

Tare activation TRRE -

- TARE A, B, C, D, All, Active

Resetting CL. MM min/max value

Tare resetting ELR. -

- TARE A, B, C, D, All, Active

Successive switching of SUCH, I channel projection

BCD switching of SUCH. 2 channel projection -

EXT. 1,2

- for operation see the table

- following this choice the setting for "EXT. 2" is automatically restricted

BCD switching of SNCH. 3 channel projection -


EXT. 1.2. 3

- for operation see the table
- following this choice the setting for EXT.2" and "EXT. 3" is automatically restricted




Table with operation of external inputs

Channel	EXT. 1	EXT. 2	EXT. 3
FIL. A	0	0	
FIL. B	0	1	
FIL. C	1	0	
FIL. D	1	1	
MF	0	0	1
Min	0	1	1
Max	1	0	1
Max	1	1	1

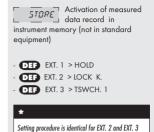

6.1.4b Selection of function "HOLD"

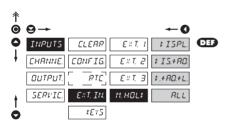


M.HOL‡	Selection of function "HOLD"	
\$15PL.	"HOLD" locks only the value displayed	
\$15.+RO.	"HOLD" locks the value displayed and on AO	
\$.+80.+L.	"HOLD" locks the value displayed, on AO and	
limit evaluation		
RLL	"HOLD" locks the entire instrument	

SETTING



6.1.5a Optional accessory functions of the keys

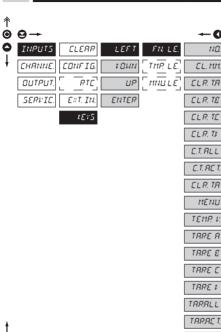

FN.	LE.	Assigning further functions to instrume
kevs		

- "FN. LE." > executive functions
- "TMP. LE." > temporary projection of selected values
- "MNU, LE." > direct access into menu on selected item

Key has no further function
TOTICHOTI

Resettina CL. M.M. min/max value Tare resetting

CIRT-

- TARE A, B, C, D, All, Active

Direct access into menu MENU on selected item

- after confirmation of this selection the "MENU" item is displayed on superior menu level, where required selection is performed

Temporary projection of TEMP V selected values

- after confirmation of this selection the item "TEMPOR." is displayed on superior menu level, whererequired selection is performed

Tare function activation TARE -

- TARE A, B, C, D, All, Active

Successive switching of SUCH, I channel projection

SHER. I

The channel in use is the one permanently displayed

Presett values of the keybuttons DEF: LEFT Channel B, after filtration UP Channel C, after filtration DOWN Channel D, after filtration ENTER Channel switching "SWCH. 1"

Setting is identical for LEFT, DOWN, UP and ENTER

6.1	.5b Opti	onal access	sory function	ons of the k	ceys - Temporo
↑ ⊙ ↓	⊖ →				-0
0	INPUTS	CLEAR	LEFT	FN LE.	NO
ŧ	EHRNNE.	CONFIG.	# Dun	TMP, LE.	EHRN R
	ОИТРИТ.	[_PTC]	UP		FIL.R
	SERVIC.	EXT. IN.	ENTER		CHRN E
		#E75			FIL.E
					CHRN C
					FIL.C
					CHRNI
					FIL.
					MRT, FN
					MIN
					MAx_
					LIMI
					LIMZ
					LIM 3
					In 4
					TIME BRTE
					TRRE R
					TARE E
					TRRE C
					TRRE:
					TRRRET
					P. T. R
					P. T. E
					P. T. E
					P. T. #
+					P. T. RE T.

selected item	TMP, LE.	Temporary projection o selected item
---------------	----------	---

- "Temporary" projection of selected value is displayed for the time of keystroke
- "Temporary" projection may be switched to permanent by pressing @ + "Selected key", this holds until the stroke of any key

NΩ	Temporary projection
110	is off

Temporary projection CHBN of "Channel A, B, C or

D" value

Temporary projection of FIL. -"Channel A, B, C or D" value after processing digital filters

Temporary projection of "Mathematic functions" value

Temporary projection of "Min. value" Temporary projection of

"Max. value" Temporary projection of LIM I "Limit 1" value

Temporary projection of LIM 2 "Limit 2" value

Temporary projection of LIM. 3 "Limit 3" value

Temporary projection of LIM. Y "Limit 4" value

Temporary projection of TIME "TIME" value

Temporary projection of BRTE "DATE" value

Temporary projection of TRRE -"TARE" value

- TARE A, B, C, D, All, Active

Temporary projection of "P. TARE" value


TARE A. B. C. D. Active


Temporary projection of "CIC" value

COL#.J.


Setting is identical for LEFT, DOWN, UP and ENTER

6.1.5c Optional accessory functions of the keys - Direct access to item

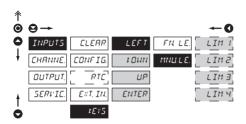

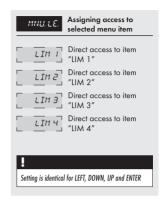

6.2 Setting "PROFI" - CHANNELS

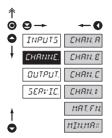

The primary instrument parameters are set in this menu

CHBN B

Setting parameters of measuring "Channel A" Setting parameters of measuring "Channel B"

CHRN. 8 CHRN.C

Setting parameters of measuring "Channel C"

CHRN.

Setting parameters of measuring "Channel D"

MRT, EN.

Setting parameters of mathematic functions

MINMAX max value


DC

Selection of access and evaluation of Min/

PM DU OHM

6.2.1a Display projection

6.2.1b

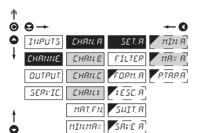

Settina display SET.R projection

MINR

Setting display projection for minimum value of

input signal

- range of the setting is -99999...999999

DEF = 0

MR× R


Setting display projection for maximum value of

input signal

- range of the setting is -99999...999999

- **DEF** = 100

ОНМ DC PM DU

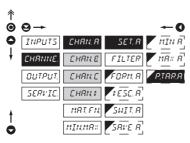


Setting fixed tare

Setting "Fixed tare" P. TRR. R value

- setting is designed for the event when it is necessary to firmly shift the beginning of the range by known size
- when setting (P. TAR. A > 0) display shows "T" symbol
- range of the setting is 0...999999
- **DEF** = 0

6.2.1c Digital filters

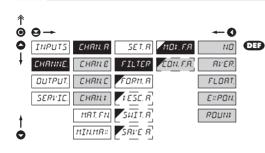

Selection of digital 1101, F.R filters

- at times it is useful for better user projection of data on display to modify it mathematically and properly, wherefore the following filters may be used:

Filters are off NO

Measured data RVER. average

- arithmetic average from given number ("CON.F. A.") of measured values
- range 2...100

Selection of floating filter FLORT.

- floating arithmetic average from given number ("CON.F. A.") of measured data and updates with each measured value
- range 2...30

Selection of exponential EXPON.

- integration filter of first prvního grade with time constant ("CON.F. A.") measurement
- range 2...100

Measured value ROUNE rounding

- is entered by any number, which determines the projection step (e.g: "CON.F. A."=2,5 > display 0, 2.5, 5,...)


CON. F. R. Setting constants

- this menu item is always displayed after selection of particular type of filter

- **DEF** = 2



6.2.1d Projection format - positioning of decimal point

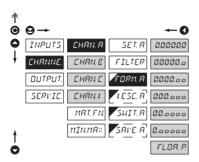

Setting is identical for "Channel B. C and D"

Selection of decimal EORM R point

- the instrument allows for classic projection of a number with positioning of the DP as well as projection with floating DP, allowing to display a number in its most exact form "FLOAT.P."

Setting DP - XXXXXX. 000000

Setting DP - XXXXX.x 00000.0

- DIF > RTD T/C

Setting DP - XXXX.xx 0000.00

- DE > DC PM DU OHM


Setting DP - XXX.xxx 000.000

Setting DP - XX.xxxx 88.0000

Setting DP - X.xxxxx 0.00000

Floating DP ELOR.P.

Projection of description - the measuring units

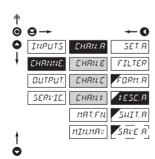


Setting is identical for "Channel B, C and D"

Setting projection of descript. for "Channel A"

- projection of mesured data may be extended (at the expense of the number of displayed places) by two characters for description
- description is set by shifted ASCII code, when two first places show the set description and two last characters their code in period 0...95
- description is cancelled by code 00
- RTD T/C DEF = °C
- DC PM DU OHM DEF =none

Table of signs on page 93

6.2.1f Selection of channel projection upon swithing

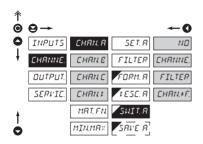

Setting is identical for "Channel B, C and D"

Selection of channel SUIT, R projection upon switchina - setting in this item enables the user to select individual measuring channels which will be displayed upon switching the channel functions "SWIT. A"


> Projection restricted МΠ "Channel A" will be

CHRNNE. displayed "Channel A" after

FILTER modification by digital filter

Will be displayed CHRN. + F. "Channel A" and subsequently also "Channel A" after modification by digital filter A

Selection of storing data into instrument memory

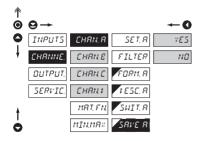



Selection of storing data into instrument memory - by selection in this item you allow to register values into instrument memory - another setting in item "OUTPUT. > MEMORY" (not in standard experiment)


YE5


stored in the memory Measured data are not МΠ stored

Measured data are


6.2.2a

Mathematic functions - input selection

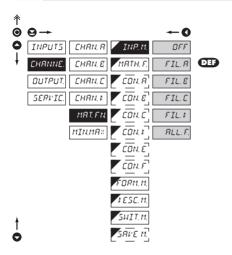

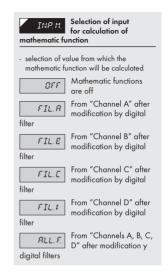

6.2.2b Mathematic functions

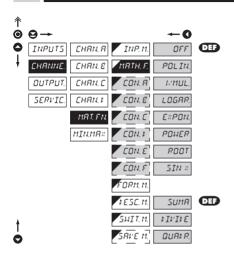

Selection of mathematic MRTH E functions

On selecting "FIL. - " in item"INP. M."

Mathematic functions are off

Polynome POLIN

 $Ax^5 + Bx^4 + Cx^3 + Dx^2 + Ex + F$

1/xI/MUL В C

Logarithm LOGAR

 $A \times \ln \left(\frac{Bx}{-} + C \right)$

Exponential EXPON.

 $A \times e^{\left(\frac{Bx+C}{Dx+E}\right)} + F$

Power PONER

 $A \times (Bx + C)^{(Dx+E)} + F$

ROOT Bx + C

Sin x SIN X $A \sin^5 x + B \sin^4 x + C \sin^3 x + D \sin^2 x$

 $+ E \sin x + F$

On selecting "ALL. F." in item "INP. M."

Sum of the values from SUMB channels (inputs)

 $(A \times KA + B \times KB + C \times KC + D \times KD) \times E + F$

Quotient of values from BILLI channels (inputs)

 $(A \times KA + C \times KC) / (B \times KB + D \times KD) \times E + F$

Square of values from OURIR. channels (inputs)


 $(A \times KA^2 + B \times KB^2 + C \times KC^2 + D \times KD^2)$ x E + F

Setting constants for calculation of mat.

functions

- this menu is displayed only after selection of given mathematic function

Mathematic functions - decimal point

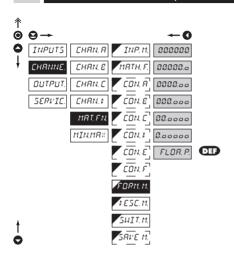

Selection of decimal FORM M point

- the instrument allows for classic projection of a number with positioning of the DP as well as projection with floating DP, allowing to display a number in its most exact form "FLOA.P."

Setting DP - XXXXXX. 000000

Setting DP - XXXXX.x 00000.0

Setting DP - XXXX.xx 0000.00

Setting DP - XXX.xxx 000,000


Setting DP - XX.xxxx 00.0000

Setting DP - X.xxxxx 0.00000

Floating DP FLOR.P.

- **O**EF

6.2.2d Mathematic functions - measuring units

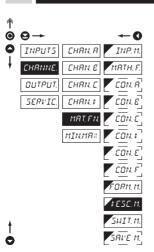


ESC. M.


Setting projection of description for "MAT.FN"

- projection of mesured data may be extended (at the expense of the number of displayed places) by two characters for description
- description is set by shifted ASCII code, when two first places show the set description and two last characters their code in period 0...95
- description is cancelled by code 00
- DIF = no description


Table of signs on page 93


6.2.2e Mathematic functions - selection of channel projection upon switching

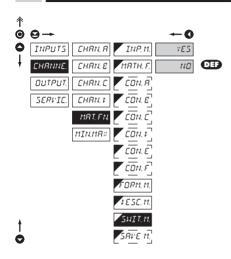

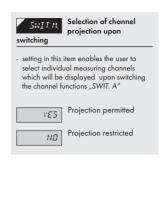


6.2.2f Mathematic functions - selection of storing data into instrument memory

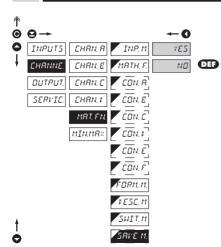

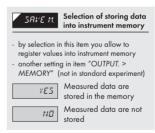


Selection of evaluation of min/max value

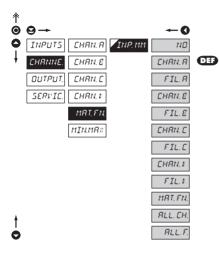


INPUTS	Selection of evaluation of min/max value	
selection of value from which the min/ max value will be calculated		
NO NO	Evaluation of min/max value is off	
CHRN, R	From "Channel A"	
FIL. A	From "Channel A" after digital filters processing	
CHRN. E	From "Channel B"	
FIL. E	From "Channel B" after digital filters processing	
СНЯМ. С	From "Channel C"	
FIL. C	From "Channel C" after digital filters processing	
CHRN.1	From "Channel D"	
FIL.#	From "Channel D" after digital filters processing	
MRT, FN.	From "Mathematic functions"	
RLL. CH.	From "Channel A, B, C and D"	
ALL.F.	From "Channel A, B, C and D" after digital filters	
processing		


Setting "PROFI" - OUTPUTS 6.3

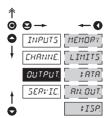

In this menu it is possible to set parame ters of the instrument output signals MEMORY Setting data logging into memory LIMITS Setting type and parameters of limits Setting type and parameters of data output Setting type and AN, OUT. parameters of analog output Setting display projection £158. and brightness

Selection of mode of data logging into instrument memory

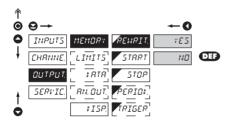

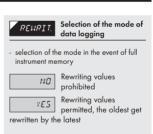

6.3.1b Setting data logging into instrument memory - RTC

↟		
⊚	⊖→	←0
0	INPUTS MEMORY	REURIT.
ŧ	CHRNNE. LIMITS	STRRT
	OUTPUT. #RTR	
ŧ	SERVIC. RN. DUT	PERIO.
6	1158	?.

STRRT

Start of data logging into instrument memory

- time format HH.MM.SS

STOP

Stop data logging into instrument memory


time format HH.MM.SS


PERIO:

Period of data logging into instrument memory

- determines the period in which values will be logged in an interval delimited by the time set under items START and STOP
- time data hold valid for one day, where the logging is valid for every day without limitation
- time format HH.MM.SS
- item not displayed if "STORE" is selected in menu (Input > AUX. IN.)

6.3.1c Setting data logging into instrument memory - FAST

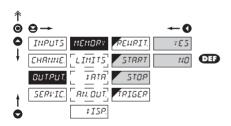

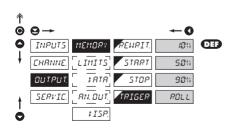

STRRT

Start of data logging into instrument memory

STOP

Stop data logging into instrument memory

time format HH.MM.SS

TRIGER

Setting logging data into inst. memory

- values will be logged in an interval delimited by the time set under items START and STOP, time data hold valid for one day, where the logging is valid for every day without limitation
- logging data into inst. memory is governed by the folowing selection, which determines how many percent of the memory is reserved for data logging prior to initiation of trigger impulse
- initiation is on ext. input or control key

Reser. of 10 % memory prior init. of data logging

Reser. of 50 % memory


prior init. of data logging


Reser. of 90 % memory
prior init. of data logging

ROLL After initiation of data logging the memory is


cycclically transcribed

6.3.2a Selection of input for limits evaluation

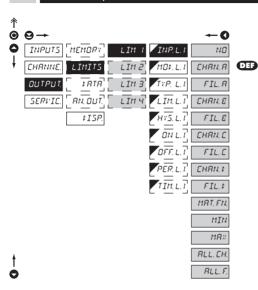

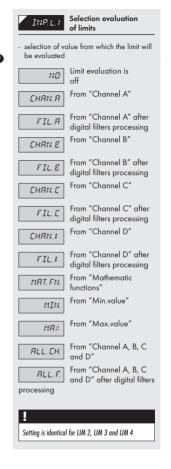

6.3.2b Selection of type of limit

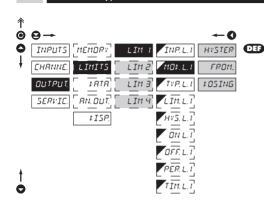

Selection the type of limit 1101.L.I

Limit is in mode "Limit, HYSTER hysteresis, delay"

- for this mode the parameters of "LIM. L." are set, at which the limit will shall react, "HYS. L." the hysteresis range around the limit (LIM ±1/2 HYS) and time "TIM. L." determining the delay of relay switch-on


> Frame limit FROM.

- for this mode the parameters are set for interval "ON. L." the relay switch-on and "OFF. L." the relay switch-off


Dosing limit #05ING (periodic)

- for this mode the parameters are set for "PER. L." determining the limit value as well as its multiples at which the output is active and "TIM. L." indicating the time during which is the output active

Setting is identical for LIM 2, LIM 3 and LIM 4

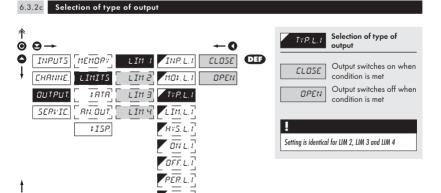

6.3.2d Setting values for limits evaluation

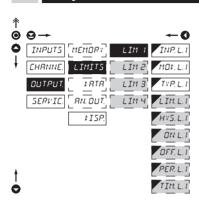

Setting is identical for LIM 2, LIM 3 and LIM 4

Setting limit for switch-on LIMLI

- for type "HYSTER"

Setting hysteresis HY5. L. I

- for type "HYSTER"

- indicates the range around the limit (in both directions, LIM. ±1/2 HYS.)

Setting the outset of the 0N.L.I interval of limit switch-on

- for type "FROM.."

Setting the end of the DEE.L.I interval of limit switch-on

- for type "FROM.."


Setting the period of limit PER.L.I switch-on

- for type "DOSING"

Setting the time switch-on TIM.L.I of the limit

- for type "HYSTER" and "DOSING"

6.3.3a Selection of data output baud rate

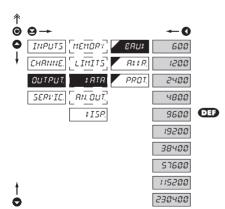

ERU:	Selection of data outpu baud rate
500	Rate - 600 Baud
	Rate - 1 200 Baud
1200	
	Rate - 2 400 Baud
2400	
	Rate - 4 800 Baud
4800	
0500	Rate - 9 600 Baud
9600	
(0.200	Rate - 19 200 Baud
19200	
38400	Rate - 38 400 Baud
58400	
57500	Rate - 57 600 Baud
ן ששטו כ	


115200

230400

Rate - 115 200 Baud


Rate - 230 400 Baud


6.3.3b Setting instrument address

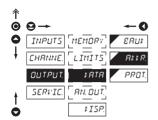





6.3.3c Selection of data output protocol

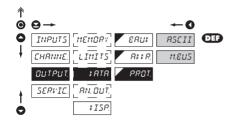


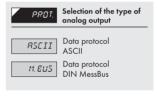

6.3.4a Selection of input for analog output

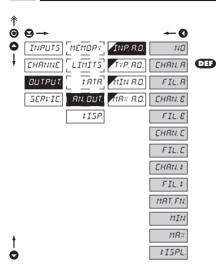


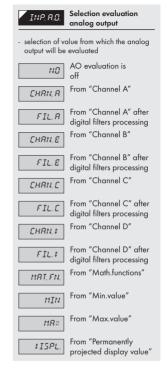

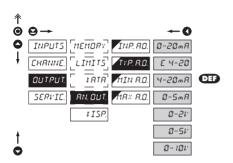

Selection of the type of analog output
3-23 Type - 020 mA
<i>ξ ч-20</i> Type - 420 mA
- with indication of error statement (< 3,0 mA)
Ч-28mR Туре - 420 mA
0-5 mA Type - 05 mA
<i>Ø-21</i> ∕ Type - 02 V
0 -5 <i>ν</i> Type - 05 V
<i>ช− เธเ</i> Туре - 010 V

Setting the analog output range

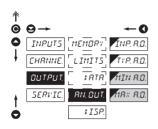

AN, OUT,

Setting the analog output range

- analog output is isolated and its value corresponds with displayed data. It is fully programmable, i.e. it allows to assign the AO limit points to two arbitrary points of the entire measuring range

MIN 8.0.

Assigning the display value to the beginning of

the AO range - range of the setting is -99999...999999

- **DEF** = 0


MR× 8.0.

Assigning the display value to the end of the

AO range

- range of the setting is -99999...999999
- DEF = 100

6.3.5a Selection of input for display projection

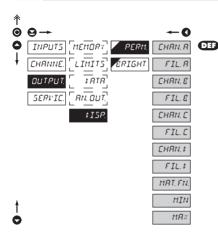

Selection display projection

 selection of value which will be shown on the instrument display

THBN 8 From "Channel A"

FIL. R From "Channel A" after digital filters processing

From "Channel B"

FIL. E From "Channel B" after digital filters processing

CHBN C From "Channel C"

FIL. E From "Channel C" after digital filters processing

CHRN.: From "Channel D"


FIL.* From "Channel D" after digital filters processing

MRT. FN. From "Math.functions"

mīn From "Min.value"

TIR:: From "Max.value"

6.3.5b Selection of display brightness

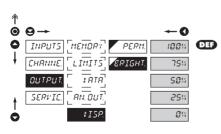

Selection of display brightness

 by selecting display brightness we may appropriately react to light conditions in place of instrument location

Display is off

- after keystroke display turns on for 10 s


Display brightness - 25%

Display brightness - 50%

75" Display brightness - 75%


Display brightness - 100%

6.4 Setting "PROFI" - SERVIS

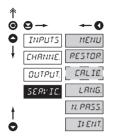

The instrument service functions are set in this menu Selection of menu type MENU LIGHT/PROFI Restore instrument RESTOR manufacture setting and calibration Input range calibration CRLIE for "DU" version Language version of LANG. instrument menu Setting new access N. PRSS. password Instrument identification IDENT.

Selection of type of programming menu 6.4.1

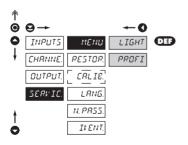

Change of setting is valid upon next access into menu

Selection of menu type -MENII LIGHT/PROFI

- enables setting the menu complexity according to user needs and skills


Active LIGHT menu LIGHT

- simple programming menu, contains only items necessary for configuration and instrument setting
- linear menu > items one after another

Active PROFI menu PROFI

- complete programming menu for expert users
- tree menu

6.4.2 Restoration of manufacture setting

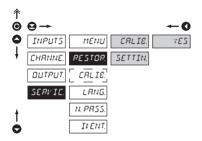

Restoring manufacture RESTOR. setting of the instrument


- in the event of erroneous setting or calibration it is feasible to restore manufacture setting. Prior execution of any changes you will be asked to confirm your preference "YES"

ERLIE.	Restore manufacture instrument calibratio
SETTIN.	Restore manufacture instrument setting

- loading manufacture setting (items denoted DEF)
- prior execution of changes you will be asked to confirm your preference "YES"

laha manfanna d	Rest	ore
Jobs performed	Calibration	Setting
cancels USER menu rights	✓	✓
deletes table of items order in USER - LIGHT menu	✓	✓
adds items from manufcture to LIGHT menu	✓	✓
deletes data stored in FLASH	✓	✓
cancels or linearization tables	✓	✓
clears tare	✓	✓
clears conduct resistances	✓	✓
restore manufacture calibration	✓	×
restore manufacture setting	×	✓

6.4.3 Calibration - Input range

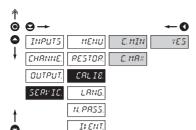


ERLIE. Input range

 when "C. MIN" is displayed, move the potentiometer traveller to the required minimum position and confirm by "Enter", calibration is confirmed by "YES"

DU

 when "C. MAX" is displayed, move the potentiometer traveller to required maximum position and confirm by "Enter", calibration is confirmed by "YES"


6.4.4 Selection of instrument menu language version

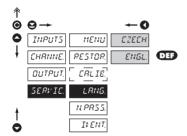

LRHG. Selection of instrument menu language version LZECH Instrument menu is in Czech ENGL. Instrument menu is in

English


6.4.5 Setting new access password

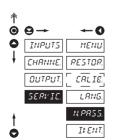

H. PR55. Setting new password for access to LIGHT and PROFI menu

- this selection enables changing number code that blocks the access into LIGHT and PROFI Menu.
- range of the number code is 0...9999
- universal password in the event of loss is "8177"

Instrument identification

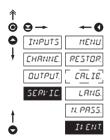

Projection of instrument IFENT. SW version

- display shows type identification of the instrument, SW number, SW version and current input setting (Mode)
- if the SW version reads a letter on first position, it is a customer SW

7.0 Setting items into "USER" menu

- USER menu is designed for users who need to change only several items of the setting without the option to change the primary instrument setting (e.g. repeated change of limit setting)
- · there are no items from manufacture permitted in USER menu
- on items indicated by inverse triangle
- setting may be performed in LIGHT or PROFI menu, with the USER menu then overtaking the given menu structure



- For user operation
- Menu items are set by the user (Profi/Light) as per request
- · Access is not password protected

Setting





NO VES

item will not be displayed in USER menu

7E5 5HOU

item will be displayed in USER menu with editing option

item will be solely displayed in USER menu

Setting sequence of items in "USER" menu

In compiling USER menu from active LIGHT menu the items (max. 10) may be assigned a sequence, in which they will be projected in the menu



Example:

Into USER menu were selected these items

(keys ⊇ + △) > CL. TAR., LIM 1, LIM 2, LIM 3, for which we have preset this sequence (keys ⊇ + □):


CL TAR

LIM 1 O (sequence not determined)

LIM₂ 2 LIM 3 1

Upon entering USER menu

Instrument with input for temperature measurement with thermocouple allows to set two types of measurement of cold junction.

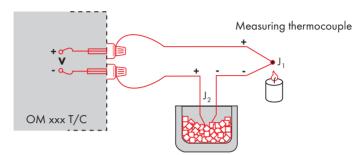

Reference thermocouple

WITH REFERENCE THERMOCOUPLE

- a reference thermocouple may be located in the same place as the measuring instrument or in place with stable temperature/compensation box
- when measuring with reference thermocouple set EDNEE I, in the instrument menu to INTLATE or EXILATE
- when using a thermostat (a compensation box or environment with constant temperature) set in the instrument menu EJETEM, its temperature (applies for setting EDNEET, to EXTETE)
- if the reference thermocouple is located in the same environment as the measuring instrument then set in the instrument menu CONEC T, to INTETE. Based on this selection the measurement of the ambient temperature is performed by a sensor located in the instrument terminal board.

WITHOUT REFERENCE THERMOCOUPLE

- inaccuracy originating from the creation of dissimilar thermocouples on the transition point terminal/conductor of the thermocouple is not compensated for in the instrument
- when measuring without reference thermocouple set EDNEET, in the instrument menu to INT. ITE or EXTITE
- when measuring temperature without reference thermocouple the error in measured data may be as much as 10°C (applies for setting EDNEE T. to E # T. ITE)

The instruments communicate via serial line RS232 or RS485. For communication they use the ASCII protocol. Communication runs in the following format:

ASCII: 8 bit, no parity, one stop bit DIN MessBus: 7 bit, even parity, one stop bit

The transfer rate is adjustable in the instrument menu. The instrument address is set in the instrument menu in the range of $0 \div 31$. The manufacture setting always presets the ASCII protocol, rate of 9600 Baud, address 00. The type of line used - RS232 / RS485 - is determined by an output board automatically identified by the instrument. The commands are described in specification you can find at **www.orbit.merret.cz/rs**.

DETAILED DESCRIPTION OF COMMUNICATION VIA SERIAL LINE

Activity	Data ti	ransferr	ed								
Data solicitation (PC)	#	Α	Α	<cr></cr>							
Data transmission (Instrument)	>	R	<sp></sp>	D	D	D	D	D	(D)	(D)	<cr></cr>
Command confirm. (Instr.) - OK	!	Α	Α	<cr></cr>							
Command confirm. (Instr.) - Bad	ś	Α	Α	<cr></cr>							
Instrument identification	#	Α	Α	1Y	<cr></cr>						
HW identification	#	Α	Α	1Z	<cr></cr>						
One-time measurement	#	Α	Α	7X	<cr></cr>						
Repeated measurement	#	Α	Α	8X	<cr></cr>						

LEGEND

4	#	35	23 _H	Command beginning
Α	А	0	.31	Two signs of instrument address (sent in ASCII - tens and ones, e.g. "01", "99" universal
<c< td=""><td>R></td><td>13</td><td>OD_H</td><td>Carriage return</td></c<>	R>	13	OD _H	Carriage return
<\$	P>	32	20 _H	Space
[)			Data - usually signs "O""9", "-", "."; (D) - DP. and (-) may prolong data
	R	50 _H .	57 _H	Relay and Tare status
	!	33	21 _H	Positive command confirmation (ok)
;	Ş	63	3F _H	Negative command confirmation (bad)
	>	62	3E.,	Beginning of the data transmitted

RELAY, TARE

Sign	Relay 1	Relay 2	Tare	Change relay 3/4
Р	0	0	0	0
Q	1	0	0	0
R	0	1	0	0
S	1	1	0	0
T	0	0	1	0
U	1	0	1	0
٧	0	1	1	0
W	1	1	1	0
р	0	0	0	1
q	1	0	0	1
r	0	1	0	1
S	1	1	0	1
t	0	0	1	1
U	1	0	1	1
٧	0	1	1	1
w	1	1	1	1

ERROR	CAUSE	ELIMINATION
E. I. U a	Number is too small (large negative) to be displayed	change DP setting, channel constant setting
E. F. Or.	Number is too large to be displayed	change DP setting, channel constant setting
E. T. U a	Number is outside the table range	increase table values, change input setting (channel constant setting)
E. T. □r.	Number is outside the table range	increase table values, change input setting (channel constant setting)
E. I. U a	Input quantity is smaller than permitted input quantity range	change input signal value or input (range) setting
E. I. O	Input quantity is larger than permitted input quantity range	change input signal value or input (range) setting
Е. НИ	A part of the instrument does not work properly	send the instrument for repair
ε. εε	Data in EEPROM corrupted	perform restoration of manufacture setting, upon repeated error statement send instru- ment for repair
E. ; ATA	Data in EEPROM outside the range	perform restoration of manufacture setting, upon repeated error statement send instru- ment for repair
E. ELR.	Memory was empty (presetting carried out)	upon repeated error statement send instru- ment for repair, possible failure in calibration

The instrument allows to add two descriptive characters to the classic numeric formats (at the expense of the number of displayed places). The setting is performed by means of a shifted ASCII code. Upon modification the first two places display the entered characters and the last two places the code of the relevant symbol from 0 to 95. Numeric value of given character equals the sum of the numbers on both axes of the table.

Description is cancelled by entering characters with code 00

	0	1	2	3	4	5	6	7		0	1	2	3	4	5	6	7
О		7	"	Ħ	5	14	<u>ā</u>	,	0		ļ.	"	#	\$	%	&	1
8	(;	*	+	,	••		,'	8	()	*	+	,	-		/
16	0	1	2	3	ч	5	8	7	16	0	1	2	3	4	5	6	7
24	8	9	17	//	1)		7.	24	8	9	:	;	<	=	>	Ś
32	e	R	Ε	Ε	£	Ε	F	5	32	@	Α	В	С	D	Е	F	G
40	Н	I	J	ľ	L	11	N	0	40	Н	1	J	Κ	L	M	Ν	0
48	ρ	G	R	5	T	U	<i>l</i> , '	1.1	48	Р	Q	R	S	T	U	٧	W
56	Х	Y	7	Ε	1,	J	О	-	56	Χ	Υ	Z	[\]	^	_
64	٠	a	Ь	c	d	<u>«</u>	F	5	64	`	а	b	С	d	е	f	g
72	h	1	J	k	1	m	n	٥	72	h	i	į	k	-	m	n	0
80	ρ	G	r	ı	٤	u	V	*4	80	р	q	r	s	t	U	٧	w
88	Ж	Y	L	-(1	}-	О		88	х	У	z	{		}	~	

INPUT - CHANNE	Ι Δ			INPUT - CHANNEL	c		
range is adjustbale			DC	range is adjustbale			PM
runge is unjusibule	±60 mV	>100 MOhm	Input U	runge is aujusibale	0/420 mA	< 400 mV	Input I
	±150 mV	>100 MOhm	Input U		±2 V	1 MOhm	Input U
	±300 mV	>100 MOhm	Input U		±5 V	1 MOhm	Input U
	±1200 mV	>100 MOhm	Input U		±10 V	1 MOhm	Input U
	-1200 IIIV	- 100 MOIIII	пірог о		±40 V	1 MOhm	Input U
range is adjustbale			PM	INPUT - CHANNEL	D		
	0/420 mA	< 400 mV	Input I	range is adjustbale			PM
	±2 V	1 MOhm	Input U	runge is uulusinuie	0/420 mA	< 400 mV	Input I
	±5 V	1 MOhm	Input U		10/420 IIIA ±2 V	1 MOhm	Input U
	±10 V	1 MOhm	Input U		±2 V ±5 V	1 MOhm	Input U
	±40 V	1 MOhm	Input U		±10 V	1 MOhm	Input U
					±40 V	1 MOhm	Input U
range is adjustbale	0100 Ohm		ОНМ		-101	ı monnı	inpor o
	01 k0hm			PROJECTION			
	010 kOhm			Display:	999999, intensive	red or areen	
	0100 k0hm			., .,		digit height 14 mr	n
Connection:	2, 3 or 4 wire			Projection:	±9999 (-99999		
Comocnom	2,00			Decimal point:	adjustable - in me		
			RTD	Brightness:	adjustbale - in me		
Pt xxxx	-200°850°C			·	·		
Ni xxxx	-30,0°199,9°C			INSTRUMENT ACC	URACY		
Type Pt:		hm, s 3850 ppm/°C		TC:	100 ppm/°C		
	100 Ohm, s 3920 p			Accuracy:	±0,1 % of range +	1 digit	
Type Ni:	,	0 s 5000/6180 ppm/	/°(,	±0,15 % of range	+ 1 digit	RTD, T/C
Connection:	2, 3 or 4 wire				±0,3% of range +	1 digit	PWR
					Above accuracies	s apply for projec	tion 9999
	in configuration menu		T/C	Resolution:	0,01°/0,1°/1°		RTD
Туре:	J (Fe-CuNi)	-200°900°C		Rate:	0,140 measuren	nents/s. see table	
	K (NiCr-Ni)	-200°1 300°C		Overload capacity:		not for 400 V and	5 A.
	T (Cv-CvNi)	-200°400°C		. ,	2x (long-term)		•
	E (NiCr-CuNi)	-200°690°C		Linearisation:	by linear interpola	tion in 50 points	
	B (PtRh30-PtRh6)	300°1 820°C			- solely via OM Lin	k .	
	S (PtRh10-Pt)	-50°1 760°C		Digital filters:	Averaging, Floati	ng average, Exp	onential filter,
	R (Pt13Rh-Pt)	-50°1 740°C		·	Rounding		
	N (Omegalloy)	-200°1 300°C		Comp. of conduct:	max. 40 Ohm/100	0 Ohm	RTD
				Comp. of cold junct.:			T/C
who the c	0.5110.5//		DU		0°99°C or autor		
Voltage of lin. pot.	2,5 VDC/6 mA			Functions:	Tare - display rese		
					Hold - stop measu	• • •	
	min. potentiometer	resistance is 500 Ohn	n		Lock - control key	•	
INPUT - CHANNE	I D				MM - min/max va		
	LD				Mathematic function		
range is adjustbale	0/4 00 4	. 100 . 1/	PM	OM Link:		ication interface for	r setting, opera-
	0/420 mA	< 400 mV	Input I	w.l.l	tion and update of		
	±2 V	1 MOhm	Input U	Watch-dog:	reset after 400 ms		
	±5 V	1 MOhm	Input U	Calibration:	at 25°C and 40 %	OT r.n.	
	±10 V	1 MOhm	Input U				
	±40 V	1 MOhm	Input U				

COMPARATOR

digital, adjustable in menu Tyne: Mode. Hysteresis, From, Dose -99999 999999 Limita: Hysteresis: 0 999999 Delay. 0 9995

2x relays with switch-on contact (Form A) Outnuts:

(230 VAC/30 VDC. 3 A)*

2x relays with switch-off contact (Form C)

(230 VAC/50 VDC, 3 A)*

Relay: 1/8 HP 277 VAC. 1/10 HP 125 V. Pilot Duty D300

DATA OUTPUTS

Protocols. ASCII. DIN MessBus

Data format: 8 bit + no parity + 1 stop bit (ASCII) 7 bit + even parity + 1 stop bit (MessBus)

Rate: 600...230 400 Baud

RS 232isolated, two-way communication RS 485: isolated, two-way communication,

addressing (max. 31 instruments)

PROFIRIIS Data protocol SIEMENS

ANALOGO OUTPUTS

isolated, programmable with resolution of Type: max.10 000 points, analog output corresponds with

displayed data, type and range are adjustable

Non-linearity: 0,2% of range TC. 100 ppm/°C

response to change of value < 40 ms Rate:

Voltage: 0...2 V/5 V/10 V Curernt: 0...5/20 mA/4...20 mA

- compensation of conduct to 500 Ohm

MEASURED DATA RECORD

Type RTC: time-controlled logging of measured data into

instrument memory, allows to log up to 250 000

Type FAST: fast data logging into instrument memory, allows to log up to 8 000 values at a rate of 40 records/s

Transmission. via data output RS 232/485 or via OM Link

EXCITATION

Adiustbale: 5...24 VDC/max, 1.2 W. isolated

POWER SUPPLY

Ontions: 10...30 V AC/DC. 10 VA. isolated.

> - fuse inside (T 4000 mA) 80...250 V AC/DC. 10 VA. isolated

- fuse inside (T 630 mA)

MECHANIC PROPERTIES

Material: Noryl GFN2 SE1, incombustible UL 94 V-I

Dimensions: 96 x 48 x 120 mm Panel cut-out: 90 5 x 45 mm

OPERATING CONDITIONS

Connection: connector terminal hoard

conductor cross-section <1,5 mm² /<2,5 mm²

Stabilisation period: within 15 minutes after switch-on

Working temp.: 0°...60°C Storage temp.: -10° 85°C

IP65 (front panel only) Cover: Construction: safety class I

Overvoltage category: EN 61010-1, A2

Insulation resistance: for pollution degree II, measurement category III

AC instrum.power supply > 670 V (PI), 300 V (DI) DC instrum.power supply > 300 V (PI), 150 V (DI)

Input/output > 300 V (PI), 150 (DI)

FMC. EN 61000-3-2+A12: EN 61000-4-2, 3, 4, 5, 8, 11:

EN 550222, A1, A2

Table of mesuring rate depending on the number of inputs

Channels/Rate	40	20	10	5	2	1	0,5	0,2	0,1
Qty. of channels: 1 (Type: DC, PM, DU)	40,00	20,00	10,00	5,00	2,00	1,00	0,50	0,20	0,10
Qty. of channels: 2	5,00	2,50	1,25	1,00	0,62	0,38	0,22	0,09	0,05
Qty. of channels: 3	3,33	1,66	0,83	0,66	0,42	0,26	0,14	0,06	0,03
Qty. of channels: 4	2,50	1,25	0,62	0,50	0,31	0,19	0,11	0,05	0,02
Qty. of channels: 1 (Type: OHM, RTD, T/C)	5,00	2,50	1,25	1,00	0,62	0,38	0,22	0,09	0,05
Qty. of channels: 2	3,33	1,066	0,83	0,66	0,42	0,26	0,14	0,06	0,03
Qty. of channels: 3	2,50	1,25	0,62	0,50	0,31	0,19	0,11	0,05	0,02
Qty. of channels: 4	2,00	1,00	0,50	0,40	0,25	0,15	0,08	0,04	0,02


Front view



Panel cut




Side view

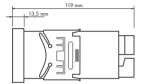


Panel thickness: 0.5...20 mm

Instrument installation

- 1. insert the instrument into the panel cut-out
- 2. fit both travellers on the box
- 3. press the travellers close to the panel

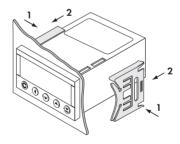

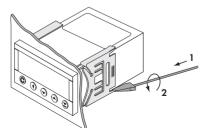

Instrument disassembly

- 1. slide a screw driver under the traveller wing
- 2. turn the screw driver and remove the traveller
- 3. take the instrument out of the panel

Product	OM 402UNI	Е
Гуре		
Manufacturing No.		
Date of sale		

A guarantee period of 24 months from the date of sale to the user applies to this instrument.


Defects occuring during this period due to manufacture error or due to material faults shall be eliminated free of charge.

For quality, function and construction of the instrument the guarantee shall apply provided that the instrument was connected and used in compliance with the instructions for use.

The guarantee shall not apply to defects caused by:

- mechanic damage
- transportation
- intervention of unqualified person incl. the user
- unavoidable event
- other unprofessional interventions

The manufacturer performs guarantee and post guarantee repairs unless provided for otherwise.

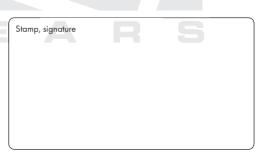

DECLARATION OF CONFORMITY

Company: ORBIT MERRET, spol. s r.o.

Klánova 81/141, 142 00 Prague 4, Czech Republic, IDNo: 00551309

Manufactured: ORBIT MERRET, spol. s r.o.

Vodňanská 675/30, 198 00 Prague 9, Czech Republic

declares at its full responsibility that the product presented hereunder meets all technical requirements, is safe for use when utilised under the terms and conditions determined by ORBIT MERRET, spol.s.r.o. and that our company has taken all measures to ensure conformity of all products of the type listed hereunder, which are being brought out to the market, with technical documentation and requirements of the appurtenant statutory orders.

Product: 4-digit programmable panel instrument

Type: OM 402

Version: UNI. PWR

Conformity is assessed pursuant to the following standards:

El. safety: EN 61010-1

EMC: EN 50131-1, chapter 14 and chapter 15

EN 50130-4, chapter 7
EN 50130-4, chapter 8
EN 50130-4, chapter 9
EN 50130-4, chapter 10
EN 50130-4, chapter 11
EN 50130-4, chapter 12
EN 50130-4, chapter 12
EN 50130-4. chapter 13
EN 61000-4-5
EN 61000-4-5
EN 61000-4-5

EN 50130-5, chapter 20 prEN 50131-2-1, par. 9.3.1

EN 61000-4-8

EN 61000-3-2 ed. 2:2001

EN 61000-3-3: 1997, Cor. 1:1998, Z1:2002

EN 55022, chapter 5 and chapter 6

and Ordinance on:

El. safety: No. 168/1997 Coll. EMC: No. 169/1997 Coll.

<u>The evidence are the protocols of authorized and accredited organizations:</u> VTÚE Praha, experimental laboratory No. 1158, accredited by ČIA

VTÚPV Vyškov, experimental laboratory No. 1103, accredited by ČIA

Place and date of issue: Prague, 18. March 2006 Miroslav Hackl v.r.

Company representative

Mode of asses. of conformity §12, par. 4 b, d Act No. 22/1997 Coll.