



OM 402UNI - B

4 DIGIT PROGRAMMABLE UNIVERSAL 4-CHANNEL INSTRUMENT

DC VOLTMETER/AMMETER

PROCESS MONITOR


OHMMETER

THERMOMETER FOR PT 100/500/1 000

THERMOMETER FOR NI 1 000

THERMOMETER FOR THERMOCOUPLES

DISPLAYS FOR LIN. POTENTIOMETERS

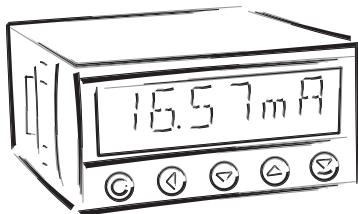



SAFETY INSTRUCTIONS

Please, read the enclosed safety instructions carefully and observe them!
These instruments should be safeguarded by isolated or common fuses (breakers)
For safety information the EN 61 010-1 + A2 standard must be observed.
This instrument is not explosion-safe!

TECHNICAL DATA

Measuring instruments of the DM 402 series conform to the European regulation 89/336/EWG.

The instruments are up to the following European standards:

EN 61010-1 Electrical safety

EN 61326-1 Electronic measuring, control and laboratory devices – Requirements for EMC "Industrial use"

Seismic capacity:

IEC 980: 1993, čl. 6

The instruments are applicable for unlimited use in agricultural and industrial areas.

CONNECTION

Supply of energy from the main line has to be isolated from the measuring leads.



ORBIT MERRET, spol. s r.o.

Vodnanská 675/30
198 00 Prague 9
Czech Republic

Tel: +420 - 281 040 200
Fax: +420 - 281 040 299
e-mail: orbit@merret.eu
www.orbit.merret.eu



1. CONTENTS	3
2. INSTRUMENT DESCRIPTION	4
3. INSTRUMENT CONNECTION	6
Measuring ranges	6
Termination of RS 485 communication line	6
Instrument connection	7
Recommended connection of sensors	8
4. INSTRUMENT SETTING	10
Symbols used in the instructions	12
Setting the DP and the (-) sign	12
Control keys function	13
Setting/permitting items into "USER" menu	13
5. SETTING "LIGHT" MENU	14
5.0 Description "LIGHT" menu	14
Setting input - Type "DC"	18
Setting input - Type "PM"	18
Setting input - Type "OHM"	19
Setting input - Type "RTD - Pt"	20
Setting input - Type "RTD - Ni"	21
Setting input - Type "T/C"	22
Setting input - Type "RTD - Cu"	24
Selection of the instrument measuring range - Channel B, C, D	26
Setting display projection - Channel B	40
Setting display projection - Channel C	42
Setting display projection - Channel D	44
Setting Limits	46
Setting analog output	48
Selection of programming menu „LIGHT"/„PROFI"	50
Restoration of manufacture setting	50
Calibration - input range (DU)	51
Selection of instrument menu language version	54
Setting new access password	54
Instrument identification	55
6. SETTING "PROFI" MENU	56
6.0 Description of "PROFI" menu	56
6.1 "PROFI" menu - INPUT	
6.1.1 Resetting internal values	58
6.1.2 Setting measuring type, range, mode, rate	59
6.1.3 Setting the Real Time	66
6.1.4 External input function selection	66
6.1.5 Optional accessory functions of the keys	68
6.2 "PROFI" menu - CHANNEL	
6.2.1 Setting measuring parameters (projection, filters, decimal point, description)	72
6.2.2 Setting mathematic functions	76
6.2.3 Selection of evaluation of min/max. value	79
6.3 "PROFI" menu - OUTPUT	
6.3.1 Setting data logging	80
6.3.2 Setting Limits	82
6.3.3 Setting data output	86
6.3.4 Setting analog output	87
6.3.5 Selection of display projection	89
6.4 "PROFI" menu - SERVICE	
6.4.1 Selection of programming menu „LIGHT"/„PROFI"	90
6.4.2 Restoration of manufacture setting	91
6.4.3 Calibration - input range (DU)	92
6.4.4 Selection of instrument menu language version	92
6.4.5 Setting new access password	92
6.4.6 Instrument identification	93
7. SETTING ITEMS INTO "USER" MENU	94
7.0 Configuration "USER" menu	94
8. METHOD OF MEASURING OF THE COLD JUNCTION	96
9. DATA PROTOCOL	97
10. ERROR STATEMENTS	98
11. TABLE OF SYMBOLS	99
12. TECHNICAL DATA	100
13. INSTRUMENT DIMENSIONS AND INSTALATION	102
14. CERTIFICATE OF GUARANTEE	103

2. INSTRUMENT DESCRIPTION



2.1 DESCRIPTION

The OM 402 model series are 4 digit panel programmable instruments designed for maximum efficiency and user comfort while maintaining their favourable price. Two models are available: UNI and PWR.

Type OM 402UNI is a multifunction instrument with the option of configuration for 8 various input options, easily configurable in the instrument menu. By further options of input modules it is feasible to measure larger ranges of DC voltage and current or increase the number of inputs up to 4 [applies for PM].

The instrument is based on an 8-bit microcontroller with a multichannel 24-bit sigma-delta converter, which secures high accuracy, stability and easy operation of the instrument.

TYPES AND RANGES

UNI	DC: 0...60/150/300/1200 mV
	PM: 0...5 mA/0...20 mA/4...20 mA/±2 V/±5 V/±10 V/±40 V
	OHM: 0...100 Ω/0...1 kΩ/0...10 kΩ/0...100 kΩ/Autorange
	RTD-Pt: Pt 50/100/Pt 500/Pt 1000
	RTD-Cu: Cu 50/Cu 100
	RTD-Ni: Ni 1 000/Ni 10 000
	T/C: J/K/T/E/B/S/R/N/L
	DU: Linear potentiometer (min. 500 Ω)
UNI - B	PM: 3x 0...5 mA/0...20 mA/4...20 mA/±2 V/±5 V/±10 V/±40 V

PROGRAMMABLE PROJECTION

Selection:	of type of input and measuring range
Measuring range:	adjustable as fixed or with automatic change
Setting:	manual, optional projection on the display may be set in the menu for both limit values of the input signal, e.g. input 0...20 mA > 0...850,0
Projection:	-9999...9999 [-99999...999999]

COMPENSATION

of conduct:	in the menu it is possible to perform compensation for 2-wire connection
of conduct in probe:	internal connection (conduct resistance in measuring head)
of CJC (T/C):	manual or automatic, in the menu it is possible to perform selection of the type of thermocouple and compensation of cold junctions, which is adjustable or automatic (temperature at the brackets)

LINEARIZATION

Linearization:*	by linear interpolation in 50 points (solely via OM Link)
-----------------	---

DIGITAL FILTERS

Floating average:	from 2...30 measurements
Exponen.average:	from 2...100 measurements
Arithmetic average:	from 2...100 measurements
Rounding:	setting the projection step for display

MATHEMATIC FUCTIONS

Min/max. value:	registration of min./max. value reached during measurement
Tare:	designed to reset display upon non-zero input signal
Peak value:	the display shows only max. or min. value
Mat. operations:	polynome and mathematic operatin between input - total and divide

* only for types DC, PM, DU

EXTERNAL CONTROL

Lock:	control keys blocking
Hold:	display/instrument blocking
Tare:	tare activation/resetting tare to zero
Resetting MM:	resetting min/max value
Memory:	data storage into instrument memory

2.2 OPERATION

The instrument is set and controlled by five control keys located on the front panel. All programmable settings of the instrument are performed in three adjusting modes:

LIGHT	Simple programming menu - contains solely items necessary for instrument setting and is protected by optional number code
PROFI	Complete programming menu - contains complete instrument menu and is protected by optional number code
USER	User programming menu - may contain arbitrary items selected from the programming menu (LIGHT/PROFI), which determine the right (see or change) - access without password

All programmable parameters are stored in the EEPROM memory (they hold even after the instrument is switched off).



Complete instrument operation and setting may be performed via OM Link communication interface, which is a standard equipment of all instruments.

The operation program is freely accessible [www.orbit.merret.eu] and the only requirement is the purchase of OML cable to connect the instrument to PC. It is manufactured in version RS 232 and USB and is compatible with all ORBIT MERRET instruments. Another option for connection is with the aid of data output RS 232 or RS 485 (without the need of the OML cable).

The program OM LINK in „Basic“ version will enable you to connect one instrument with the option of visualization and archiving in PC. The OM Link „Standard“ version has no limitation of the number of instruments connected.

2.3 OPTIONS

Excitation is suitable for supplying power to sensors and transmitters. It has a galvanic separation.

Comparators are assigned to monitor one, two, three or four limit values with relay output. The user may select limits regime: LIMIT/DOSING/FROM-TD. The limits have adjustable hysteresis within the full range of the display as well as selectable delay of the switch-on in the range of 0...99,9 s. Reaching the preset limits is signalled by LED and simultaneously by the switch-on of the relevant relay.

Data outputs are for their rate and accuracy suitable for transmission of the measured data for further projection or directly into the control systems. We offer an isolated RS232 and RS485 with the ASCII or DIN MessBus protocol.

Analog outputs will find their place in applications where further evaluating or processing of measured data is required in external devices. We offer universal analog output with the option of selection of the type of output - voltage/current. The value of analog output corresponds with the displayed data and its type and range are selectable in Menu.

Measured data record is an internal time control of data collection. It is suitable where it is necessary to register measured values. RTC, where data record is governed by Real Time with data storage in a selected time segment and cycle. Up to 250 000 values may be stored in the instrument memory. Data transmission into PC via serial interface RS232/485 and OM Link.

3. INSTRUMENT CONNECTION



The instrument supply leads should not be in proximity of the incoming low-potential signals.

Contactors, motors with larger input power should not be in proximity of the instrument.

The leads into the instrument input (measured quantity) should be in sufficient distance from all power leads and appliances. Provided this cannot be secured it is necessary to use shielded leads with connection to ground (bracket E).

The instruments are tested in compliance with standards for use in industrial area, yet we recommend to abide by the above mentioned principles.

MEASURING RANGES

TYPE	INPUT I	INPUT U
DC		0...60/150/300/1 200 mV
PM	0...5/20 mA/4...20 mA	±2/±5/±10/±40 V
DHM	0...100 Ω/1 kΩ/10 kΩ/100 kΩ/Autorange	
RTD-Pt	Pt 50/100/Pt 500/ Pt 1 000	
RTD-Cu	Cu 50/100	
RTD-Ni	Ni 1 000/10 000	
T/C	J/K/T/E/B/S/R/N/L	
DU	Linear potentiometer (min. 500 Ω)	

OPTION "B"


TYPE	INPUT 2, 3, 4/I	INPUT 2, 3, 4/U
PM	0...5/20 mA/4...20 mA	±2/±5/±10/±40 V


Termination of RS 485 communication line

X3 - Termination of communication line RS 485


Full	Significance	Default	Recommendation
1-2	connect L+ to (+) source	terminalconnected	connect at the end of line do not disconnect
3-4	termination of line 120 Ohm	disconnected	
5-6	connect L- to (-) source	terminalconnected	

RS 485 line should have a linear structure - wires (ideally shielded and twisted) should lead from one device to another.

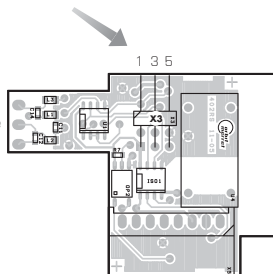

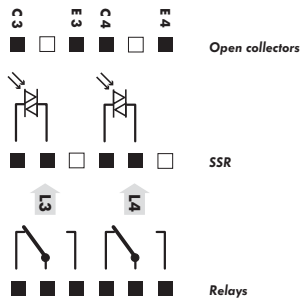


Excitation has the minus pole common with the input - the bracket no. 20 - GND and you may set its value by trimmer above the bracket no. 17

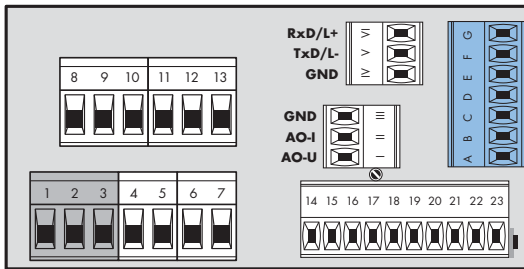

Option B

- INPUT - 4/U
- INPUT - 4/I
- INPUT - 3/U
- INPUT - 3/I
- GND
- INPUT - 2/U
- INPUT - 2/I

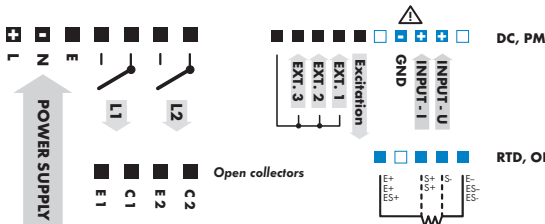


Maximum of 250 mA may be connected to "INPUT - I" (bracket no. 21), i.e. 10-times range overload. Mind the correct connection/mistaking of current - voltage input. Destruction of measuring resistance in current input (15R) may occur.


3. INSTRUMENT CONNECTION




Example connection of a 2-wire sensor with current signal output powered by instrument's excitation

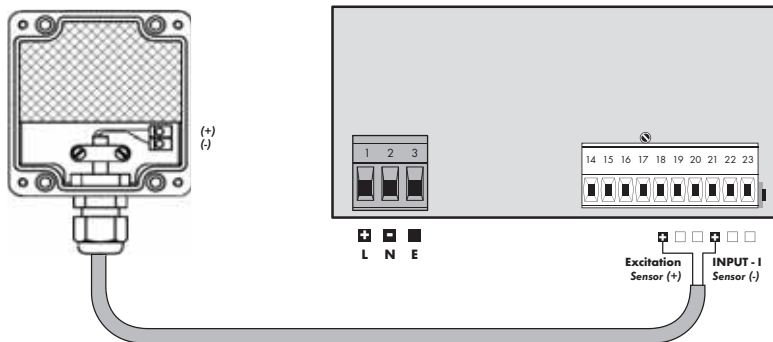

Example connection of a 3-wire sensor with current signal output powered by instrument's excitation

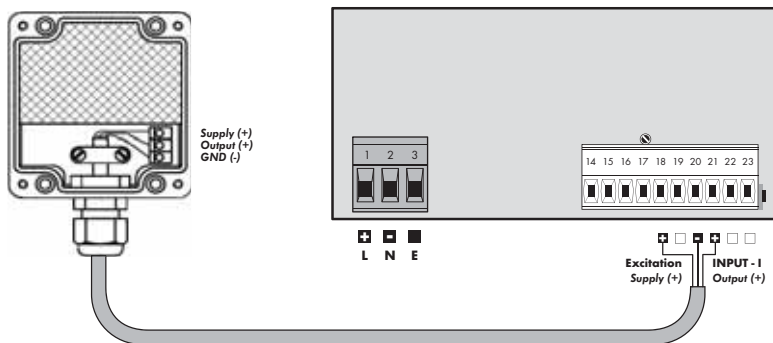


Example connection of 3-wire sensor with voltage signal output powered by instrument's excitation

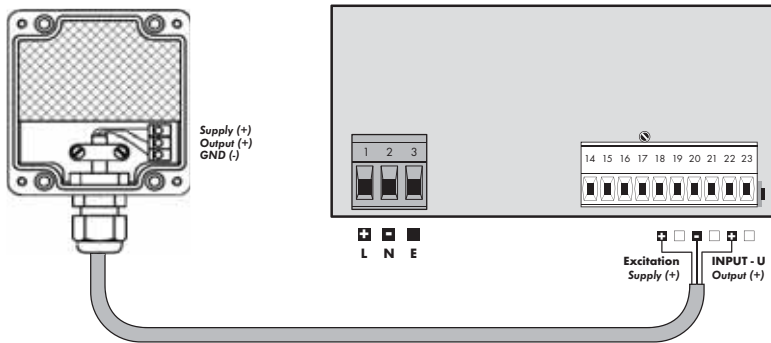

Example connection of resistance measurement using 4 wires

By connecting resistor R^* we eliminate error message E. I.O.V. (input overflow) when the measured resistance is disconnected

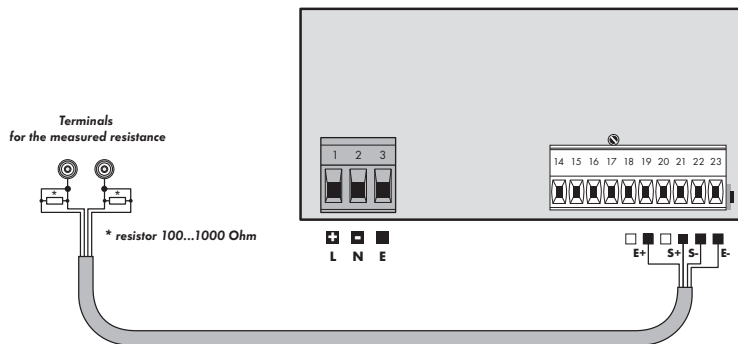



SETTING **PROFI**

For expert users

Complete instrument menu

Access is password protected

Possibility to arrange items of the **USER MENU**

Tree menu structure

SETTING **LIGHT**

For trained users

Only items necessary for instrument setting

Access is password protected

Possibility to arrange items of the **USER MENU**

Linear menu structure

SETTING **USER**

For user operation

Menu items are set by the user (Profi/Light) as per request

Access is not password protected

Optional menu structure either tree (PROFI) or linear (LIGHT)

4.1 SETTING

The instrument is set and controlled by five control keys located on the front panel. All programmable settings of the instrument are performed in three adjusting modes:


- LIGHT** **Simple programming menu**
- contains solely items necessary for instrument setting and is protected by optional number code
- PROFI** **Complete programming menu**
- contains complete instrument menu and is protected by optional number code
- USER** **User programming menu**
- may contain arbitrary items selected from the programming menu (LIGHT/PROFI), which determine the right (see or change)
- access without password

All programmable parameters are stored in the EEPROM memory (they hold even after the instrument is switched off).

Complete instrument operation and setting may be performed via QM Link communication interface, which is a standard equipment of all instruments.


The operation program is freely accessible (www.orbit.merret.eu) and the only requirement is the purchase of QML cable to connect the instrument to PC. It is manufactured in version RS 232 and USB and is compatible with all ORBIT MERRET instruments. Another option for connection is with the aid of data output RS 232 or RS 485 (without the need of the QML cable).

Scheme of processing the measured signal

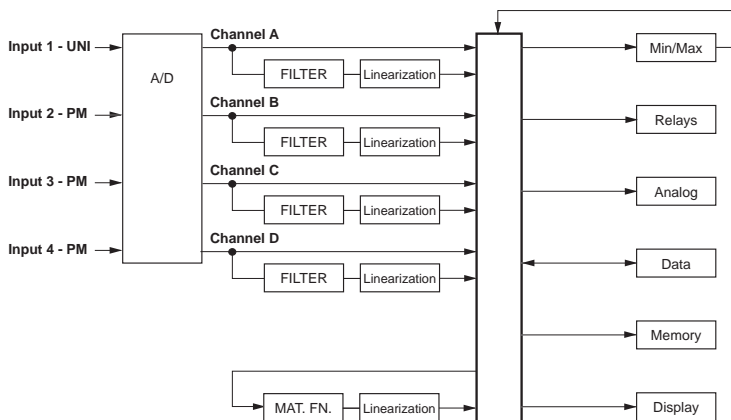

4. INSTRUMENT SETTING

Setting and controlling the instrument is performed by means of 5 control keys located on the front panel. With the aid of these keys it is possible to browse through the operation menu and to select and set required values.

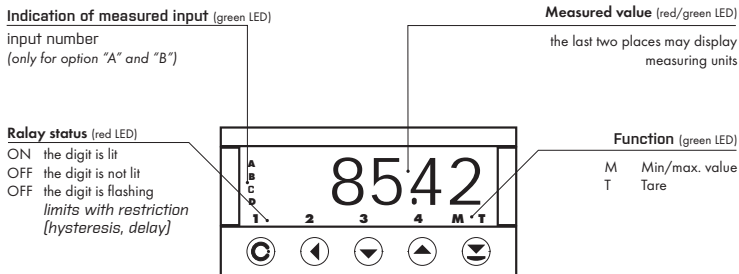

Symbols used in the instructions

DC **PM**
DU **OHM** **RTD** **T/C** Indicates the setting for given type of instrument

DEF values preset from manufacture

symbol indicates a flashing light (symbol)

MIN inverted triangle indicates the item that can be placed in USER menu

CONNECT broken line indicates a dynamic item, i.e. it is displayed only in particular selection/version

after pressing the key the set value will not be stored

after pressing the key the set value will be stored

30 continues on page 30

Setting the decimal point and the minus sign

DECIMAL POINT

Its selection in the menu, upon modification of the number to be adjusted it is performed by the control key with transition beyond the highest decade, when the decimal point starts flashing. Positioning is performed by .

THE MINUS SIGN

Setting the minus sign is performed by the key on higher decade. When editing the item subtraction must be made from the current number (e.g.: 013 > , on class 100 > -87)



SETTING LIGHT

For trained users

Only items necessary for instrument setting

Access is password protected

Possibility to arrange items of the **USER MENU**

Linear menu structure

Preset from manufacture

Password	"0"
Menu	LIGHT
USER menu	off
Setting the items	DEF



Upon delay exceeding 60 s the programming mode is automatically discontinued and the instrument itself restores the measuring mode

Access password
 1428 PASSW 0

Number of inputs: I NPUTS 4.1 NP
 Type of input - Channel A: TYPE 1 PM
 Measuring range - Channel A: MODE 1 4-20mA

Selecting projection and connection
 RTD OHM
 CONN.EC. 2-WI RE FORM.A 00000.0
 T/C
 CONN.EC. EXT.1TC CJ.TEM. 23 FORM.A 00000.0

Measuring range - Channel B: MODE 2 4-20mA
 Measuring range - Channel C: MODE 3 4-20mA
 Measuring range - Channel D: MODE 4 4-20mA

Setting projection - Channel A
 DC PM OHM DU
 MI N.A. 0 MAX.A 100 FORM.A 0000.0

Setting projection - Channel B
 MI N.B. 0 MAX.B 100 FORM.B 0000.0

Setting projection - Channel C
 MI N.C. 0 MAX.C 100 FORM.C 0000.0

Setting projection - Channel D
 MI N.D. 0 MAX.D 100 FORM.D 0000.0

LIM.L1 20 LIM.L2 40 LIM.L3 60 LIM.L4 80
 Option - comparator

TYP.A.O. 4-20mA MI N.A.O. 0 MAX.A.O. 100
 Option - Analog output


Menu type: MENU LIGHT
 Return to manufacture calibration: RE.CAL YES
 Return to manufacture setting: RE.SET FIRM

Calibration - only for "DU"
 DU
 C.MI N YES C.MAX YES

Language selection: LANG ENGL
 New password: PAS.LI 0

Identification: I DENT YES
 Type of instruments: OM 402UNI
 SW. version: 78-001
 Input: 4.1 NP
 1428 Return to measuring mode

5. SETTING LIGHT

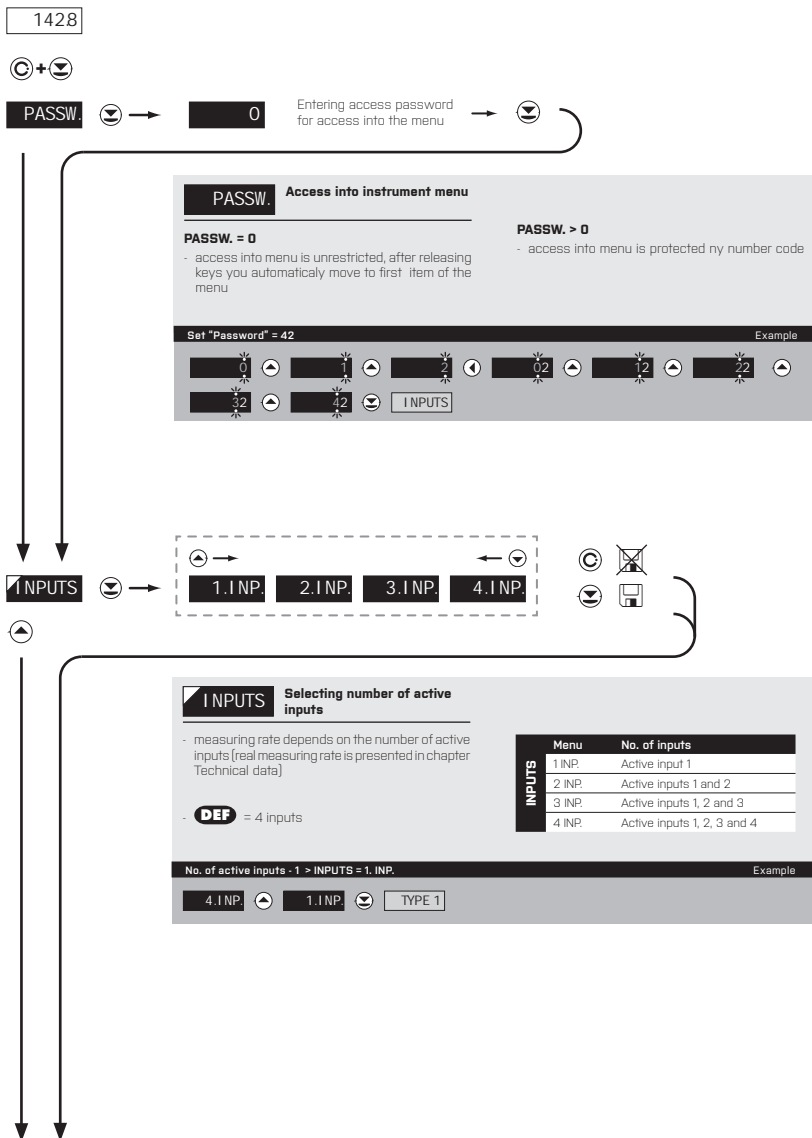

The diagram illustrates the navigation process for setting the instrument type. It starts with the **TYPE 1** menu, which contains options: DC, PM, OHM, RTD- Pt, RTD-Ni, TC, DU, and RTD-Cu. A dashed box highlights these options. From this menu, a downward arrow leads to a table of contents, and a rightward arrow leads to the **TYPE 1 Selection of the type of instrument** screen.

The **TYPE 1 Selection of the type of instrument** screen provides the following information:

- primary selection of the type of instrument
- performs default setting **DEF** of values from manufacture, incl. calibration
- **DEF** = „PM“

The screen also features a table titled **TYPE 1** with the following columns: **Menu** and **Type of instrument**.

Menu	Type of instrument
DC	DC voltmeter
PM	Process monitor
OHM	Ohmmeter
RTD-Pt	Thermometer for sensors Pt
RTD-Ni	Thermometer for sensors Ni
TC	Thermometer for thermocouples
DU	Display for lin. potentiometer
RTD-Cu	Thermometer for sensors Cu


Below the table, the screen shows **Type "PM"** and **Example**. At the bottom, there is a **PM** button and a **MODE 1** button.

The table of contents at the bottom left lists the following types and their corresponding page numbers:

Type DC	18
Type PM	18
Type OHM	19
Type RTD-Pt	20
Type RTD-Ni	21
Type T/C	22
Type DU	24
Type RTD-Cu	25

5. SETTING LIGHT

MEASURING MODE FOR CHANNEL A > DC



MODE 1 Selection of the instrument measuring range

DEF = 60 mV

MODE 1	Menu	Measuring range
	60 mV	±60 mV
	150 mV	±150 mV
	300 mV	±300 mV
	1200mV	±1,2 V


Range ±150 mV Example

60 mV 150 mV MODE 2



26

MEASURING MODE FOR CHANNEL A > PM



MODE 1 Selection of the instrument measuring range

DEF = 4 - 20 mA


MODE 1	Menu	Measuring range
	0-5mA	0...5 mA
	0-20mA	0...20 mA
	4-20mA	4...20 mA
	0-2 V	±2 V
	0-5 V	±5 V
	0-10 V	±10 V
	0-40 V	±40 V
	Er4-20	4...20 mA, with error statement of „underflow“ upon signal smaller than 3,36 mA

Range 0...20 mA Example

4-20mA 0-2 V MODE 2





26

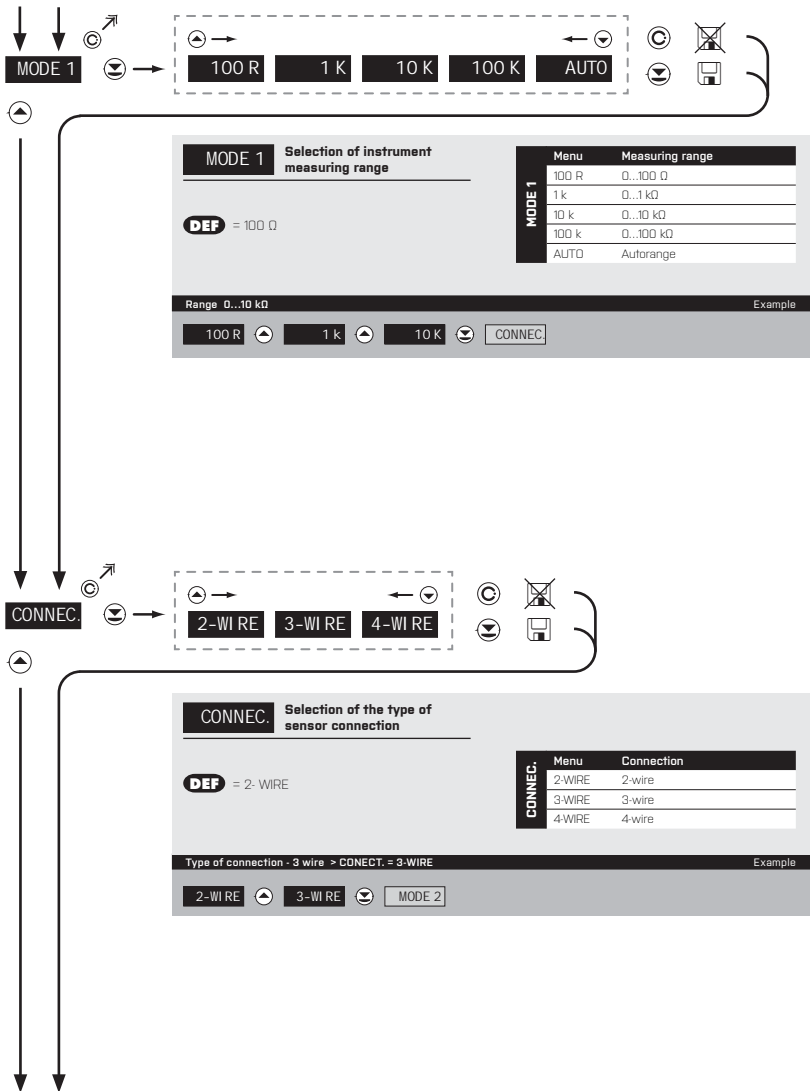

5. SETTING LIGHT

MEASURING MODE FOR CHANNEL > RTD - Pt

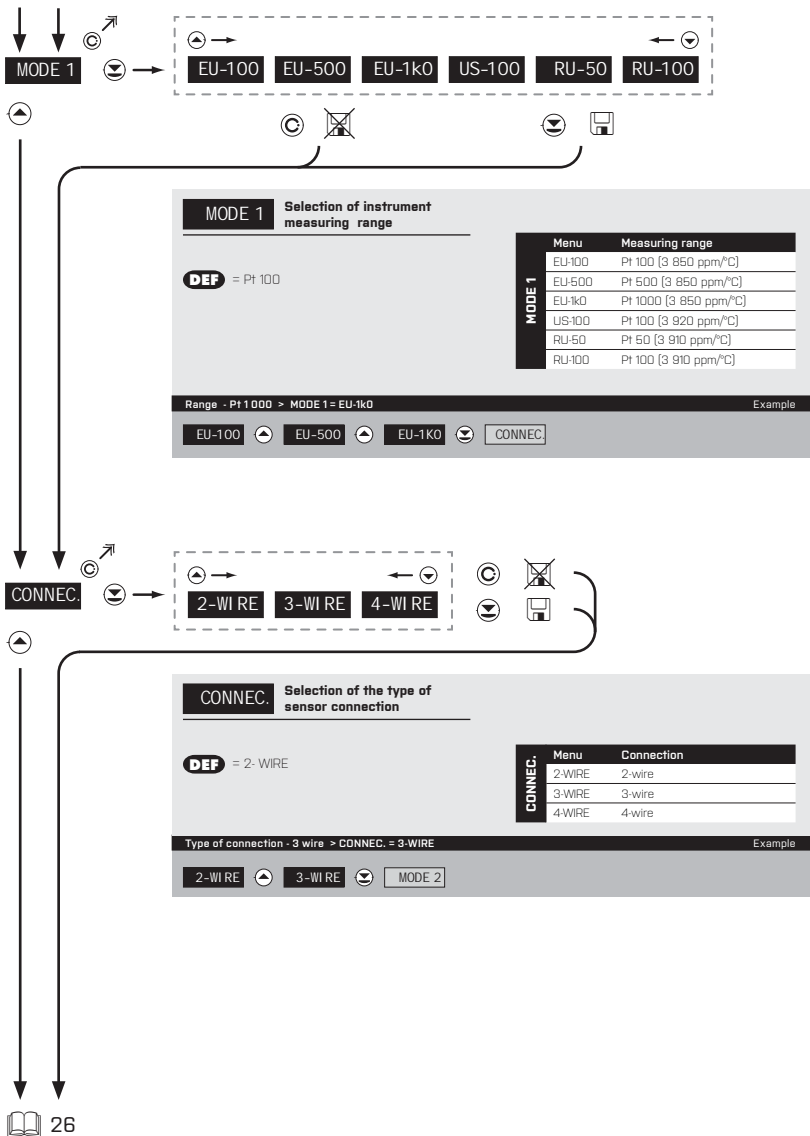



MODE 1 Selection of instrument measuring range

DEF = Ni 1 000 - 5 000 ppm/°C

Menu	Measuring range
5.0-1k	Ni 1 000 [5 000 ppm/°C]
6.2-1k	Ni 1 000 [6 180 ppm/°C]
5.0-10k	Ni 10 000 [5 000 ppm/°C]
6.2-10k	Ni 10 000 [6 180 ppm/°C]

Range - Ni 10 000, 5 000 ppm > MOD E 1 = 5.0-10k Example

50-1k ◀ 62-1k ▶ 50-10k ⌵ CONN.EC



CONN.EC. Selection of the type of sensor connection

DEF = 2-WIRE


Menu	Connection
2-WIRE	2-wire
3-WIRE	3-wire
4-WIRE	4-wire



Type of connection - 3 wire > CONN.EC. = 3-WIRE Example

2-WI RE ◀ 3-WI RE ⌵ MODE 2

5. SETTING LIGHT


MEASURING MODE FOR CHANNEL > T/C

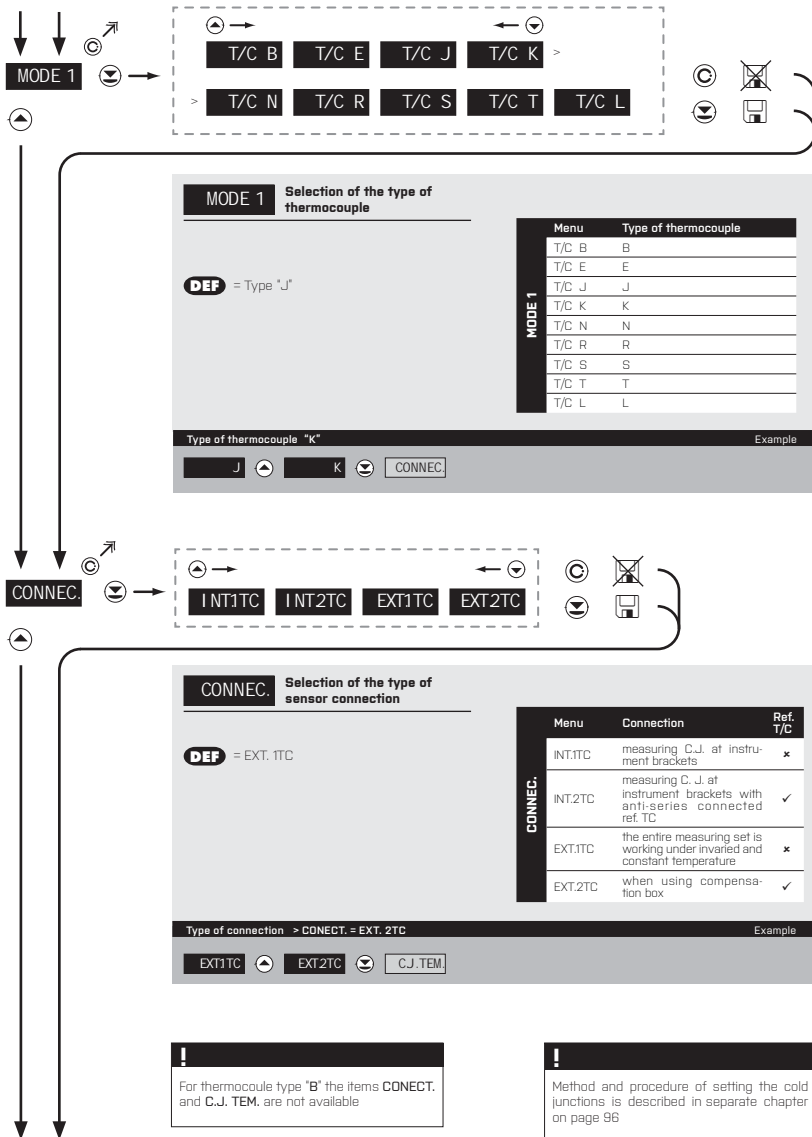

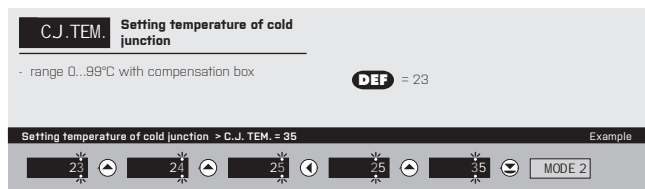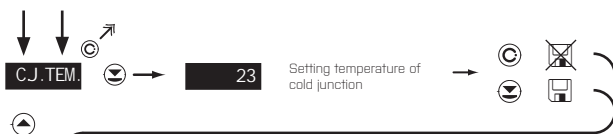

5. SETTING LIGHT


MEASURING MODE FOR CHANNEL > RTD - Cu

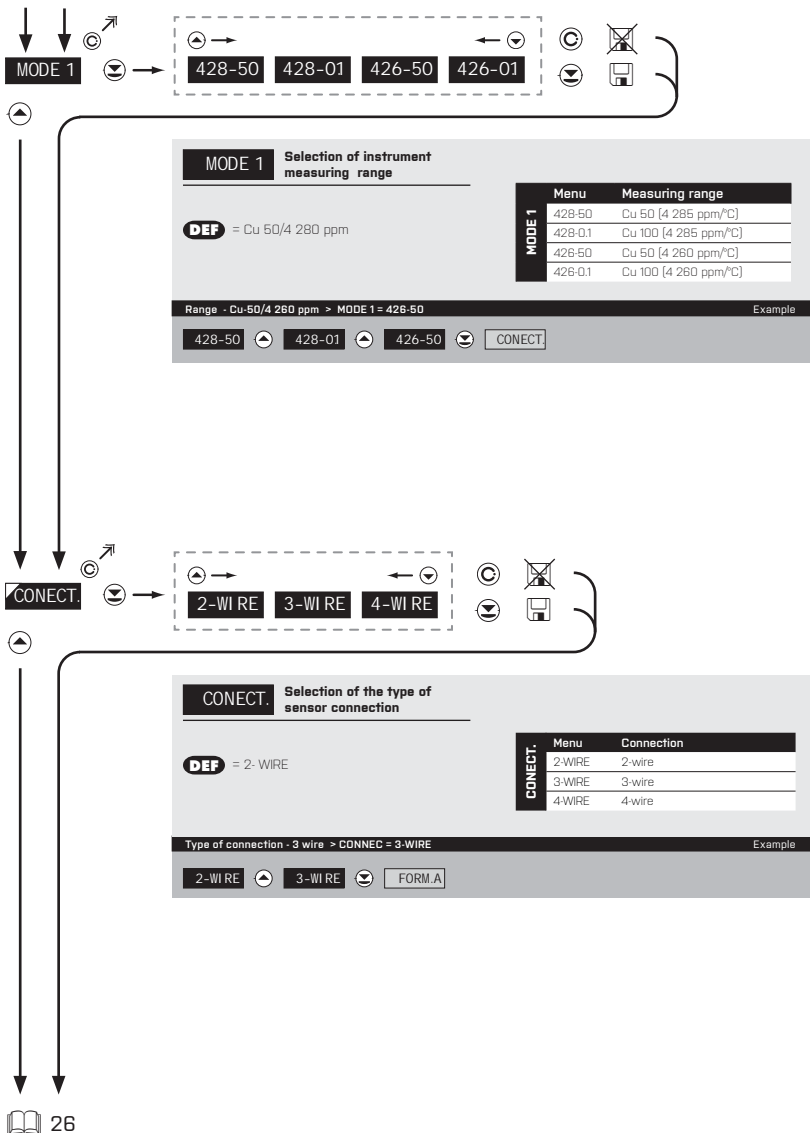



5. SETTING LIGHT

MEASURING MODE FOR CHANNEL B > PM

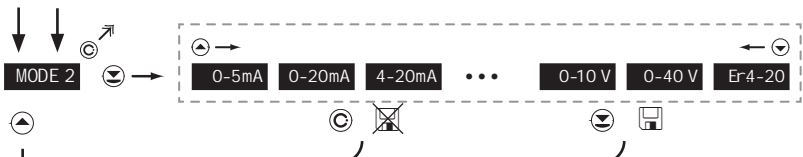

MODE 2 Selection of the instrument measuring range


DEF = 4 - 20 mA

Menu	Range
0-5mA	0...5 mA
0-20mA	0...20 mA
4-20mA	4...20 mA
0-2 V	±2 V
0-5 V	±5 V
0-10 V	±10 V
0-40 V	±40 V
Er4-20	4...20 mA, with error statement of „underfl ow“ upon signal smaller than 3,36 mA

Range 0...20 mA Example

4-20mA 0-2 V MODE 3

MEASURING MODE FOR CHANNEL C > PM

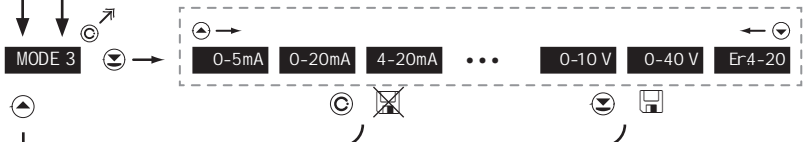


MODE 3 Selection of the instrument measuring range

DEF = 4 - 20 mA

Menu	Range
0-5mA	0...5 mA
0-20mA	0...20 mA
4-20mA	4...20 mA
0-2 V	±2 V
0-5 V	±5 V
0-10 V	±10 V
0-40 V	±40 V
Er4-20	4...20 mA, with error statement of „underfl ow“ upon signal smaller than 3,36 mA

Range 0...20 mA Example

4-20mA 0-2 V MODE 4

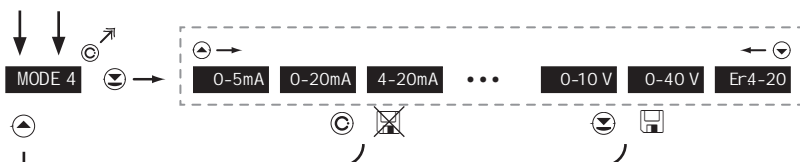

MODE 4 Selection of the instrument measuring range

DEF = 4 - 20 mA


Menu	Range
0-5mA	0...5 mA
0-20mA	0...20 mA
4-20mA	4...20 mA
0-2 V	±2 V
0-5 V	±5 V
0-10 V	±10 V
0-40 V	±40 V
Er4-20	4...20 mA, with error statement of „underflow“ upon signal smaller than 3,36 mA


Range 0...20 mA Example

4-20mA 0-2 V MIN A

5. SETTING LIGHT

DISPLAY PROJECTION FOR CHANNEL A > DC

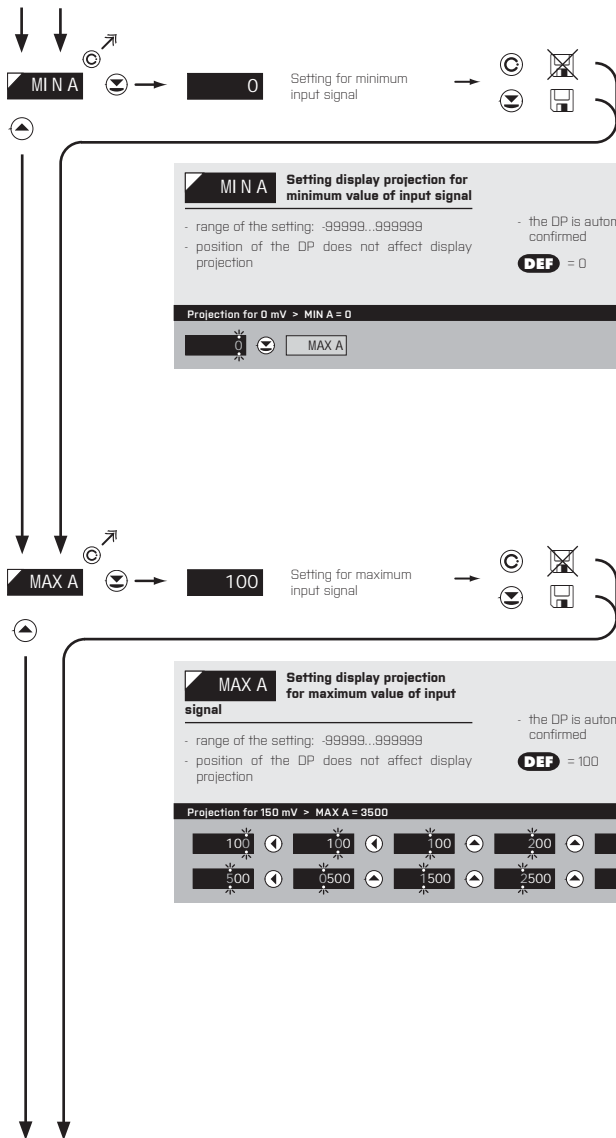

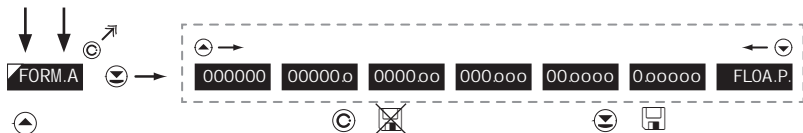

FORM.A Setting projection of the decimal point

DEF = 0000.00


- positioning of the DP is set here in the measuring mode

Projection of DP on display > 00000.0 Example

0000.00 00000.0 MENU *subsequent item on the menu depends on instrument equipment

5. SETTING LIGHT

DISPLAY PROJECTION FOR CHANNEL A > PM

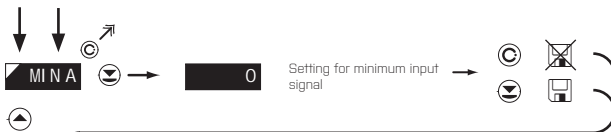

MIN A **Setting display projection for minimum value of input signal**

- range of the setting: -99999...999999
- position of the DP does not affect display projection

- the DP is automatically shifted after the value is confirmed

DEF = 0

Projection for 0 mA > MIN A = -25 Example

0	1	2	3	4	5
0.5	-5	-0.5	-1.5	-2.5	MAX A



MAX A **Setting display projection for maximum value of input signal**


- range of the setting: -99999...999999
- position of the DP does not affect display projection

- the DP is automatically shifted after the value is confirmed

DEF = 100

Projection for 20 mA > MAX A = 2500 Example

100	100	100	200	300	400
500	0500	1500	2500	FORM A	

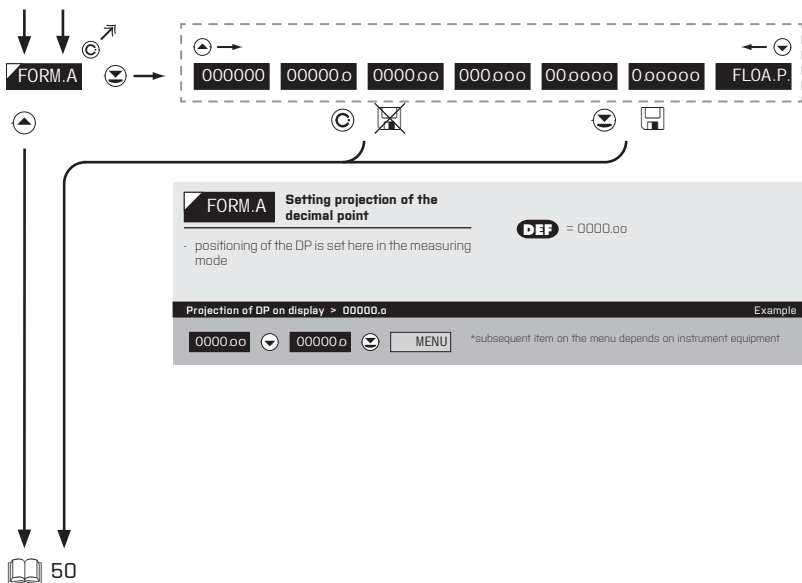

5. SETTING LIGHT



MIN A **Setting display projection for minimum value of input signal**

- range of the setting: -99999...999999
- position of the DP does not affect display projection

- the DP is automatically shifted after the value is confirmed

DEF = 0

Projection for 0 Ohm > MIN A = 0 Example

0

←

→

MAX A



MAX A **Setting display projection for maximum value of input signal**

- range of the setting: -99999...999999
- position of the DP does not affect display projection

- the DP is automatically shifted after the value is confirmed

DEF = 100

Projection for 10 kOhm > MAX A = 10000 Example

100

↓

100

↓

100

↓

000

↓

0000

↓


00000

↑

10000


↓


FORM A

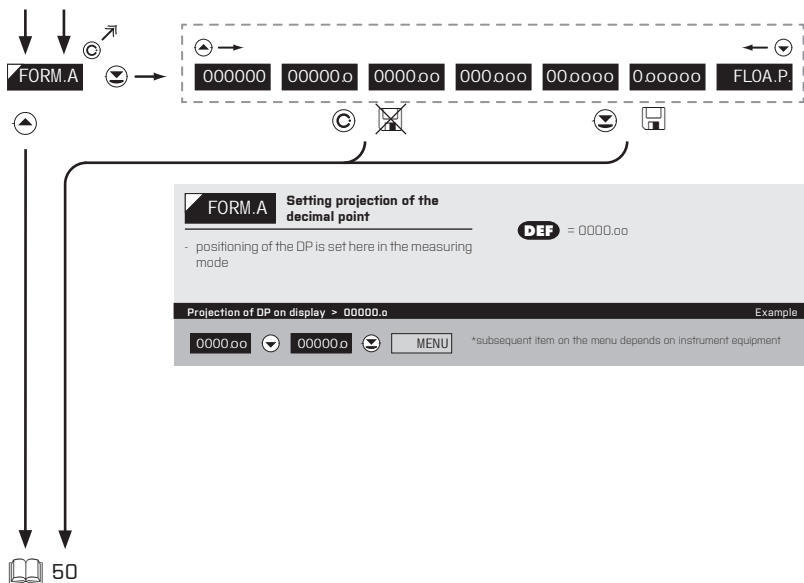

5. SETTING LIGHT


DISPLAY PROJECTION FOR CHANNEL A > RTD - Pt

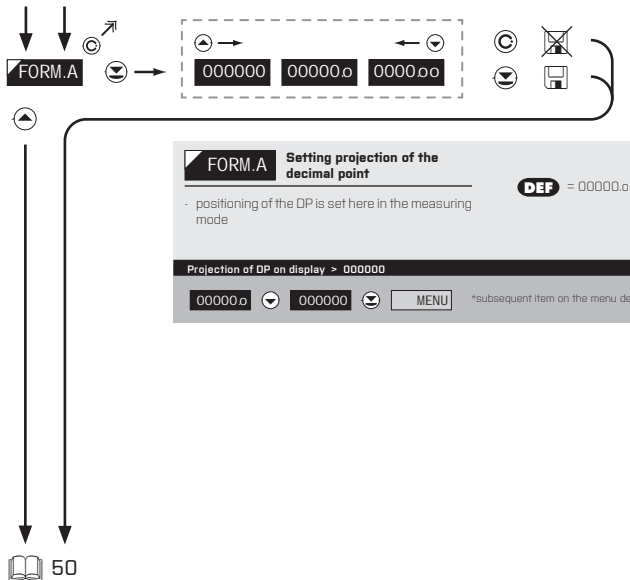


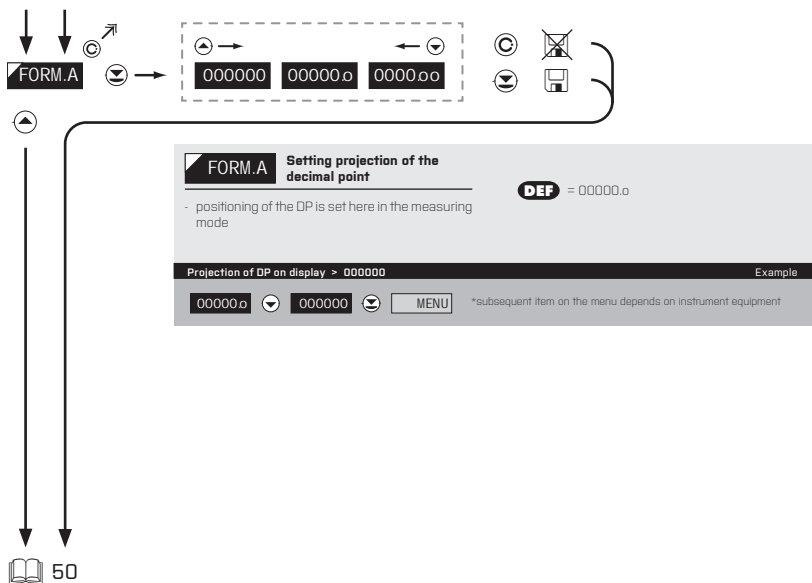

5. SETTING LIGHT

DISPLAY PROJECTION FOR CHANNEL A > T/C

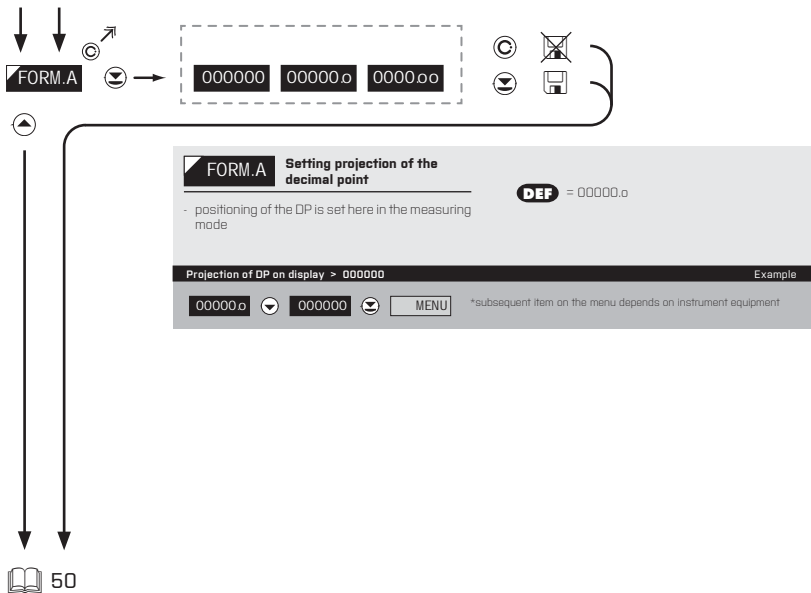

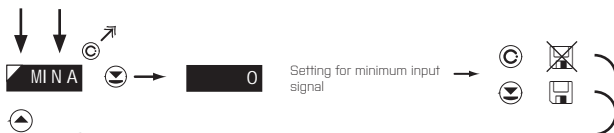

MIN A **Setting display projection for minimum value of input signal**

- range of the setting: -99999...999999
- position of the DP does not affect display projection
- the DP is automatically shifted after the value is confirmed

DEF = 0

Projection for the beginning > MIN A = 0 Example

0

MAX A



MAX A **Setting display projection for maximum value of input signal**

- range of the setting: -99999...999999
- position of the DP does not affect display projection
- the DP is automatically shifted after the value is confirmed

DEF = 100


Projection for the end > MAX A = 5000 Example


100 100 100 000 0000 1000

2000 3000 4000 5000

FORM A

5. SETTING LIGHT

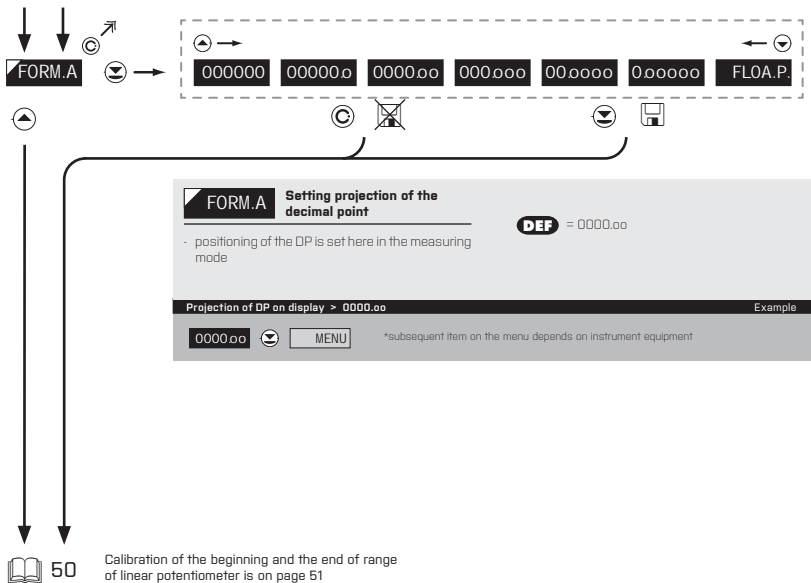

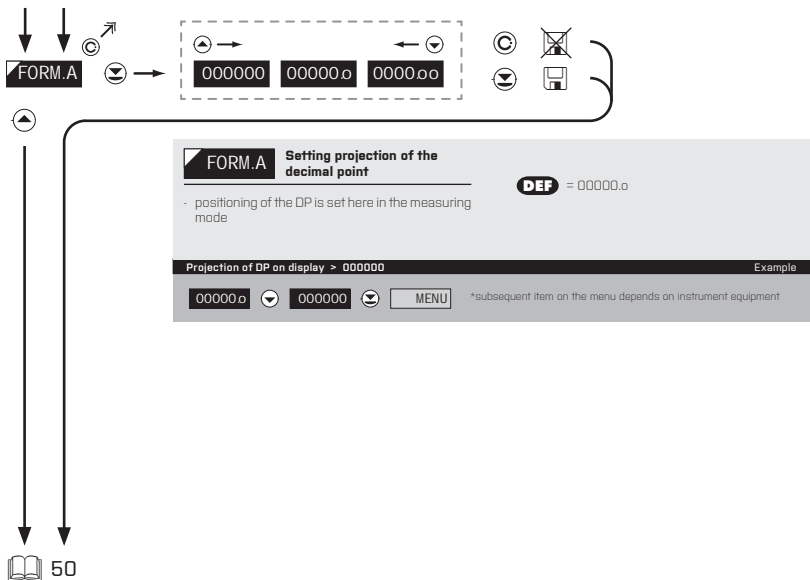

5. SETTING LIGHT

DISPLAY PROJECTION FOR CHANNEL B > PM



MIN B Setting display projection for minimum value of input signal

- Channel B

- range of the setting: -99999...999999
- position of the DP does not affect display projection

- the DP is automatically shifted after the value is confirmed

DEF = 0

Projection for 0 mA > MIN B = -25 Example

0	1	2	3	4	5
0.5	-5	-0.5	-1.5	-2.5	MAX B



MAX B Setting display projection for maximum value of input signal

signal - Channel B


- range of the setting: -99999...999999
- position of the DP does not affect display projection

- the DP is automatically shifted after the value is confirmed

DEF = 100


Projection for 20 mA > MAX B = 2500 Example

100	100	100	200	300	400
500	0.500	1.500	2.500	FORM.B	

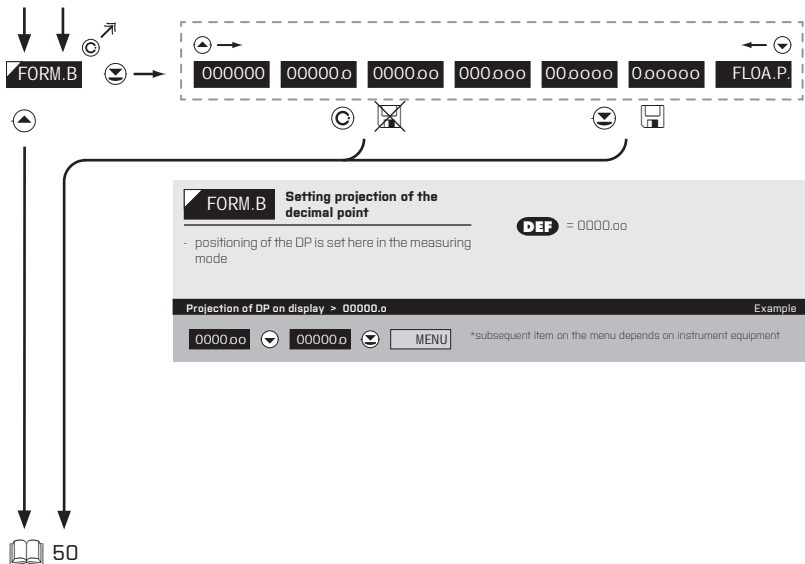

5. SETTING LIGHT

DISPLAY PROJECTION FOR CHANNEL C > PM

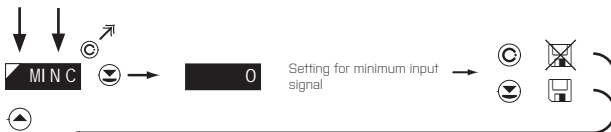

MIN C Setting display projection for minimum value of input signal
- Channel C

- range of the setting: -99999...999999
- position of the DP does not affect display projection

- the DP is automatically shifted after the value is confirmed

DEF = 0

Projection for 0 mA > MIN C = -25 Example

0	1	2	3	4	5
0.5	-5	-0.5	-1.5	-2.5	MAX C



MAX C Setting display projection for maximum value of input signal - Channel C


- range of the setting: -99999...999999
- position of the DP does not affect display projection

- the DP is automatically shifted after the value is confirmed

DEF = 100


Projection for 20 mA > MAX C = 2500 Example

100	100	100	200	300	400
500	0500	1500	2500	FORM.C	

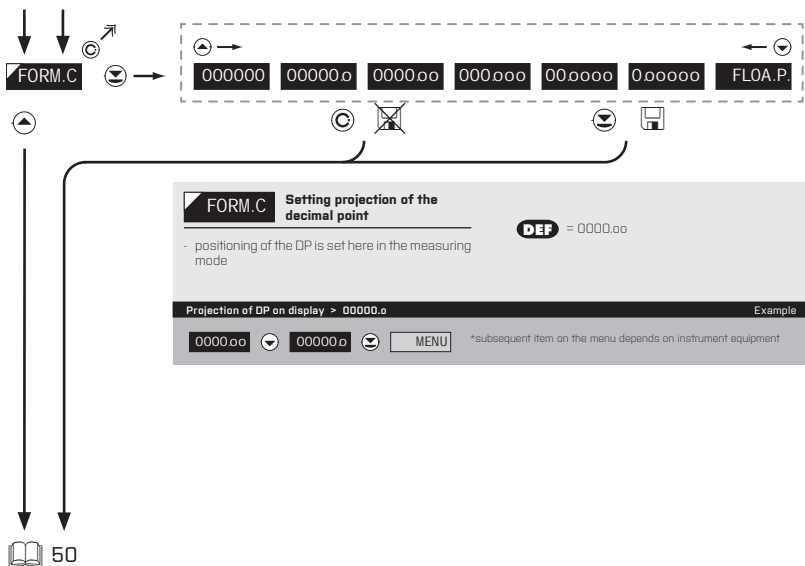

5. SETTING LIGHT

DISPLAY PROJECTION FOR CHANNEL D > PM

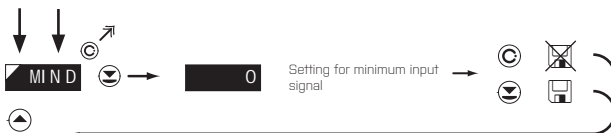

MIN D Setting display projection for minimum value of input signal
- Channel D

- range of the setting: -99999...999999
- position of the DP does not affect display projection

- the DP is automatically shifted after the value is confirmed
DEF = 0

Projection for 0 mA > MIN D = -25						Example
0	1	2	3	4	5	
0.5	-5	-0.5	-1.5	-2.5		MAX D




MAX D Setting display projection for maximum value of input signal - Channel D

- range of the setting: -99999...999999
- position of the DP does not affect display projection


- the DP is automatically shifted after the value is confirmed
DEF = 100

Projection for 20 mA > MAX D = 2500						Example
100	100	100	200	300	400	
500	0500	1500	2500			FORM D

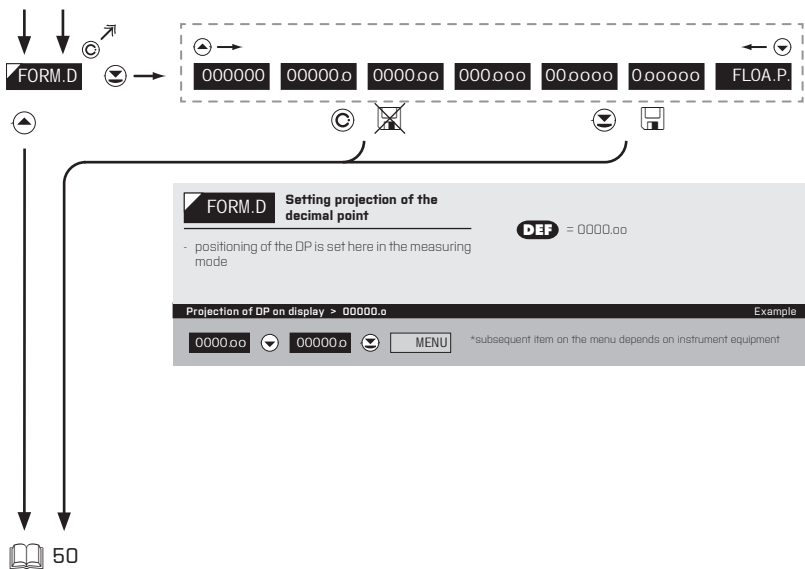

5. SETTING LIGHT

DISPLAYED ONLY WITH OPTIONS > COMPARATORS

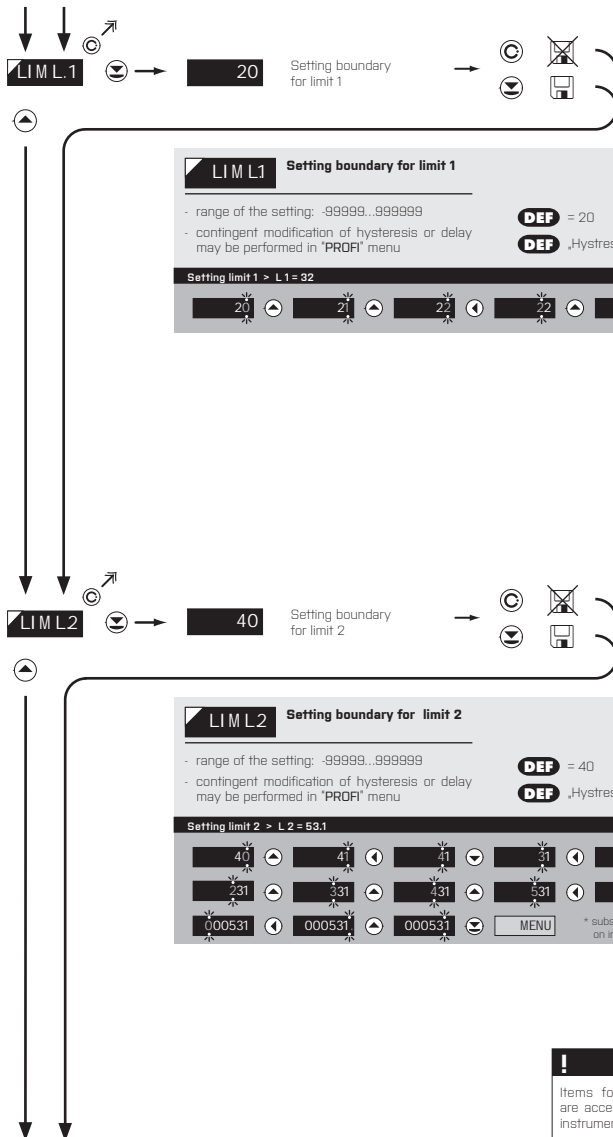

LIM L1 Setting boundary for limit 1

- range of the setting: -99999...999999
- contingent modification of hysteresis or delay may be performed in 'PROFI' menu

DEF = 20
DEF ,Hysteresis'=0, ,Delay'=0

Setting limit 1 > L1 = 32 Example

20 21 22 22 32 MENU

LIM L2 Setting boundary for limit 2

- range of the setting: -99999...999999
- contingent modification of hysteresis or delay may be performed in 'PROFI' menu

DEF = 40
DEF ,Hysteresis'=0, ,Delay'=0

Setting limit 2 > L2 = 53.1 Example

40 41 41 31 031 131
 231 331 431 531 0531 00531
 000531 000531 000531 MENU

* subsequent item on the menu depends on instrument equipment

!
 Items for "Limits" and "Analog output" are accessible only if incorporated in the instrument.

5. SETTING LIGHT

DISPLAYED ONLY WITH OPTIONS > ANALOG OUTPUT

TYP.A.O. Setting the type of analog output

Menu	Range	Description
0-20mA	0...20 mA	
Er4-T	4...20 mA	with error message indication and broken loop indication (<3,6 mA)
4-20T	4...20 mA	with broken loop indication (<3,6 mA)
Er4-20	4...20 mA	with indication of error statement (<3,6 mA)
4-20mA	4...20 mA	
0-5mA	0...5 mA	
0-2 V	0...2 V	
0-5 V	0...5 V	
0-10 V	0...10 V	
+10 V	±10 V	

DEF = 4...20 mA

Type of analog output - 0...10 V > TYP. A.O. = 0-10 V

Example: 4-20mA, 0-5mA, 0-2 V, 0-5 V, 0-10 V, MIN A.O.

MIN A.O. Assigning the display value to the beginning of the AD range

DEF = 0

range

- range of the setting: -99999...999999

Display value for the beginning of the AD range > MIN A.O. = 0

Example: 0, MAX A.O.

! Items for "Limits" and "Analog output" are accessible only if incorporated in the instrument.



MAX A.D. Assigning the display value to the end of the AD range


- range of the setting: -99999...999999 **DEF** = 100


Display value for the end of the AD range > MAX A.D. = 120 Example

100 ← 100 → 110 → 120 ↘ MENU


DISPLAYED ONLY WITH OPTIONS > ANALOG OUTPUT

5. SETTING LIGHT

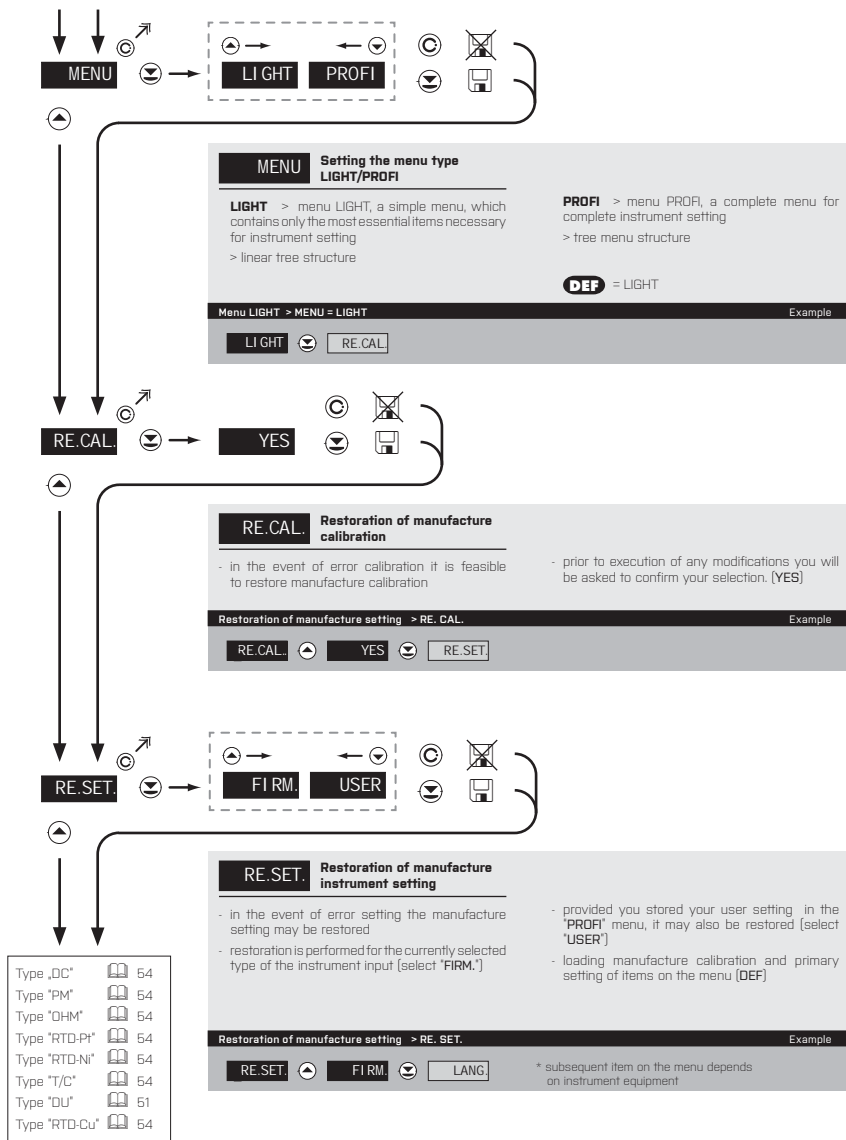


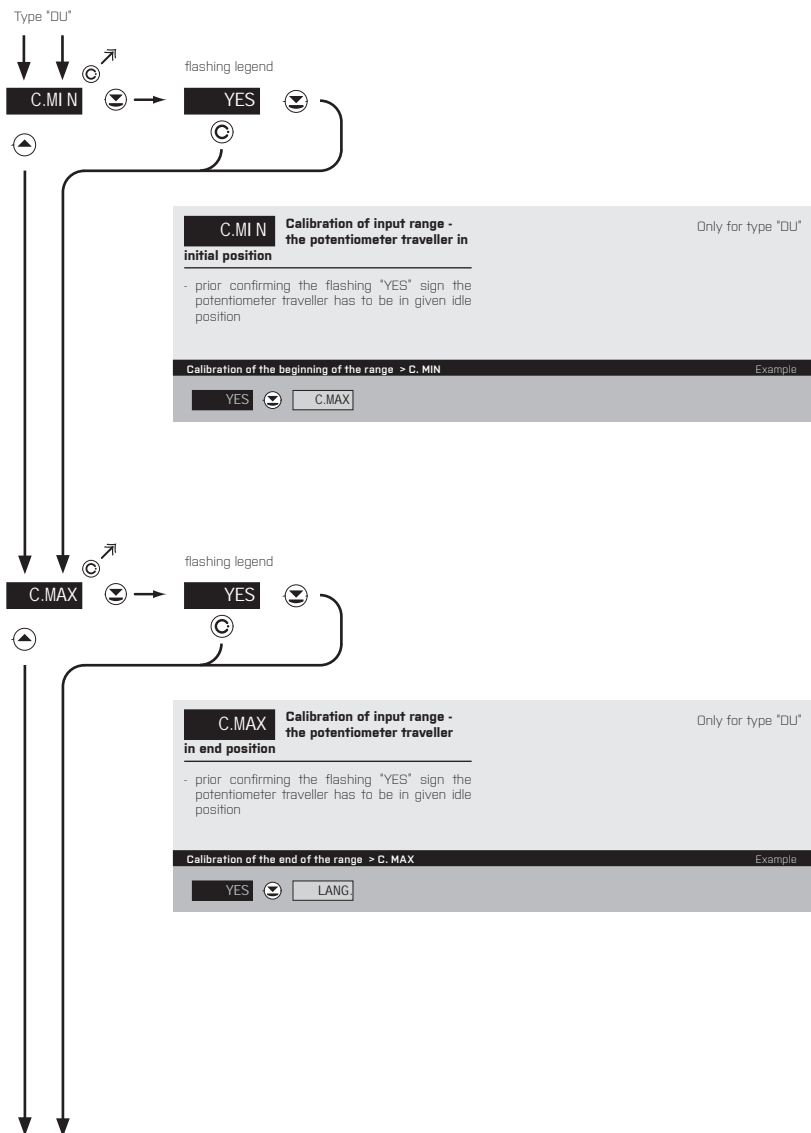

5. SETTING LIGHT

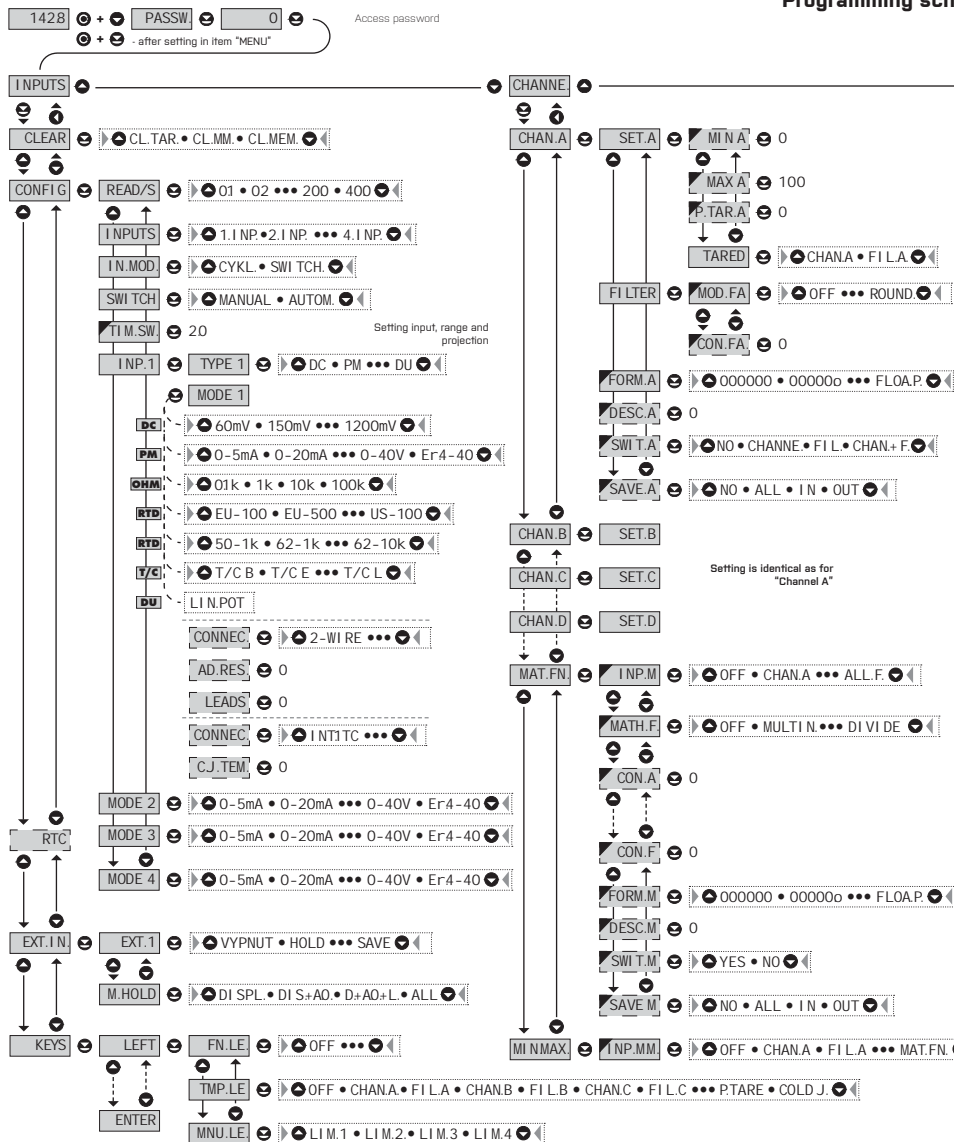



HOME PROFI MENU

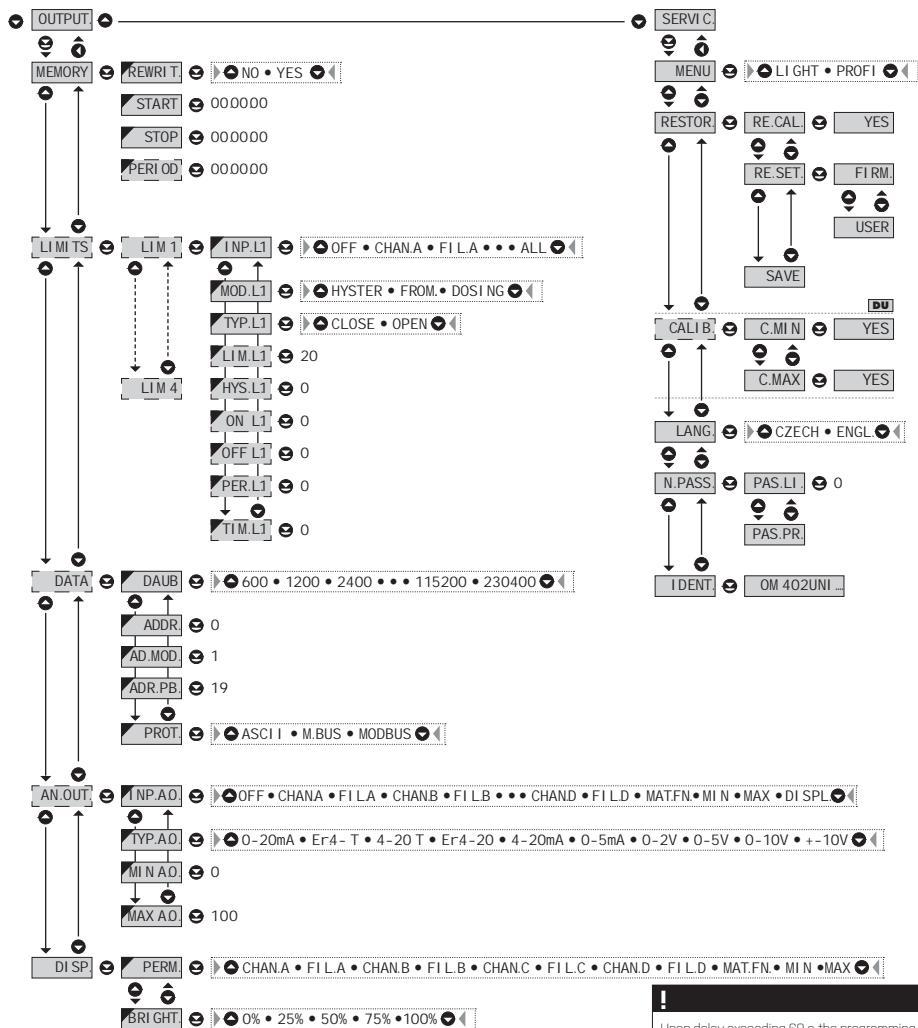

! Upon delay exceeding 60 s the programming mode is automatically discontinued and the instrument itself restores the measuring mode

5. SETTING LIGHT

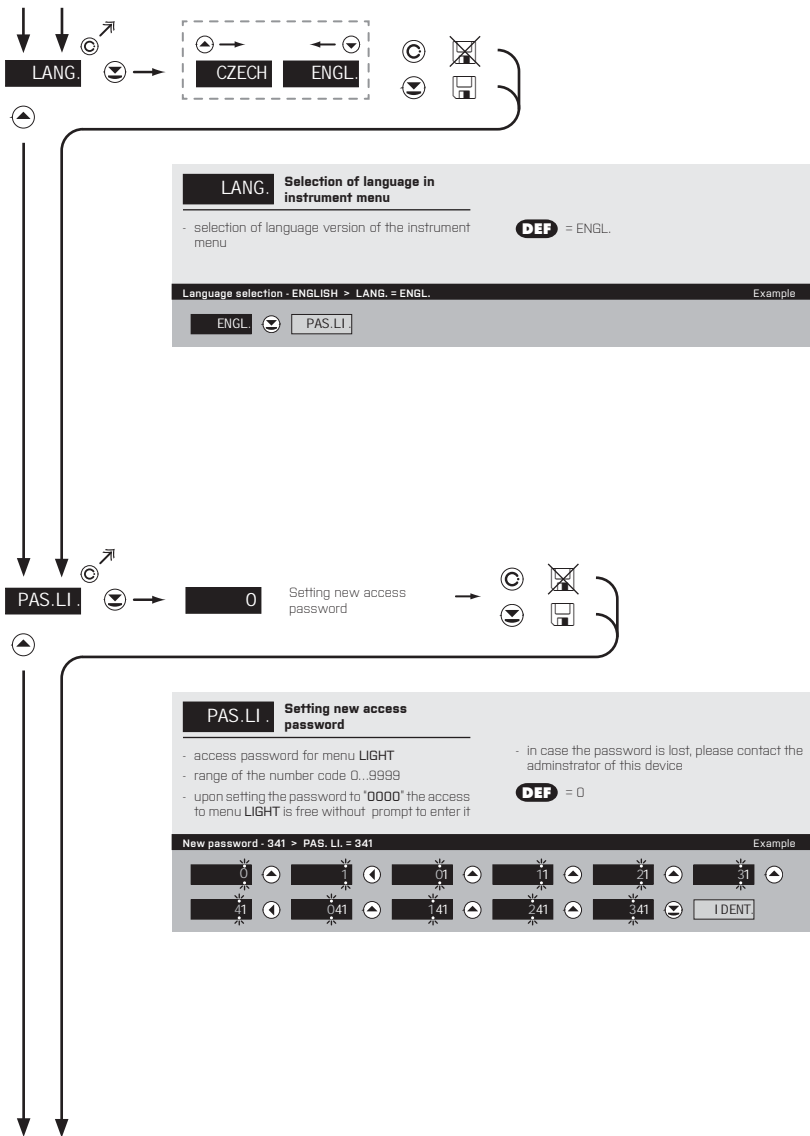

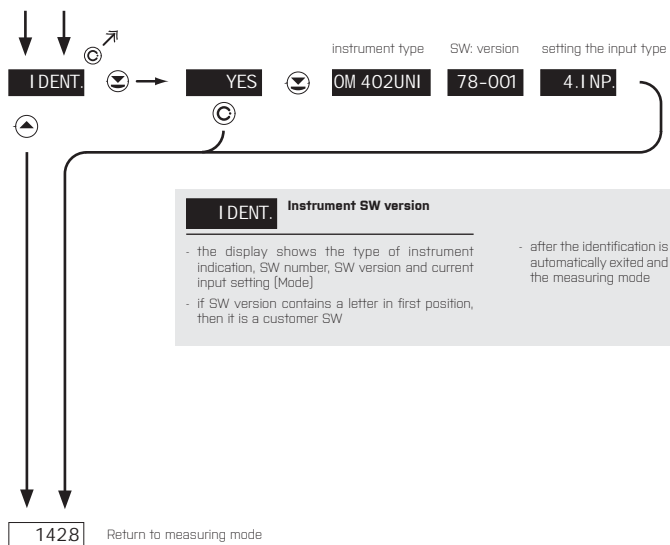



SETTING **PROFI**

For expert users

Complete instrument menu

Access is password protected

Possibility to arrange items of the **USER MENU**

Tree menu structure

6.0

SETTING "PROFI"

PROFI

Complete programming menu

- contains complete instrument menu and is protected by optional number code
- designed for expert users
- preset from manufacture is menu **LIGHT**

Switching over to "PROFI" menu



- access to **PROFI** menu
- authorization for access to **PROFI** menu does not depend on setting under item **SERVIC. > MENU**
- password protected access (unless set as follows under the item **SERVIC. > N. PASS. > PROFI =0**)




- access to menu selected under item **SERVIC. > MENU > LIGHT/PROFI**
- password protected access (unless set as follows under the item **SERVIC. > N. PASS. > LIGHT =0**)
- for access to **LIGHT** menu passwords for **LIGHT** and **PROFI** menu may be used



6. SETTING PROFI


6.1 SETTING "PROFI" - INPUT

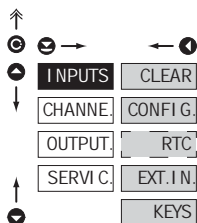

The primary instrument parameters are set in this menu

CLEAR	Resetting internal values
CONFIG.	Selection of measuring range and parameters
RTC	Setting date and time for option with RTC
EXT.IN.	Setting external inputs functions
KEYS	Assigning further functions to keys on the instrument

6.1.1 RESETTING INTERNAL VALUES

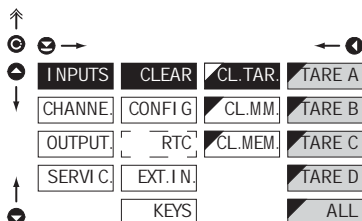

CLEAR	Resetting internal values
CL.TAR.	Tare resetting
TARE A	Tare resetting - Channel A
TARE B	Tare resetting - Channel B
TARE C	Tare resetting - Channel C
TARE D	Tare resetting - Channel D
ALL	Tare resetting - Channel A, B, C and D
CL.MM.	Resetting min/max value - resetting memory for the storage of minimum and maximum value achieved during measurement
CL.MEM.	Resetting the instrument memory - resetting memory with data measured in the 'RTC' mode - not in standard equipment

6.1.2a SELECTION OF MEASURING RATE

Navigation icons: ↑, ⓐ, →, ←, ⓑ, ↓, ⓓ

INPUTS	CLEAR	READ/S	40.0
CHANNE.	CONFIG.	INPUTS	20.0
OUTPUT.	RTC	IN.MOD.	10.0
SERVIC.	EXT.IN.	SWI TCH	5.0
	KEYS	TIM.SW.	2.0
		INP.1	1.0
		MODE 2	0.5
		MODE 3	0.2
		MODE 4	0.1

DEF

READ/S Selection of measuring rate

- measuring rate very significantly affects the number of active inputs "INPUTS" and evaluation mode "IN.MOD." (the factual measuring rates are listed in chapter Technical data)

40.0	40,0 measurements/s
20.0	20,0 measurements/s
10.0	10,0 measurements/s
5.0	5,0 measurements/s
2.0	2,0 measurements/s
1.0	1,0 measurement/s
0.5	0,5 measurements/s
0.2	0,2 measurements/s
0.1	0,1 measurements/s

6.1.2b SELECTION OF THE NUMBER OF ACTIVE INPUTS

Navigation icons: ↑, ⓐ, →, ←, ⓑ, ↓, ⓓ

INPUTS	CLEAR	READ/S	1. I NP.
CHANNE.	CONFIG.	INPUTS	2. I NP.
OUTPUT.	RTC	IN.MOD.	3. I NP.
SERVIC.	EXT.IN.	SWI TCH	4. I NP.
	KEYS	TIM.SW.	
		INP.1	
		MODE 2	
		MODE 3	
		MODE 4	

DEF


I INPUTS Selection of the number of active inputs

- measuring rate depends on the number of active inputs (the factual measuring rates are listed in chapter Technical data)

1. I NP.	Active input 1
2. I NP.	Active inputs 1 and 2
3. I NP.	Active inputs 1, 2 and 3
4. I NP.	Active inputs 1, 2, 3 and 4

6. SETTING PROFI

6.1.2c SELECTION OF MEASURING MODE FOR MULTICHANNEL INSTRUMENT

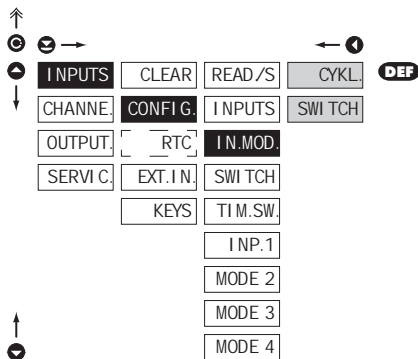

I N .MOD. Selection of measuring mode in multichannel instrument


CYKL. Cyclic measuring on all channels

- instrument evaluates measured data simultaneously on all channels
- selection of cycle very significantly affects measuring rate and depends also on the number of active inputs (factual measuring rates are listed in the chapter Technical data)

SWI TCH Measuring on selected channel

- instrument evaluates measured data only on selected channel

6.1.2d SELECTION OF INPUTS SWITCHING

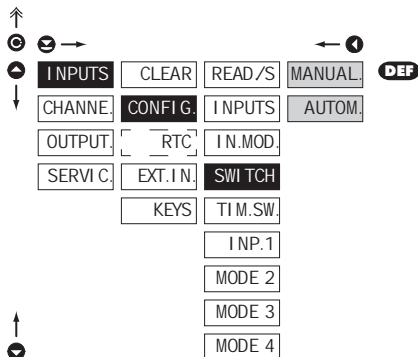

SWI TCH Selection of inputs switching


MANUAL. Manual inputs switching

- inputs switching is controlled by selected key on the front panel or selected external input

AUTOM. Automatic inputs switching

- inputs switching is automatic in a time period set in "TIM. SW."


6.1.2e SETTING THE PERIOD FOR INPUTS SWITCHING

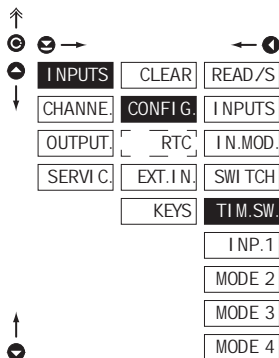**TIM.SW.** Setting the period for inputs switching

- setting the time period for projection of channels in automatic mode ode of inputs switching [AUTOM.]
- range of setting 0,5...99,9 s

DEF TIM.SW. = 2 s

6.1.2f SELECTION OF „INSTRUMENT“ TYPE FOR CHANNEL A

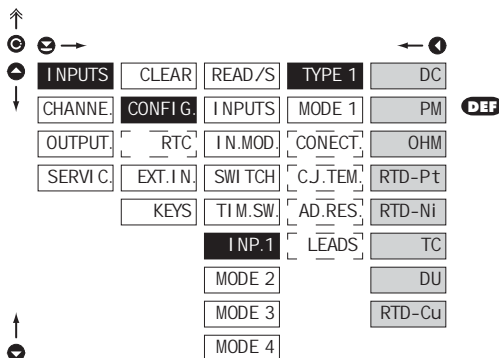**TYPE 1** Selection of „instrument“ type for channel A

- selection of particular type of "instrument" is bound to relevant dynamic items

DC	DC voltmeter
PM	Process monitor
OHM	Ohmmeter
RTD-Pt	Thermometer for Pt xxx
RTD-Ni	Thermometer for Ni xxx
TC	Thermometer pro thermocouples
DU	Display for linear potentiometers
RTD-Cu	Thermometer for Cu xxx

6. SETTING PROFI

6.1.2g

SELECTION OF MEASURING RANGE FOR CHANNEL A

↑
C →
←
↓

IN PUTS	CLEAR	READ/S	TYPE 1	60mV	DC	OHM	DEF
CHANNE.	CONF I G.	I N PUTS	MODE 1	150mV		100 R	
OUTPUT	RTC	I N .MOD	CONECT.	300mV		10 k	
SERV I C.	EXT .I N.	SWI TCH	C.J .TEM.	1200mV		100 k	
	KEYS	T I M .SW	AD .RES.			AUTO	
		I N P .1	LEADS				
		MODE 2				PM	
		MODE 3				0-5mA	
		MODE 4				0-20mA	
						RTD-Pt	
						EU-100	DEF
						EU-500	
						EU-1k0	
						US-100	
						RU-50	
						RU-100	
						RTD-Ni	
						50-1k	DEF
						62-1k	
						50-10k	
						62-10k	
						RTD-Cu	DEF
						428-50	
						428-01	
						426-50	
						426-01	
						DU	
						LI NPOT.	DEF
						T/C	
						T/C B	
						T/C E	
						T/C J	
						T/C K	DEF
						T/C N	
						T/C R	
						T/C S	
						T/C T	
						T/C L	

!

Switching in the mode
AUTO - "OHM"

0.1 kΩ > 1 kΩ	0.101 k
1 kΩ > 10 kΩ	1.010 k
10 kΩ > 100 kΩ	10.10 k
100 kΩ > 10 kΩ	9.900 k
10 kΩ > 1 kΩ	0.990 k
1 kΩ > 0.1 kΩ	0.099 k

When selecting the "AUTO" range, the items "MIN", "MAX", "P. TAR. A" will not be displayed in the "CHAN. A" setting

MODE 1 Selection of instrument measuring range

	Menu	Measuring range
DC	60 mV	±60 mV
	150 mV	±150 mV
	300 mV	±300 mV
	1200mV	±12 V
PM	0-5mA	0...5 mA
	0-20mA	0...20 mA
	4-20mA	4...20 mA
	0-2 V	±2 V
	0-5 V	±5 V
OHM	100 R	0...100 Ω
	1 k	0...1 kΩ
	10 k	0...10 kΩ
	100 k	0...100 kΩ
RTD-Pt	AUTO	Autorange
	EU-100	Pt 100 [3 850 ppm/°C]
	EU-500	Pt 500 [3 850 ppm/°C]
	EU-1k0	Pt 1000 [3 850 ppm/°C]
	US-100	Pt 100 [3 920 ppm/°C]
RTD-Ni	RU-50	Pt 50 [3 910 ppm/°C]
	RU-100	Pt 100 [3 910 ppm/°C]
	RTD-Cu	
T/C	428-50	Cu 50 [4 280 ppm/°C]
	428-01	Cu 1 00 [4 280 ppm/°C]
	426-50	Cu 50 [4 260 ppm/°C]
	426-01	Cu 100 [4 260 ppm/°C]
	Menu	Type of thermocouple
	T/C B	B
	T/C E	E
	T/C J	J
	T/C K	K
	T/C N	N
	T/C R	R
	T/C S	S
	T/C T	T
	T/C L	L

6.1.2h SELECTION OF TYPE OF SENSOR CONNECTION FOR CHANNEL A

RTD OHM T/C

↑

⊖ →

← ⊕

INPUTS	CLEAR	READ/S	TYPE 1	2-WIRE	DEF
CHANNE.	CONF.G.	INPUTS	MODE 1	3-WIRE	
OUTPUT.	RTC	I.N.MOD.	CONNECT.	4-WIRE	
SERVIC.	EXT.I.N.	SWI.TCH	AD.RES.		
	KEYS	TIM.SW.	LEADS.		
		INP.1			
		MODE 2			
		MODE 3			
		MODE 4			

↑

⊖

↑

⊖ →

← ⊕

INPUTS	CLEAR	READ/S	TYPE 1	INT1TC	
CHANNE.	CONF.G.	INPUTS	MODE 1	INT2TC	
OUTPUT.	RTC	I.N.MOD.	CONNECT.	EXT1TC	DEF
SERVIC.	EXT.I.N.	SWI.TCH	C.J.TEM.	EXT2TC	
	KEYS	TIM.SW.			
		INP.1			
		MODE 2			
		MODE 3			
		MODE 4			

↑

⊖

CONNECT. Selection of type of sensor connection

RTD OHM

2-WIRE 2-wire connection

3-WIRE 3-wire connection

4-WIRE 4-wire connection

T/C

INT1TC Measurement without reference thermocouple

- measuring cold junction at instrument brackets

INT2TC Measurement with reference thermocouple

- measuring cold junction at instrument brackets with anti-series connected reference thermocouple

EXT1TC Measurement without reference thermocouple

- the entire measuring set is working under invaried and constant temperature

EXT2TC Measurement with reference thermocouple

- when using compensation box

!


Method and procedure of setting the cold junctions is described in separate chapter on page 96

!

For thermocouple type "B" the items CONNECT. and C.J. TEM. are not available

6. SETTING PROFI

6.1.2i SETTING TEMPERATURE OF COLD JUNCTION

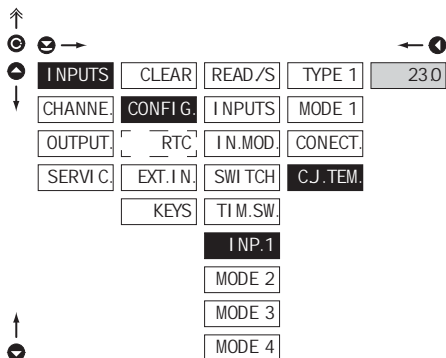
T/C

C.J. TEM. Setting temperature of cold junction

- range 0...99°C with compensation box

- **DEF** = 23°C

6.1.2j ZERO OFFSET OF THE MEASUREMENT RANGE

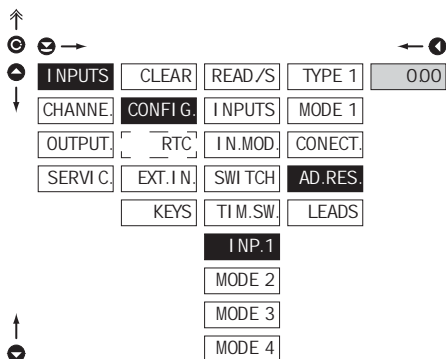RTD OHM

AD.RES. Offset of the beginning of the measuring range


- in cases when it is necessary to offset the beginning of the range by certain value, e.g. while using sensor in measuring head

- entered directly in Ohm (0...9999)

- **DEF** = 0

6.1.2k COMPENSATION OF 2-WIRE CONDUCT


RTD OHM

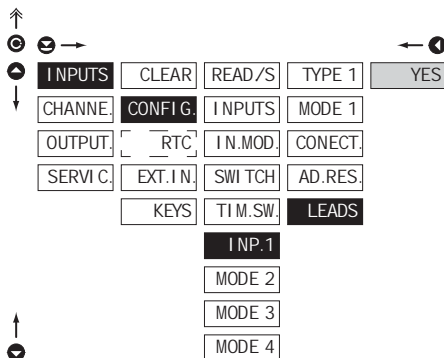**LEADS** Compensation of 2-wire conduct

- for measurement accuracy it is necessary to perform compensation of conduct always in case of 2-wire connection
- prior confirmation of the displayed prompt 'YES' it is necessary to substitute the sensor at the end of the conduct by a short-circuit

DEF = 0

6.1.2l SELECTION OF MEASURING RANGE FOR CHANNEL B

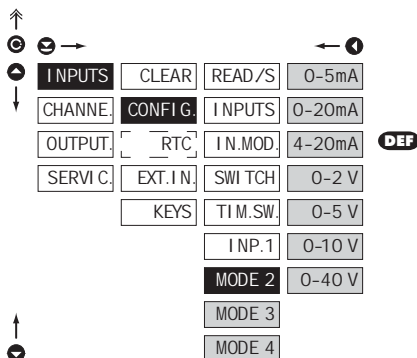**MODE 2** Selection of instrument measuring range for channel B


Menu	Measuring range
0-5mA	0...5 mA
0-20mA	0...20 mA
4-20mA	4...20 mA
0-2 V	±2 V
0-5 V	±5 V
0-10 V	±10 V
0-40 V	±40 V
Er:4-20	4...20 mA, s chybovým hlášením „podtečení“ při signálu menším než 3,36 mA

*

Setting procedure is identical for **MODE 3** and **MODE 4**

6. SETTING PROFI

6.1.3 SETTING THE REAL TIME CLOCK

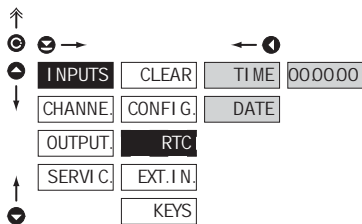


RTC Setting the real time clock [RTC]

TIME Time setting
- format 23.59.59

DATE Date setting
- format DD.MM.YY

6.1.4a EXTERNAL INPUT FUNCTION SELECTION

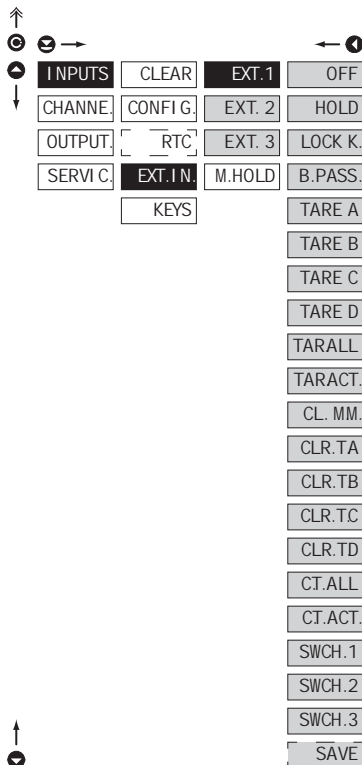

EXT.I.N. External input function selection

OFF Input is off

HOLD Activation of HOLD

LOCK K. Locking keys on the instrument

B.PASS. Activation of locking access into programming menu
LIGHT/PROFI

TARE - Tare activation
- TARE A, B, C, D, All, Active

CL.MM. Resetting min/max value

CLR.- Tare resetting
- TARE A, B, C, D, All, Active

SWCH.1 Successive switching of channel projection

SWCH.2 BCD switching of channel projection - EXT. 1,2
- for operation see the table
- following this choice the setting for 'EXT. 2' is automatically restricted

SWCH.3 BCD switching of channel projection - EXT. 1,2, 3
- for operation see the table
- following this choice the setting for 'EXT. 2' and 'EXT. 3' is automatically restricted

SAVE Activation of measured data record in instrument memory (not in standard equipment)

Table with operation of external inputs


Channel	Ext 1	Ext 2	Ext 3
FIL. A	0	0	
FIL. B	0	1	
FIL. C	1	0	
FIL. D	1	1	
MF	0	0	1
Min	0	1	1
Max	1	0	1
Max	1	1	1

- **DEF** EXT. 1 > HOLD
- **DEF** EXT. 2 > LOCK
- **DEF** EXT. 3 > SWCH. 1

*

Procedure identical for EXT. 2 and EXT. 3.

6.1.4b SELECTION OF FUNCTION "HOLD"

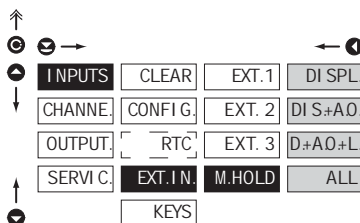

M.HOLD


Selection of function "HOLD"

- DI SPL.** "HOLD" locks only the value displayed
- DI S+AO.** "HOLD" locks the value displayed and on AD
- D+AO+L.** "HOLD" locks the value displayed, on AD and limit evaluation
- ALL** "HOLD" locks the entire instrument

6. SETTING PROFI

6.1.5a

OPTIONAL ACCESSORY FUNCTIONS OF THE KEYS

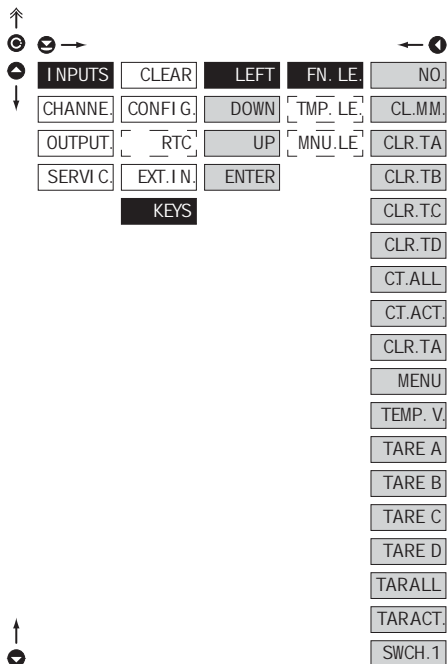

Preset values of the control keys **DEF**

LEFT	Channel B, after filtration
UP	Channel C, after filtration
DOWN	Channel D, after filtration
ENTER	Channel switching "SWCH. 1"

FN. LE. Assigning further functions to instrument keys

- „FN. LE.“ > executive functions

NO Key has no further function

CL.MM. Resetting min/max value

CLR.T- Tare resetting

- TARE A, B, C, D, All, Active

MENU Direct access into menu on selected item

- after confirmation of this selection the "MENU" item is displayed on superior menu level, where required selection is performed

TEMP. V. Temporary projection of selected values

- after confirmation of this selection the item "TEMPOR." is displayed on superior menu level, where required selection is performed

TARE - Tare function activation

- TARE A, B, C, D, All, Active

SWCH.1 Successive switching of channel projection



Setting is identical for LEFT, DOWN, UP and ENTER



The channel in use is the one permanently displayed

6.1.5b

OPTIONAL ACCESSORY FUNCTIONS OF THE KEYS - TEMPORARY PROJECTION

**TMP. LE.** Temporary projection of selected item

- "Temporary" projection of selected value is displayed for the time of keystroke
- "Temporary" projection may be switched to permanent by pressing **Ⓞ** + "Selected key", this holds until the stroke of any key


NO	Temporary projection is off
CHAN. -	Temporary projection of "Channel A, B, C or D" value
FIL. -	Temporary projection of "Channel A, B, C or D" value after processing digital filters
MAT. FN.	Temporary projection of "Mathematic functions" value
MIN	Temporary projection of "Min. value"
MAX	Temporary projection of "Max. value"
LIM 1	Temporary projection of "Limit 1" value
LIM 2	Temporary projection of "Limit 2" value
LIM 3	Temporary projection of "Limit 3" value
LIM 4	Temporary projection of "Limit 4" value
TIME	Temporary projection of "TIME" value
DATE	Temporary projection of "DATE" value
TARE -	Temporary projection of "TARE" value
- TARE A, B, C, D, All, Active	
P. T. -	Temporary projection of "P. TARE" value
- TARE A, B, C, D, Active	
COLD. J.	Temporary projection of "CJC" value

!
Setting is identical for **LEFT**, **DOWN**, **UP** and **ENTER**

6. SETTING PROFI

6.1.5c

OPTIONAL ACCESSORY FUNCTIONS OF THE KEYS - DIRECT ACCESS TO ITEM

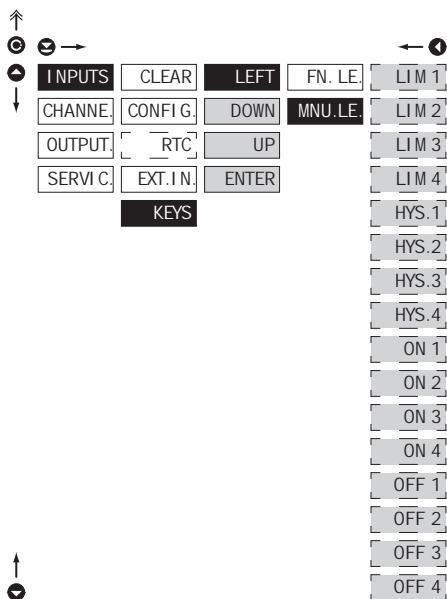

MNU. LE. Assigning access to selected menu item

-, „MNU. LE.“ > direct access into menu on selected item

LIM 1	Direct access to item "LIM 1"
LIM 2	Direct access to item "LIM 2"
LIM 3	Direct access to item "LIM 3"
LIM 4	Direct access to item "LIM 4"
HYS. 1	Direct access to item "HYS. 1"
HYS. 2	Direct access to item "HYS. 2"
HYS. 3	Direct access to item "HYS. 3"
HYS. 4	Direct access to item "HYS. 4"
ON 1	Direct access to item "ON 1"
ON 2	Direct access to item "ON 2"
ON 3	Direct access to item "ON 3"
ON 4	Direct access to item "ON 4"
OFF 1	Direct access to item "OFF 1"
OFF 2	Direct access to item "OFF 2"
OFF 3	Direct access to item "OFF 3"
OFF 4	Direct access to item "OFF 4"




Setting is identical for LEFT, DOWN, UP and ENTER



6. SETTING PROFI

6.2 SETTING "PROFI" - CHANNELS

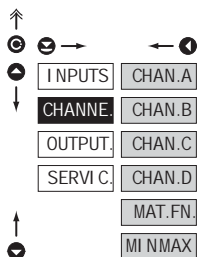


The primary instrument parameters are set in this menu

CHAN.A	Setting parameters of measuring "Channel A"
CHAN.B	Setting parameters of measuring "Channel B"
CHAN.C	Setting parameters of measuring "Channel C"
CHAN.D	Setting parameters of measuring "Channel D"
MAT.FN.	Setting parameters of mathematic functions
MI NMAX	Selection of access and evaluation of Min/max value

6.2.1a DISPLAY PROJECTION

DC PM DU OHM

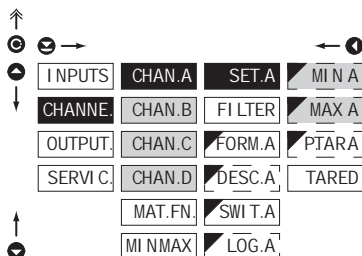

SET.A Setting display projection

MI N A Setting display projection for minimum value of input signal


- range of the setting is : -99999...999999
- **DEF** = 0

MAX A Setting display projection for maximum value of input signal

- range of the setting is : -99999...999999
- **DEF** = 100

6.2.1b SETTING FIXED TARE

DC PM DU OHM

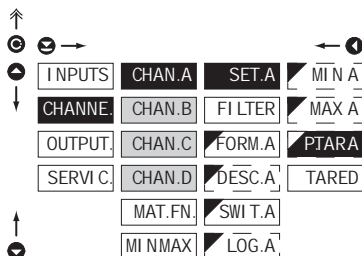

P.TAR.A Setting "Fixed tare" value

- setting is designed for the event when it is necessary to firmly shift the beginning of the range by known size
- when setting [P.TAR.A > 0] display shows "T" symbol
- range of the setting is : 0...999999

- **DEF** = 0

6.2.1c SELECTING WHERE TARE WILL BE APPLIED

↑	←	IN PUTS	CHAN. A	SET. A	MI N A	CHAN. A	DEF
↓	→	CHANNE.	CHAN. B	FI LTER	MA X A	FI L A	
		OUT PUT.	CHAN. C	FOR M. A	PJARA		
		SERVI C.	CHAN. D	DESC. A	TARE D		
			MAT. FN.	SWI T. A			
			MI N MAX	LOG. A			

TARE D Selecting the position of tare

CHAN. A The value will be tared before linearisation and digital filter

FI L A The value will be tared after linearisation and digital filter

! Setting is identical for Channel B, C and D

6.2.1d DIGITAL FILTERS

↑	←	IN PUTS	CHAN. A	SET. A	MOD. FA	NO	DEF
↓	→	CHANNE.	CHAN. B	FI LTER	CON. FA	AVER	
		OUT PUT.	CHAN. C	FOR M. A		FLOAT	
		SERVI C.	CHAN. D	DESC. A		EXPON	
			MAT. FN.	SWI T. A		ROUND	
			MI N MAX	LOG. A			

MOD. FA Selection of digital filters

- at times it is useful for better user projection of data on display to modify it mathematically and properly, wherefore the following filters may be used

NO Filters are off

AVER. Measured data average

- arithmetic average from given number [CON. FA] of measured values
- range 2...100

FLOAT. Selection of floating filter

- floating arithmetic average from given number [CON. FA] of measured data and updates with each measured value
- range 2...30

EXPON. Selection of exponential filter

- integration filter of first prvnho grade with time constant [CON. FA] measurement
- range 2...100


ROUND Measured value rounding

- is entered by any number, which determines the projection step (e.g. CON. FA = 2.5 > display 0, 2.5, 5,...)

CON. FA Setting constants

- this menu item is always displayed after selection of particular type of filter

DEF = 2

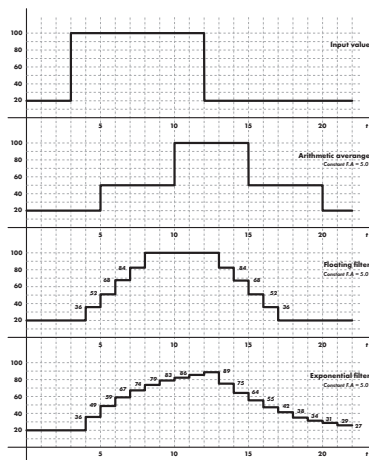

6. SETTING PROFI

6.2.1e PROJECTION FORMAT - POSITIONING OF DECIMAL POINT

↑	⊖ →		← ⊕	
⊖	IN PUTS	CHAN. A	SET. A	000000
⊕	CHANNE.	CHAN. B	FIL TER	00000.0
↓	OUT PUT.	CHAN. C	FORM. A	0000.00
	SERV. C.	CHAN. D	DESC. A	000.000
		MAT. FN.	SWI T. A	00.0000
↑		MI NMAX	LOG. A	0.00000
⊖			FLOA. P.	

!
Setting is identical for Channel B, C and D

FORM.A Selection of decimal point

- the instrument allows for classic projection of a number with positioning of the DP as well as projection with floating DP, allowing to display a number in its most exact form „FLOA.P.“

000000. Setting DP - XXXXXX.

00000.0 Setting DP - XXXXX.x

- **DEF** > **RTD** / **T/C**
0000.00 Setting DP - XXXX.xx

- **DEF** > **DC** **PM** **DU** **OHM**
000.000 Setting DP - XXX.xxx

00.0000 Setting DP - XX.xxxx

0.00000 Setting DP - X.xxxxx

FLOA.P. Floating DP

6.2.1f PROJECTION OF DESCRIPTION - THE MEASURING UNITS

↑	⊖ →		← ⊕
⊖	IN PUTS	CHAN. A	SET. A
⊕	CHANNE.	CHAN. B	FIL TER
↓	OUT PUT.	CHAN. C	FORM. A
	SERV. C.	CHAN. D	DESC. A
		MAT. FN.	SWI T. A
↑		MI NMAX	LOG. A
⊖			

!
Setting is identical for Channel B, C and D

DESC.A Setting projection of descrip. for "Channel A"

- projection of measured data may be extended (at the expense of the number of displayed places) by two characters for description

- description is set by shifted ASCII code, when two first places show the set description and two last characters their code in period 0...95


- description is cancelled by code 00

- **RTD** / **T/C** **DEF** = °C

- **DC** **PM** **DU** **OHM** **DEF** =none

!
Table of signs on page 99

6.2.1g SELECTION OF CHANNEL PROJECTION UPON SWITCHING

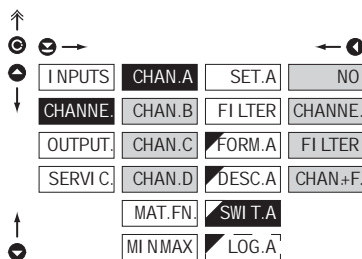
**SWI T.A** Selection of channel projection upon switching

- setting in this item enables the user to select individual measuring channels which will be displayed upon switching the channel functions „SWIT. A“

- | | |
|-----------|--|
| NO | Projection restricted |
| CHANNE. | "Channel A" will be displayed |
| FI LTER | "Channel A" after modification by digital filter |
| CHAN.+ F. | Will be displayed "Channel A" and subsequently also "Channel A" after modification by digital filter A |

Setting is identical for Channel B, C and D

6.2.1h SELECTION OF STORING DATA INTO INSTRUMENT MEMORY

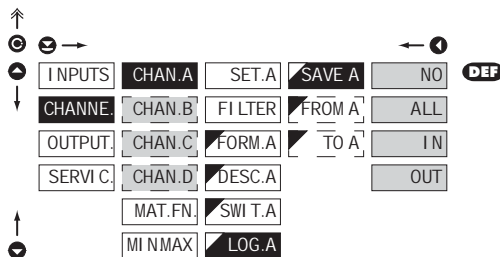**SAVE.A** Selection of storing data into instrument memory

- by selection in this item you allow to register values into instrument memory
 - another setting in item "OUTPUT. > MEMORY" (not in standard experiment)

- | | |
|-----|---|
| NO | Measured data is not stored |
| ALL | Measured data is stored in memory |
| IN | Only data measured within the set interval is stored in memory |
| OUT | Only data measured outside the set interval is stored in memory |

FROM A Setting the initial interval value

- setting range: -99999...999999

TO A Setting the final interval value

- setting range: -99999...999999

Setting is identical for Channel B, C and D

6. SETTING PROFI

6.2.5a MATHEMATIC FUNCTIONS - INPUT SELECTION

↑	←	→	←	↓
⊖	⊕		⊖	
⊕	INP.U.TS	CHAN.A	INP.M	OFF
⊖	CHANNE.	CHAN.B	MATH.F	DEF
	OUTPUT	CHAN.C	CON.A	FIL.A
	SERVI.C	CHAN.D	CON.B	FIL.B
		MAT.FN.	CON.C	FIL.C
		MI NMAX	CON.D	FIL.D
			CON.E	ALL.F
			CON.F	
			FORM.M	
			DESC.M	
			SWI T.M	
			LOG.M	

INP.M Selection of input for calculation of mathematic function

- selection of value from which the mathematic function will be calculated

OFF	Mathematic functions are off
FIL.A	From "Channel A" after modification by digital filter
FIL.B	From "Channel B" after modification by digital filter
FIL.C	From "Channel C" after modification by digital filter
FIL.D	From "Channel D" after modification by digital filter
ALL.F	From "Channels A, B, C, D" after modification y digital filters

6.2.5b MATEMATICKÉ FUNKCE

↑	←	→	←	↓
⊖	⊕		⊖	
⊕	INP.U.TS	CHAN.A	INP.M	MULTI.N
⊖	CHANNE.	CHAN.B	MATH.F	DEF
	OUTPUT	CHAN.C	CON.A	
	SERVI.C	CHAN.D	CON.B	
		MAT.FN.	CON.C	
		MI NMAX	CON.D	SUMA
			CON.E	DEF
			CON.F	DI VI DE
			FORM.M	
			DESC.M	
			SWI T.M	
			LOG.M	

MATH.F Selection of mathematic functions

On selecting „FIL. -“ in item „INP.M.“

MULTI.N Multinomial

$$Ax^5 + Bx^4 + Cx^3 + Dx^2 + Ex + F$$

On selecting „ALL.F.“ in item „INP.M.“

SUMA Sum of the values from channels (inputs)

$$[A \times KA + B \times KB + C \times KC + D \times KD] \times E + F$$


DI VI DE Quotient of values from channels (inputs)

$$[A \times KA + C \times KC] / [B \times KB + D \times KD] \times E + F$$

CON.- Setting constants for calculation of mat.functions

- this menu is displayed only after selection of given mathematic function

6.2.2c MATHEMATIC FUNCTIONS - DECIMAL POINT

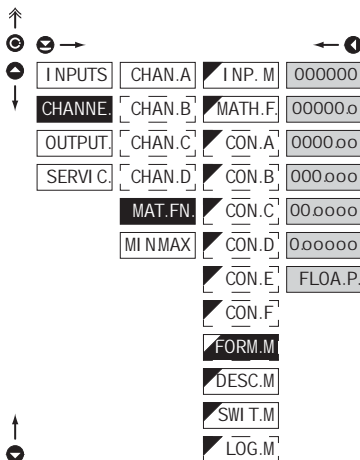
**FORM.M.** Selection of decimal point

- the instrument allows for classic projection of a number with positioning of the DP as well as projection with floating DP, allowing to display a number in its most exact form „FLOA. P.“

000000.	Setting DP - XXXXXX.
00000.0	Setting DP - XXXXX.x
0000.00	Setting DP - XXXX.xx
000.000	Setting DP - XXX.xxx
00.0000	Setting DP - XX.xxxx
0.00000	Setting DP - X.xxxxx
FLOA.P.	Floating DP

- **DEF**

6.2.2d MATHEMATIC FUNCTIONS - MEASURING UNITS

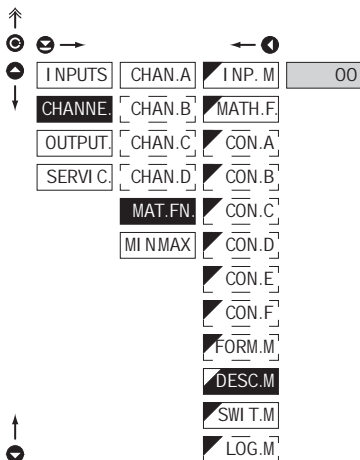**DESC.M.** Setting projection of description for "MAT. FN"

- projection of measured data may be extended (at the expense of the number of displayed places) by two characters for description
- description is set by shifted ASCII code, when two first places show the set description and two last characters their code in period 0...95
- description is cancelled by code 00

- **DEF** = no description

!

Table of signs on page 99

6. SETTING PROFI

6.2.2a MATHEMATIC FUNCTIONS - SELECTION OF CHANNEL PROJECTION UPON SWITCHING

Navigation icons: ↑, Ⓞ, ☺, →, ←, Ⓚ, ↓

INPUTS	CHAN.A	INP.M	NO	DEF
CHANNE.	CHAN.B	MATH.F	YES	
OUTPUT	CHAN.C	CON.A		
SERVI.C	CHAN.D	CON.B		
	MAT.FN.	CON.C		
	MI NMAX	CON.D		
		CON.E		
		CON.F		
		FORM.M		
		DESC.M		
		SWI T.M		
		LOG.M		

SWI T.M Selection of channel projection upon switching

- setting in this item enables the user to select individual measuring channels which will be displayed upon switching the channel functions, SWI T.M

NO Projection restricted

YES Projection permitted

6.2.2f MATHEMATIC FUNCTIONS - SELECTION OF STORING DATA INTO INSTRUMENT MEMORY

Navigation icons: ↑, Ⓞ, ☺, →, ←, Ⓚ, ↓

INPUTS	CHAN.A	INP.M	SAVE M	NO	DEF
CHANNE.	CHAN.B	MATH.F	FROM M	ALL	
OUTPUT	CHAN.C	CON.A	TO M	IN	
SERVI.C	CHAN.D	CON.B		OUT	
	MAT.FN.	CON.C			
	MI NMAX	CON.D			
		CON.E			
		CON.F			
		FORM.M			
		DESC.M			
		SWI T.M			
		LOG.M			

LOG.M Selection of storing data into instrument memory

- by selection in this item you allow to register values into instrument memory
 - another setting in item "OUTPUT. > MEMORY" (not in standard experiment)

NO Measured data is not stored

ALL Measured data is stored in memory

IN Only data measured within the set interval is stored in memory

OUT Only data measured outside the set interval is stored in memory


FROM M Setting the initial interval value

- setting range: -99999...999999

TO M Setting the final interval value

- setting range: -99999...999999

6.2.3 SELECTION OF EVALUATION OF MIN/MAX VALUE

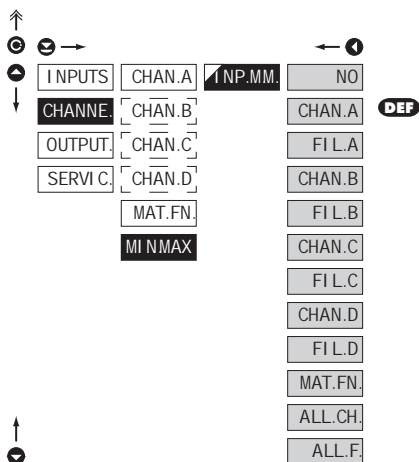


I NPUTS Selection of evaluation of min/max value

- selection of value from which the min/max value will be calculated

NO	Evaluation of min/max value is off
CHAN.A	From "Channel A"
FIL.A	From "Channel A" after digital filters processing
CHAN.B	From "Channel B"
FIL.B	From "Channel B" after digital filters processing
CHAN.C	From "Channel C"
FIL.C	From "Channel C" after digital filters processing
CHAN.D	From "Channel D"
FIL.D	From "Channel D" after digital filters processing
MAT.FN.	From "Mathematic functions"
ALL.CH.	From "Channel A, B, C and D"
ALL.F.	From "Channel A, B, C and D" after digital filters processing

6. SETTING PROFI


6.3 SETTING „PROFI“ - OUTPUTS

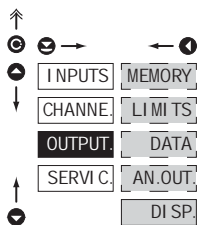

In this menu it is possible to set parameters of the instrument output signals

MEMORY	Setting data logging into memory
LIMITS	Setting type and parameters of limits
DATA	Setting type and parameters of data output
AN.OUT	Setting type and parameters of analog output
DISP.	Setting display projection and brightness

6.3.1a SELECTION OF MODE OF DATA LOGGING INTO INSTRUMENT MEMORY

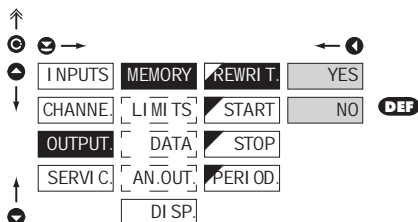


REWRITE Selection of the mode of data logging

- selection of the mode in the event of full instrument memory

NO	Rewriting values prohibited
YES	Rewriting values permitted, the oldest get rewritten by the latest

6.3.1b SETTING DATA LOGGING INTO INSTRUMENT MEMORY - RTC

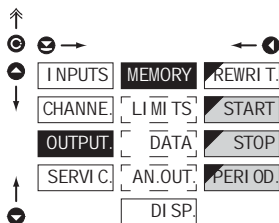**START** Start of data logging into instrument memory

- time format HH:MM:SS

STOP Stop data logging into instrument memory


- time format HH:MM:SS

PERIOD Period of data logging into instrument memory


- determines the period in which values will be logged in an interval delimited by the time set under items **START** and **STOP**
- time format HH:MM:SS
- records are made on a daily basis in selected interval and period
- item not displayed if "SAVE" is selected in menu (INPUT > EXT. IN.)

RTC

The lowest recording rate possible is once a day, the highest is every second. Under exceptional circumstances it is possible to set the rate to 8 times per second by entering the recording period as 00:00:00. However, this mode is not recommended due to the memory overload. Recordings are realised in a timeframe of one day and are repeated periodically every following day. Recordings can take place either inside or outside of selected time intervals. The duration of re-writing can be determined by the number of channels recorded as well as by the recording rate.

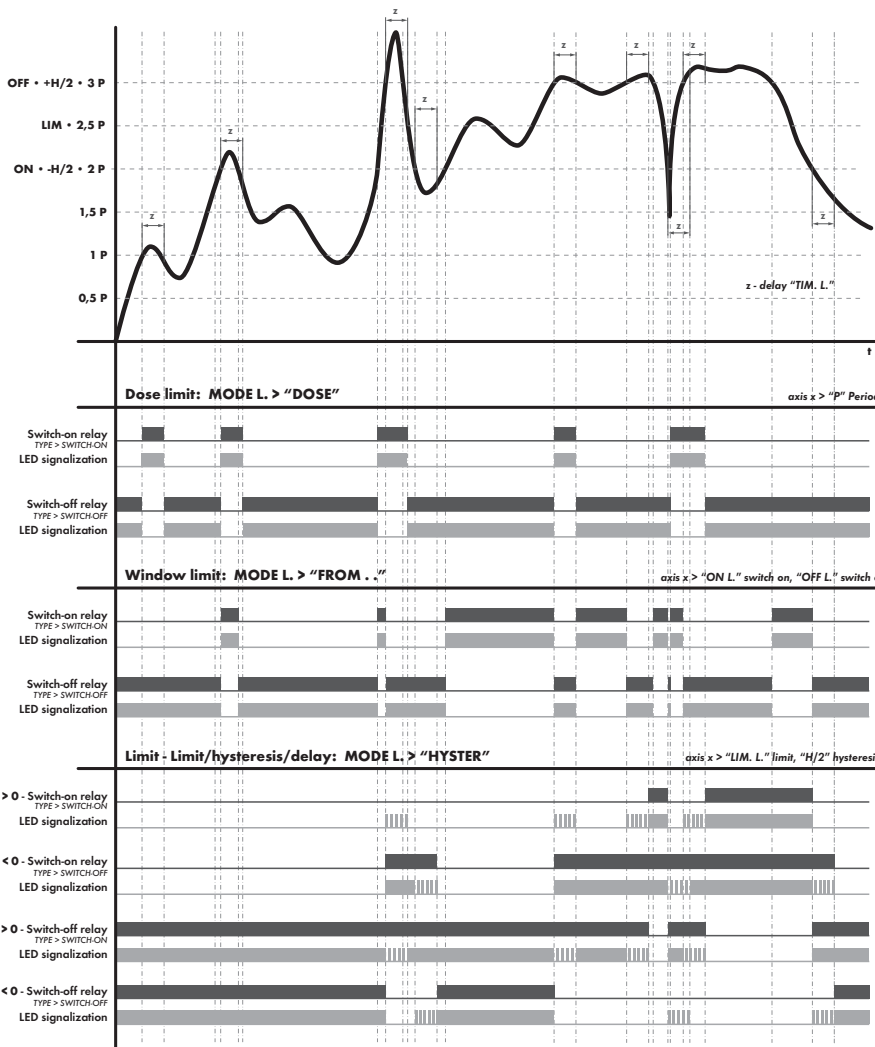

6.3.2a SELECTION OF INPUT FOR LIMITS EVALUATION

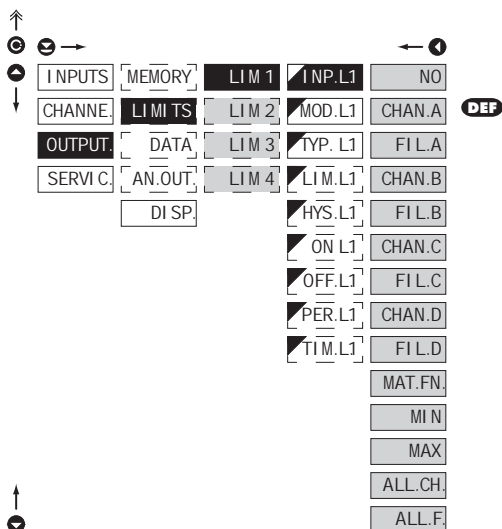**INP.L1** Selection evaluation of limits

- selection of value from which the limit will be evaluated


NO	Limit evaluation is off
CHAN.A	From "Channel A"
FI.L.A	From "Channel A" after digital filters processing
CHAN.B	From "Channel B"
FI.L.B	From "Channel B" after digital filters processing
CHAN.C	From "Channel C"
FI.L.C	From "Channel C" after digital filters processing
CHAN.D	From "Channel D"
FI.L.D	From "Channel D" after digital filters processing
MAT.FN.	From "Mathematic functions"
MIN	From "Min. value"
MAX	From "Max. value"
ALL.CH.	From "Channel A, B, C and D"
ALL.F.	From "Channel A, B, C and D" after digital filters processing



Setting is identical for LIM 1, LIM 2, LIM 3 and LIM 4

6. SETTING PROFI

6.3.2b SELECTION OF TYPE OF LIMIT

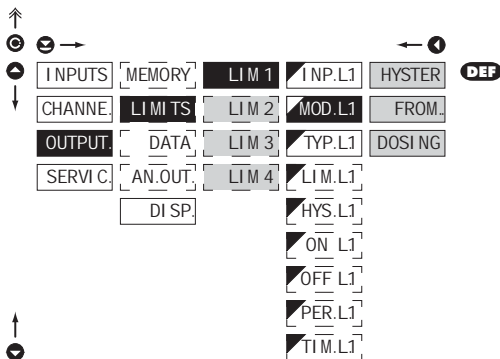

MOD.L1 Selection the type of limit

HYSTER Limit is in mode "Limit, hysteresis, delay"

- for this mode the parameters of "LIM.L1" are set, at which the limit will shall react, "HYS.L1" the hysteresis range around the limit [LIM ±1/2 HYS] and time "TIM.L1" determining the delay of relay switch-on

FROM.. Frame limit

- for this mode the parameters are set for interval "ON.L1" the relay switch-on and "OFF.L1" the relay switch-off


DOSI NG Dose limit (periodic)

- for this mode the parameters are set for "PER.L1" determining the limit value as well as its multiples at which the output is active and "TIM.L2" indicating the time during which is the output active



Setting is identical for LIM 1, LIM 2, LIM 3 and LIM 4

6.3.2c SELECTION OF TYPE OF OUTPUT

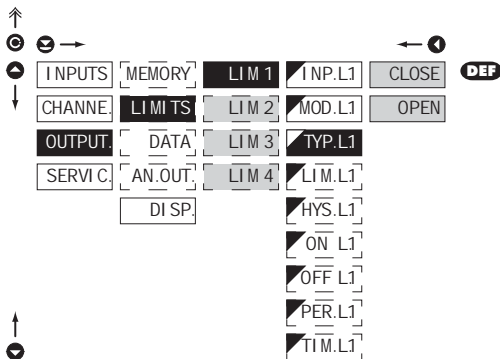

TYP.L1 Selection of type of output

CLOSE Output switches on when condition is met


OPEN Output switches off when condition is met



Setting is identical for LIM 1, LIM 2, LIM 3 and LIM 4

6.3.2d

SETTING VALUES FOR LIMITS EVALUATION

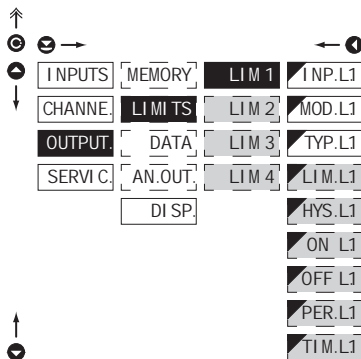**LIM.L1**

Setting limit for switch-on

- for type "HYSTER"

HYS.L1

Setting hysteresis

- for type "HYSTER"
- indicates the range around the limit (in both directions, LIM. \pm 1/2 HYS.)

ON.L1

Setting the outset of the interval of limit switch-on

- for type "FROM.."

OFF.L1

Setting the end of the interval of limit switch-on

- for type "FROM.."

PER.L1

Setting the period of limit switch-on

- for type "DOSING"

TIM.L1

Setting the time switch-on of the limit

- for type "HYSTER" and "DOSING"
- setting within the range: $\pm 0...99,9$ s
- positive time \rightarrow relay switches on after crossing the limit (LIM.L1) and the set time (TIM.L1)
- negative time \rightarrow relay switches off after crossing the limit (LIM.L1) and the set negative time (TIM.L1)



Setting is identical for LIM 1, LIM 2, LIM 3 and LIM 4

6. SETTING PROFIBUS

6.3.3a SELECTION OF DATA OUTPUT BAUD RATE

Navigation diagram for setting the baud rate. The menu structure is as follows:

- IN PUTS
- MEMORY
- BAUD 600
- CHANNE
- LI MI TS
- ADDR 1200
- OUTPUT
- DATA
- AD-MOD 2400
- SERVIC
- AN_OUT
- ADR.PB 4800
- DI SP
- PROT 9600 (DEF)
- 19200
- 38400
- 57600
- 115200
- 230400

BAUD	Selection of data output baud rate
600	Rate - 600 Baud
1200	Rate - 1 200 Baud
2400	Rate - 2 400 Baud
4800	Rate - 4 800 Baud
9600	Rate - 9 600 Baud
19200	Rate - 19 200 Baud
38400	Rate - 38 400 Baud
57600	Rate - 57 600 Baud
115200	Rate - 115 200 Baud
230400	Rate - 230 400 Baud


6.3.3b SETTING INSTRUMENT ADDRESS

Navigation diagram for setting the instrument address. The menu structure is as follows:

- IN PUTS
- MEMORY
- BAUD 0
- CHANNE
- LI MI TS
- ADDR
- OUTPUT
- DATA
- AD-MOD
- SERVIC
- AN_OUT
- ADR.PB
- DI SP
- PROT

ADDR.	Setting instrument address
-	setting in range 0...31
- DEF	= 00
AD-MOD.	Setting instrument address - MODBUS
-	setting in range 1..247
- DEF	= 1
ADR.PB.	Setting instrument address - PROFIBUS
-	setting in range 1..127
- DEF	= 19

6.3.3c SELECTION OF DATA OUTPUT PROTOCOL

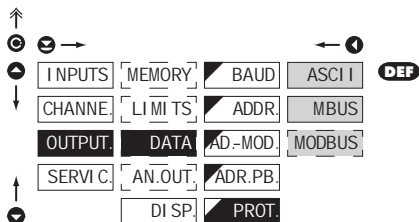

PROT. Selection of data output protocol


ASCII Data protocol
ASCII

M.BUS Data protocol
DIN MessBus

MODBUS Data protocol
MODBUS-RTU

- option is available only for RS 485

6.3.4a SELECTION OF INPUT FOR ANALOG OUTPUT

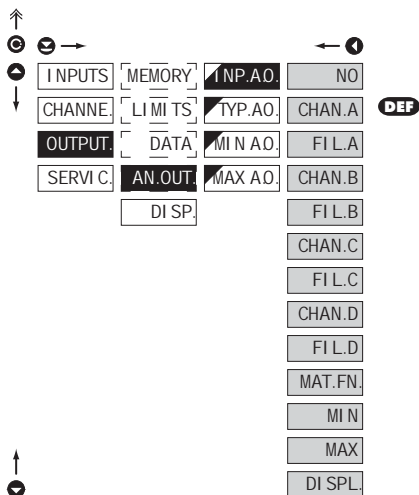

I NP.AO. Selection evaluation analog output

- selection of value from which the analog output will be evaluated

NO AD evaluation is off

CHAN.A From "Channel A"

FI L.A From "Channel A" after
digital filters processing

CHAN.B From "Channel B"

FI L.B From "Channel B" after
digital filters processing

CHAN.C From "Channel C"

FI L.C From "Channel C" after
digital filters processing

CHAN.D From "Channel D"

FI L.D From "Channel D" after
digital filters processing

MAT.FN. From "Math.functions"


MI N From "Min.value"

MAX From "Max.value"

DI SPL. From "Permanently
projected display value"

6. SETTING PROFI

6.3.4b SELECTION OF THE TYPE OF ANALOG OUTPUT

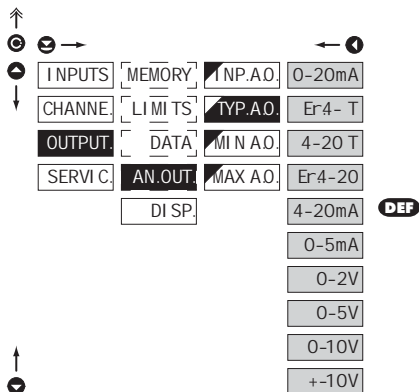

TYP.A.O. Selection of the type of analog output

0-20mA Type - 0...20 mA

Er4-T Type - 4...20 mA with indication

- with broken loop detection and indication of error statement (< 3.6 mA)

4-20T Type - 4...20 mA with indication

- with broken loop detection (< 3.6 mA)

Er4-20 Type - 4...20 mA with indication

- with indic. of error statement (< 3.6 mA)

4-20mA Type - 4...20 mA

0-5mA Type - 0...5 mA


0-2V Type - 0...2 V

0-5V Type - 0...5 V

0-10V Type - 0...10 V

+10V Type - ± 10 V

6.3.4c SETTING THE ANALOG OUTPUT RANGE

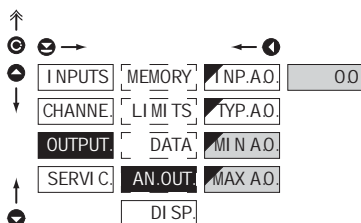

AN.OUT. Setting the analog output range

- analog output is isolated and its value corresponds with displayed data. It is fully programmable, i.e. it allows to assign the AD limit points to two arbitrary points of the entire measuring range

MIN.A.O. Assigning the display value to the beginning of the AD range

- range of the setting: -99999...999999


- DEF = 0

MAX.A.O. Assigning the display value to the end of the AD range

- range of the setting: -99999...999999

- DEF = 100


6.3.5a SELECTION OF INPUT FOR DISPLAY PROJECTION

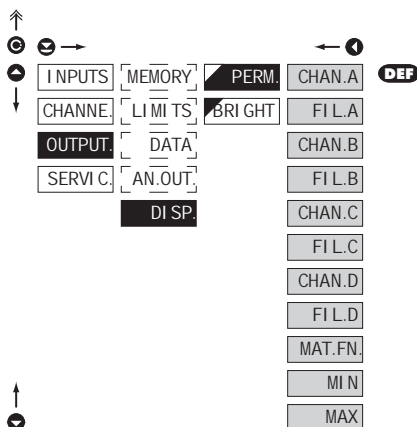**PERM.** Selection display projection

- selection of value which will be shown on the instrument display

CHAN.A	From "Channel A"
FI L A	From "Channel A" after digital filters processing
CHAN.B	From "Channel B"
FI L B	From "Channel B" after digital filters processing
CHAN.C	From "Channel C"
FI L C	From "Channel C" after digital filters processing
CHAN.D	From "Channel D"
FI L D	From "Channel D" after digital filters processing
MAT.FN.	From "Math.functions"
MI N	From "Min.value"
MAX	From "Max.value"

6.3.5b SELECTION OF DISPLAY BRIGHTNESS

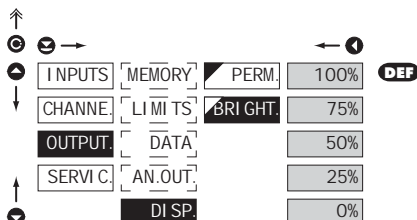
**BRI GHT** Selection of display brightness

- by selecting display brightness we may appropriately react to light conditions in place of instrument location

0%	Display is off
25%	Display brightness - 25%
50%	Display brightness - 50%
75%	Display brightness - 75%
100%	Display brightness - 100%

6. SETTING PROFI


6.4 SETTING "PROFI" - SERVIS

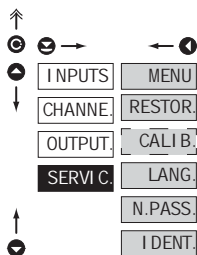

The instrument service functions are set in this menu

MENU	Selection of menu type LIGHT/PROFI
RESTOR.	Restore instrument manufacture setting and calibration
CALI B	Input range calibration for „DU“ version
LANG.	Language version of instrument menu
N.PASS.	Setting new access password
I DENT.	Instrument identification

6.4.1 SELECTION OF TYPE OF PROGRAMMING MENU

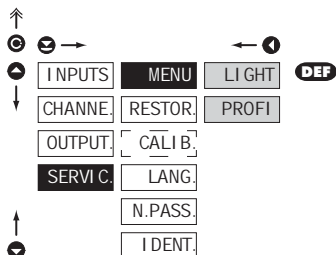

MENU Selection of menu type - LIGHT/PROFI

- enables setting the menu complexity according to user needs and skills

LI GHT Active LIGHT menu

- simple programming menu, contains only items necessary for configuration and instrument setting
- linear menu > items one after another


PROFI Active PROFI menu

- complete programming menu for expert users
- tree menu



Change of setting is valid upon next access into menu

6.4.2 RESTORATION OF MANUFACTURE SETTING

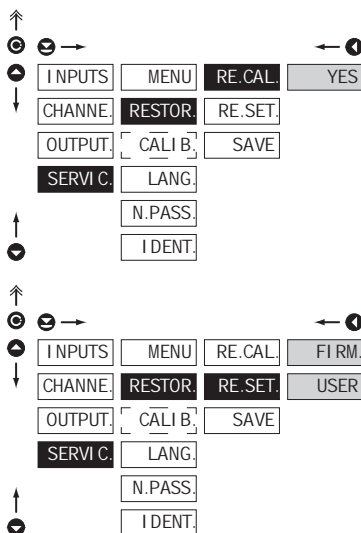**RESTOR.** Restoration of manufacture setting

- in the event of error setting or calibration, manufacture setting may be restored.

RE.CAL. Restoration of manufacture calibration of the instrument

- prior executing the changes you will be asked to confirm you selection ,YES'

RE.SET. Restoration of instrument manufacture setting

- generating the manufacture setting for currently selected type of instrument (items marked DEF)

USER Restoration of instrument user setting

- generating the instrument user setting, i.e. setting stored under **SERVIC./RESTOR./SAVE**

SAVE Save instrument user setting

- storing the user setting allows the operator to restore it in future if needed




After restoration the instrument switches off for couple seconds

JOBS PERFORMED**RESTORE**

JOBS PERFORMED	RESTORE	
	CALIBRATION	SETTING
cancel USER menu rights	✓	✓
deletes table of items order in USER - LIGHT menu	✓	✓
adds items from manufacture to LIGHT menu	✓	✓
deletes data stored in FLASH	✓	✓
cancel or linearization tables	✓	✓
clears tare	✓	✓
restore manufacture calibration	✓	✗
restore manufacture setting	✗	✓

6. SETTING PROFI


6.4.3 CALIBRATION - INPUT RANGE

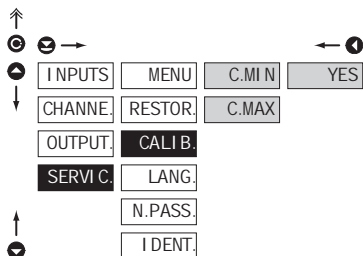DU

CALI B. Input range calibration

- when "C. MIN" is displayed, move the potentiometer traveller to the required minimum position and confirm by „Enter“, calibration is confirmed by "YES"
- when "C. MAX" is displayed, move the potentiometer traveller to required maximum position and confirm by „Enter“, calibration is confirmed by "YES"


6.4.4 SELECTION OF INSTRUMENT MENU LANGUAGE VERSION

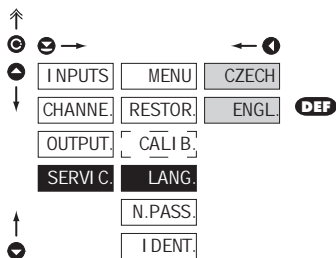

LANG. Selection of instrument menu language version

- CZECH** Instrument menu is in Czech
- ENGL.** Instrument menu is in English


6.4.5 SETTING NEW ACCESS PASSWORD

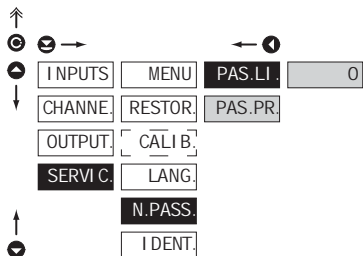

N. PASS. Setting new password for access to LIGHT and PROFi menu

- this option allows to change the numeric code, which blocks the access into LIGHT and PROFi menu.
- numerical code range: 0...9999
- universal passwords in the event of loss: LIGHT Menu > „8177“ PROFi Menu > „7915“

6.4.6 INSTRUMENT IDENTIFICATION

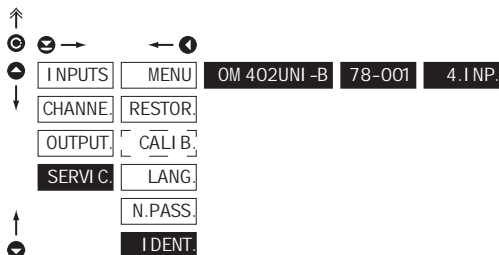**I.DENT.** Projection of instrument SW version

- display shows type identification of the instrument, SW number, SW version and current input setting (Mode)
- if the SW version reads a letter on first position, it is a customer SW

	Pos.	Description
I.DENT.	1.	type of instrument
	2.	SW. number - version
	3.	the input type



SETTING USER


For user operation

Menu items are set by the user (Profi/Light) as per request

Access is not password protected

Optional menu structure either tree (PROFI) or linear (LIGHT)

7.0 SETTING ITEMS INTO "USER" MENU

- **USER** menu is designed for users who need to change only several items of the setting without the option to change the primary instrument setting (e.g. repeated change of limit setting)
- there are no items from manufacture permitted in **USER** menu
- on items indicated by inverse triangle  LIM 1
- setting may be performed in **LIGHT** or **PROFI** menu, with the **USER** menu then overtaking the given menu structure

Setting

legend is flashing - current setting is displayed



NO

item will not be displayed in USER menu

YES

item will be displayed in USER menu with editing option

SHOW

item will be solely displayed in USER menu

Setting sequence of items in "USER" menu


In compiling USER menu from active LIGHT menu the items (max. 10) may be assigned a sequence, in which they will be projected in the menu

setting projection sequence



Example of ranking the order of menu items in the "USER" menu

In this example we want to have a direct access to menu items Limit 1 and Limit 2 (example show is for the Light menu, but can equally be used in the Profi menu).

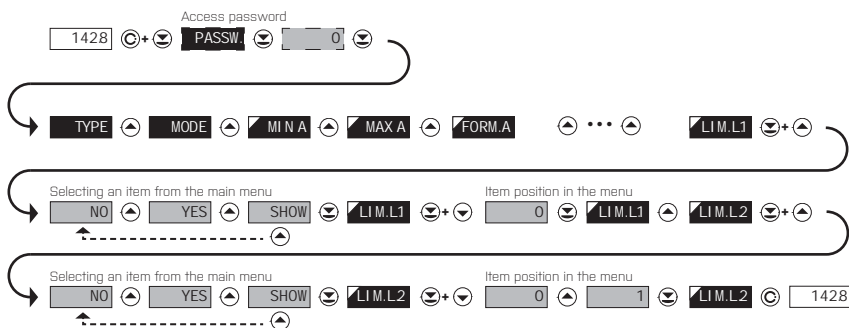


The result of this setting is that when the **Ⓢ** button is pressed, the display will read „LIM.L1“. By pressing **Ⓢ** button you confirm your selection and then you can set the desired limit value, or by pressing the **Ⓢ** button you can go to setting of „LIM.L2“ where you can proceed identically as with Limit one.

You can exit the setting by pressing the **Ⓢ** button by which you store the latest setting and pressing the **Ⓢ** button will take you back to the measuring mode

8. METHOD OF MEASURING THE CJC

Instrument with input for temperature measurement with thermocouple allows to set two types of measurement of cold junction.

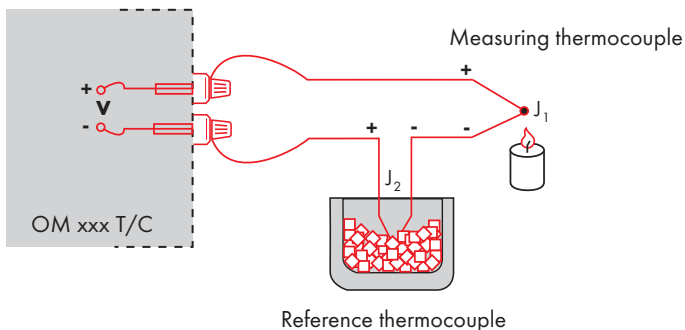

WITH REFERENCE THERMOCOUPLE

- a reference thermocouple may be located in the same place as the measuring instrument or in place with stable temperature/compensation box
- when measuring with reference thermocouple set **CONNECT.** in the instrument menu to **I NT2TC** or **EXT2TC**
- when using a thermostat (a compensation box or environment with constant temperature) set in the instrument menu **CJCTEM.** its temperature (applies for setting **CONNECT.** to **EXT2TC**)
- if the reference thermocouple is located in the same environment as the measuring instrument then set in the instrument menu **CONNECT.** to **I NT2TC.** Based on this selection the measurement of the ambient temperature is performed by a sensor located in the instrument terminal board

WITHOUT REFERENCE THERMOCOUPLE

- inaccuracy originating from the creation of dissimilar thermocouples on the transition point terminal/conductor of the thermocouple is not compensated for in the instrument
- when measuring without reference thermocouple set **CONNECT.** in the instrument menu to **I NT1TC** or **EXT1TC**
- when measuring temperature without reference thermocouple the error in measured data may be as much as 10°C (applies for setting **CONNECT.** to **EXT1TC**)

The instruments communicate via serial line RS232 or RS485. For communication they use the ASCII protocol. Communication runs in the following format - ASCII (8 bit, no parity, one stop bit), DIN MessBus (7 bit, even parity, one stop bit).

The transfer rate is adjustable in the instrument menu. The instrument address is set in the instrument menu in the range of 0 ÷ 31. The manufacture setting always presets the ASCII protocol, rate of 9600 Baud, address 00. The type of line used - RS232 / RS485 - is determined by an output board automatically identified by the instrument. The commands are described in specifications you can find at www.orbit.merret.eu or SW OM Link.

DETAILED DESCRIPTION OF COMMUNICATION VIA SERIAL LINE

EVENT	TYPE	PROTOCOL	TRANSMITTED DATA									
Data solicitation [PC]	232	ASCII	#	A	A	<CR>						
		MessBus	No - data is transmitted permanently									
	485	ASCII	#	A	A	<CR>						
		MessBus	<SADR>	<END>								
Data transmission [Instrument]	232	ASCII	>	0	[0]	[0]	[0]	[0]	[0]	[0]	[0]	<CR>
		MessBus	<STX>	0	[0]	[0]	[0]	[0]	[0]	[0]	[0]	[0]
	485	ASCII	>	0	[0]	[0]	[0]	[0]	[0]	[0]	[0]	<CR>
		MessBus	<STX>	0	[0]	[0]	[0]	[0]	[0]	[0]	[0]	<ETX> <BCC>
Instrument identification		#	A	A	1	Y	<CR>					
HW identification		#	A	A	1	Z	<CR>					
One-time transmission		#	A	A	7	X	<CR>					
Repeated transmission		#	A	A	8	X	<CR>					

LEGEND

SIGN	RANGE	DESCRIPTION
#	35 23 ₁₆	Command beginning
A	A 0...31	Two characters of instrument address [sent in ASCII - tens and units, e.g. "01", "99" universal]
<CR>	13 00 ₁₆	Carriage return
<SP>	32 20 ₁₆	Space
N, P		Number and command - command code
D		Data - usually characters "0"... "9", "*", ";", ":", "(", ")", "dp, and () may prolong data
R	30 ₁₆ ...3F ₁₆	Relay and tare status
!	33 21 ₁₆	Positive confirmation of command [ok]
?	63 3F ₁₆	Negative confirmation of command [point]
>	62 3E ₁₆	Beginning of transmitted data
<STX>	2 02 ₁₆	Beginning of text
<ETX>	3 03 ₁₆	End of text
<SADR>	address +60 ₁₆	Prompt to send from address
<EADR>	address +40 ₁₆	Prompt to accept command at address
<END>	5 05 ₁₆	Terminate address
<DLE>	16 49 10 ₁₆ , 31 ₁₆	Confirm correct statement
<NAK>	21 15 ₁₆	Confirm error statement
<BCC>		Check sum -XOR

RELAY, TARE

SIGN	RELAY 1	RELAY 2	TARE	CHANGE RELAY 3/4
P	0	0	0	0
Q	1	0	0	0
R	0	1	0	0
S	1	1	0	0
T	0	0	1	0
U	1	0	1	0
V	0	1	1	0
W	1	1	1	0
p	0	0	0	1
q	1	0	0	1
r	0	1	0	1
s	1	1	0	1
t	0	0	1	1
u	1	0	1	1
v	0	1	1	1
w	1	1	1	1

Relay status is generated by command #AAGX <CR>.

The instrument immediately returns the value in the format >HH <CR>, where HH is value in HEX format and range 00₁₆...FF₁₆. The lowest bit stands for „Relay 1“, the highest for „Relay 8“

10. ERROR STATEMENTS



ERROR	CAUSE	ELIMINATION
E.d.Un.	Number is too small (large negative) to be displayed	change DP setting, channel constant setting
E.d.Ow.	Number is too large to be displayed	change DP setting, channel constant setting
E.t.Un.	Number is outside the table range	increase table values, change input setting (channel constant setting)
E.t.Ow.	Number is outside the table range	increase table values, change input setting (channel constant setting)
E.I.Un.	Input quantity is smaller than permitted input quantity range	change input signal value or input (range) setting
E.I.Ow.	Input quantity is larger than permitted input quantity range	change input signal value or input (range) setting
E.Hw.	A part of the instrument does not work properly	send the instrument for repair
E.EE	Data in EEPROM corrupted	perform restoration of manufacture setting, upon repeated error statement send instrument for repair
E.SET.	Data in EEPROM outside the range	perform restoration of manufacture setting, upon repeated error statement send instrument for repair
E.CLR	Memory was empty (presetting carried out)	upon repeated error statement send instrument for repair, possible failure in calibration
E.OUT.	Analogue output current loop disconnected	check wire connection

The instrument allows to add two descriptive characters to the classic numeric formats (at the expense of the number of displayed places). The setting is performed by means of a shifted ASCII code. Upon modification the first two places display the entered characters and the last two places the code of the relevant symbol from 0 to 95. Numeric value of given character equals the sum of the numbers on both axes of the table.

Description is cancelled by entering characters with code 00

	0	1	2	3	4	5	6	7		0	1	2	3	4	5	6	7
0		7	"	#	\$	%	&	'	0	!	"	#	\$	%	&	'	
8	:	;	#	+	,	-	.	/	8	()	*	+	,	-	.	/
16	0	1	2	3	4	5	6	7	16	0	1	2	3	4	5	6	7
24	8	9	VA	Vr	<	=	>	?	24	8	9	VA	Vr	<	=	>	?
32	P	Q	R	S	T	U	V	W	32	@	A	B	C	D	E	F	G
40	H	I	J	K	L	M	N	O	40	H	I	J	K	L	M	N	O
48	P	Q	R	S	T	U	V	W	48	P	Q	R	S	T	U	V	W
56	X	Y	Z	[\]	^	_	56	X	Y	Z	[\]	^	_
64	`	a	b	c	d	e	f	g	64	`	a	b	c	d	e	f	g
72	h	i	j	k	l	m	n	o	72	h	i	j	k	l	m	n	o
80	p	q	r	s	t	u	v	w	80	p	q	r	s	t	u	v	w
88	x	y	z	{		}	~		88	x	y	z	{		}	~	

12. TECHNICAL DATA



INPUT

range is adjustable		DC
±60 mV	>100 MΩ	Input U
±150 mV	>100 MΩ	Input U
±300 mV	>100 MΩ	Input U
±1200 mV	>100 MΩ	Input U

range is adjustable		PM
0/4...20 mA	< 400 mV	Input I
±2 V	1 MΩ	Input U
±5 V	1 MΩ	Input U
±10 V	1 MΩ	Input U
±40 V	1 MΩ	Input U

range is adjustable		OHM
0...100 Ω		
0...1 kΩ		
0...10 kΩ		
0...100 kΩ		
Autorange		
Connection:	2, 3 or 4 wire	

Pt xxxx	-200°...850°C	RTD
Pt xxxx/3910 ppm	-200°...1100°C	
Ni xxxx	-50°...250°C	
Cu/4260 ppm	-50°...200°C	
Cu/4280 ppm	-200°...200°C	
Type Pt:	EU > 100/500/1 000 Ω, with 3 850 ppm/°C	
	US > 100 Ω, with 3 920 ppm/°C	
	RU > 50/100 Ω, with 3 910 ppm/°C	
Type Ni:	Ni 1 000/ Ni 10 000 with 5 000/6 180 ppm/°C	
Type Cu:	Cu 50/Cu 100 with 4 260/4 280 ppm/°C	
Connection:	2, 3 or 4 wire	

range is adjustable in configuration menu		T/C
Type:	J (Fe-CuNi)	-200°...900°C
	K (NiCr-Ni)	-200°...1 300°C
	T (Cu-CuNi)	-200°...400°C
	E (NiCr-CuNi)	-200°...690°C
	B (PtRh30-PtRh6)	300°...1 820°C
	S (PtRh10-Pt)	-50°...1 760°C
	R (Pt13Rh-Pt)	-50°...1 740°C
	N (Omegalloy)	-200°...1 300°C
	L (Fe-CuNi)	-200°...900°C

Voltage of lin. pot.	2,5 VDC/6 mA	DU
	min. potentiometer resistance is 500 Ω	

INPUT - CHANNEL B

range is adjustable		PM
0/4...20 mA	< 400 mV	Input I
±2 V	1 MΩ	Input U
±5 V	1 MΩ	Input U
±10 V	1 MΩ	Input U
±40 V	1 MΩ	Input U

INPUT - CHANNEL C

range is adjustable		PM
0/4...20 mA	< 400 mV	Input I
±2 V	1 MΩ	Input U
±5 V	1 MΩ	Input U
±10 V	1 MΩ	Input U
±40 V	1 MΩ	Input U

INPUT - CHANNEL D

range is adjustable		PM
0/4...20 mA	< 400 mV	Input I
±2 V	1 MΩ	Input U
±5 V	1 MΩ	Input U
±10 V	1 MΩ	Input U
±40 V	1 MΩ	Input U

PROJECTION

Display:	999999, intensive red or green
	14-ti segment LED, digit height 14mm
Projection:	±9999 [99999...999999]
Decimal point:	adjustable - in menu
Brightness:	adjustable - in menu

INSTRUMENT ACCURACY

TC:	50 ppm/°C	
Accuracy:	±0,1% of range + 1 digit	
	±0,15% of range + 1 digit	RTD, T/C
	Above accuracies apply for projection 9999	
Resolution:	0,01%/0,1%/*	RTD
Rate:	0,1...40 measurements/s**	
Overload capacity:	10x (t < 100 ms) not for 500 V and 5 A, 2x (long-term)	
Linearisation:	by linear interpolation in 38 points - solely via DM Link	
Digital filters:	Averaging, Floating average, Exponential filter, Rounding	
Comp. of conduct:	max. 40 Ω/100 Ω	RTD
Comp. of cold junc.:	adjustable	T/C
Functions:	0°...99°C or automatic Tare - display resetting Hold - stop measuring (at contact) Lock - control key locking MM - min/max value Mathematic functions	
QM Link:	company communication interface for setting, operation and update of instrument SW	
Watch-dog:	reset after 400 ms	
Calibration:	at 25°C and 40% of r.h.	

COMPARATOR

Type:	digital, adjustable in menu
Mode:	Hysteresis, From, Dosing
Limita:	-99999...999999
Hysteresis:	0...999999
Delay:	0...99,9 s

* values apply for resistance load

Outputs: 2x relays with switch-on contact (Form A)
 [230 VAC/30 VDC, 3 A]*
 2x relays with switch-off contact (Form C)
 [230 VAC/50 VDC, 3 A]*
 2x SSR (250 VAC/ 1 A)*
 2x/4x open collector [30 VDC/100 mA]
 2x bistabil relays [250 VAC/250 VDC, 3 A/0,3A]*
 Relay: 1/80 HP 277 VAC, 1/10 HP 125 V, Pilot Duty D300

DATA OUTPUTS

Protocols: ASCII, DIN MessBus, MODBUS, PROBUS
 Data format: 8 bit + no parity + 1 stop bit (ASCII)
 7 bit + even parity + 1 stop bit (MessBus)
 Rate: 600...230 400 Baud
 9 600 Baud...12 Mbaud (PROFIBUS)
 RS 232: isolated, two-way communication
 RS 485: isolated, two-way communication,
 addressing [max. 31 instruments]
 PROFIBUS Data protocol SIEMENS

ANALOG OUTPUTS

Type: isolated, programmable with 16 bits Q/A
 converter, analog output corresponds with
 displayed data, type and range are adjustable
 Non-linearity: 0,1% of range
 TC: 15 ppm/°C
 Rate: response to change of value < 1 ms
 Voltage: 0...2 V/5 V/10 V/±10 V
 Current: 0...5/20 mA/4...20 mA
 - compensation of conduct to 500 Ω/12 V
 or 1 000 Ω/24 V

EXCITATION

Adjustbale: 5...24 VDC/max. 12 W, isolated

MEASURED DATA RECORD

Type RTC: time-controlled logging of measured data into
 instrument memory, allows to log up
 to 250 000 values
 Transmission: via data output RS 232/485 or via DM Link

POWER SUPPLY

Options: 10...30 V AC/DC, max. 13,5 VA, PF ≥ 0,4,
 $I_{\text{STB}} < 40 \text{ A/1 ms}$, isolated
 - fuse inside [T 4000 mA]
 80...250 V AC/DC, max. 13,5 VA, PF ≥ 0,4,
 $I_{\text{STB}} < 40 \text{ A/1 ms}$, isolated
 - fuse inside [T 630 mA]

MECHANIC PROPERTIES

Material: Noryl GFN2 SE1, incombustible UL 94 V-I
 Dimensions: 96 x 48 x 120 mm
 Panel cut-out: 90,5 x 45 mm

OPERATING CONDITIONS

Connection: connector terminal board, conductor
 cross-section < 1,5 mm² / < 2,5 mm²
 Stabilisation period: within 15 minutes after switch-on
 Working temp.: -20°...60°C
 Storage temp.: -20°...85°C
 Cover: IP64 (front panel only)
 Construction: safety class I
 Dielectric strength: 4 kVAC after 1 min between supply and input
 4 kVAC after 1 min between supply and data/
 analog output
 4 kVAC after 1 min between supply and relay
 output
 2,5 kVAC after 1 min between supply and data/
 analog output
 Overvoltage cat.: EN 61010-1, A2
 Insulation resist.: for pollution degree II, measurement cat. III
 instrum.power supply > 670 V (PI), 300 V (DI)
 Input/output > 300 V (PI), 150 (DI)
 EMC: EN 61326-1
 Seismic resistance: IEC 980: 1993, par. 6

**Table of rate of measurement in relation to number of inputs

Channels/Rate	40	20	10	5	2	1	0,5	0,2	0,1
No.of channels: 1 (Type: DC, PM, DU)	40,00	20,00	10,00	5,00	2,00	1,00	0,50	0,20	0,10
No.of channels: 2	5,00	2,50	1,25	1,00	0,62	0,38	0,22	0,09	0,05
No.of channels: 3	3,33	1,66	0,83	0,66	0,42	0,26	0,14	0,06	0,03
No.of channels: 4	2,50	1,25	0,62	0,50	0,31	0,19	0,11	0,05	0,02
No.of channels: 1 (Type: OHM, RTD, T/C)	5,00	2,50	1,25	1,00	0,62	0,38	0,22	0,09	0,05
No.of channels: 2	3,33	1,66	0,83	0,66	0,42	0,26	0,14	0,06	0,03
No.of channels: 3	2,50	1,25	0,62	0,50	0,31	0,19	0,11	0,05	0,02
No.of channels: 4	2,00	1,00	0,50	0,40	0,25	0,15	0,08	0,04	0,02

PI - Primary insulation, DI - Double insulation


13. INSTRUMENT DIMENSIONS AND INSTALLATION




Front view



Panel cut

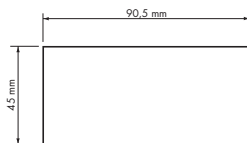



Side view

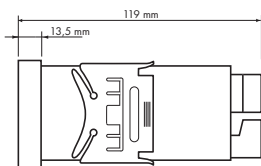

Panel thickness: 0,5...20 mm

INSTRUMENT INSTALLATION

1. insert the instrument into the panel cut-out
2. fit both travellers on the box
3. press the travellers close to the panel

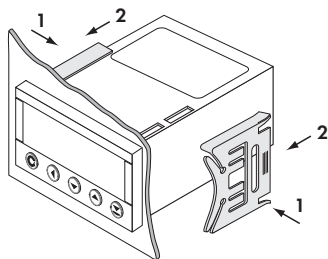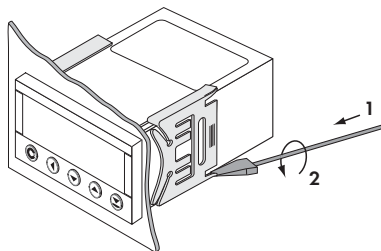

INSTRUMENT DISASSEMBLY

1. slide a screw driver under the traveller wing
2. turn the screw driver and remove the traveller
3. take the instrument out of the panel

Product **OM 402UNI - B**
 Type
 Manufacturing No.
 Date of sale

GUARANTEE

A guarantee period of 60 months from the date of sale to the user applies to this instrument.
 Defects occurring during this period due to manufacture error or due to material faults shall be eliminated free of charge.

For quality, function and construction of the instrument the guarantee shall apply provided that the instrument was connected and used in compliance with the instructions for use.

The guarantee shall not apply to defects caused by:

- mechanic damage
- transportation
- intervention of unqualified person incl. the user
- unavoidable event
- other unprofessional interventions

The manufacturer performs guarantee and post.guarantee repairs unless provided for otherwise.

Y E A R S

Stamp, signature



Company: **ORBIT MERRET, spol. s r.o.**
Klánova 81/141, 142 00 Prague 4, Czech Republic, IDNo.: 00551309

Manufactured: **ORBIT MERRET, spol. s r.o.**
Vodňanská 675/30, 198 00 Prague 9, Czech Republic

declares at its explicit responsibility that the product presented hereunder meets all technical requirements, is safe for use when utilised under the terms and conditions determined by ORBIT MERRET, spol.s r.o. and that our company has taken all measures to ensure conformity of all products of the types referred-to hereunder, which are being brought out to the market, with technical documentation and requirements of the appurtenant Czech statutory orders.

Product: Programmable panel instrument

Type **OM 402**

Version: UNI, PWR

This has been designed and manufactured in line with requirements of:

Statutory order no. 17/2003 Coll., on low-voltage electrical equipment (directive no. 73/23/EHS)
Statutory order no. 616/2006 Coll., on electromagnetic compatibility (directive no. 2004/108/EHS)

The product qualities are in conformity with harmonized standard:

El. safety: EN 61010-1
EMC: EN 61326-1
Electronic measuring, control and laboratory devices – Requirements for EMC "Industrial use"
EN 50131-1, chap. 14 and chap. 15, EN 50130-4, chap. 7, EN 50130-4, chap. 8, [EN 61000-4-11, ed. 2],
EN 50130-4, chap. 9 [EN 61000-4-2], EN 50130-4, chap. 10, [EN 61000-4-3, ed. 2], EN 50130-4, chap. 11 [EN 61000-4-6],
EN 50130-4, chap. 12, [EN 61000-4-4, ed. 2], EN 50130-4, chap. 13 [EN 61000-4-5], EN 61000-4-8, EN 61000-4-9,
EN 61000-6-1, EN 61000-6-2, EN 65022, chap. 5 and chap. 6

Seismic resistance: IEC 980: 1993, par.6

The product is furnished with CE label issued in 2006.

As documentation serve the protocols of authorized and accredited organizations:

EMC: MO CR, Testing institute of technical devices, protocol no. 80/6-46/2006 of 03/03/2006
MO CR, Testing institute of technical devices, protocol no. EMI.80/6-333/2006 of 15/01/2007
Seizmická odolnost: VOP-026 Stemberk, protocol no.: 6430-16/2007 of 07/02/2007

Place and date of issue: Prague, 19. Juli 2010

Miroslav Hackl
Company representative

Assessment of conformity pursuant to §22 of Act no. 22/1997 Coll. and changes as amended by Act no.71/2000 Coll. and 205/2002 Coll