




OM 402UNI

**4 DIGIT PROGRAMMABLE
UNIVERSAL INSTRUMENT**

DC VOLTMETER/AMMETER
PROCESS MONITOR
OHMMETER

THERMOMETER FOR PT 100/500/1 000
THERMOMETER FOR NI 1 000
THERMOMETER FOR THERMOCOUPLES
DISPLAYS FOR LIN. POTENTIOMETERS

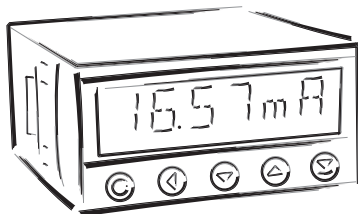

SAFETY INSTRUCTIONS

Please, read the enclosed safety instructions carefully and observe them!
These instruments should be safeguarded by isolated or common fuses (breakers)!
For safety information the EN 61 010-1 + A2 standard must be observed.
This instrument is not explosion-safe!

TECHNICAL DATA

Measuring instruments of the OM 402 series conform to the European regulation 89/336/EWG.

The instruments are up to the following European standards:

EN 55 022, class B

EN 61000-4-2, -4, -5, -6, -8, -9, -10, -11

Seismic capacity:

IEC 980: 1993, čl. 6

The instruments are applicable for unlimited use in agricultural and industrial areas.

CONNECTION

Supply of energy from the main line has to be isolated from the measuring leads.



ORBIT MERRET, spol. s r.o.

Vodnanska 675/30
198 00 Prague 9
Czech Republic

Tel: +420 - 281 040 200
Fax: +420 - 281 040 299
e-mail: orbit@merret.cz
www.orbit.merret.cz



1.	Contents	3
2.	Instrument description	4
3.	Instrument connection	6
4.	Instrument setting	10
	Symbols used in the instructions	12
	Setting the DP and the (-) sign	12
	Control keys function	13
	Setting/permitting items into "USER" menu	13
5.	Setting "LIGHT" menu	14
5.0	Description "LIGHT" menu	14
	Setting input - Type "DC"	18
	Setting input - Type "PM"	20
	Setting input - Type "OHM"	22
	Setting input - Type "RTD - Pt"	24
	Setting input - Type "RTD - Ni"	26
	Setting input - Type "T/C"	28
	Setting input - Type "DU"	30
	Setting input - Type "RTD - Cu"	32
	Setting Limits	34
	Setting analog output	36
	Selection of programming menu „LIGHT"/„PROFI"	38
	Restoration of manufacture setting	38
	Calibration - input range (DU)	39
	Selection of instrument menu language version	40
	Setting new access password	40
	Instrument identification	41
6.	Setting "PROFI" menu	42
6.0	Description of "PROFI" menu	42
6.1	"PROFI" menu - INPUT	
6.1.1	Resetting internal values	46
6.1.2	Setting measuring type, range, mode, rate,	47
6.1.3	Setting the Real Time	51
6.1.4	External input function selection	51
6.1.5	Optional accessory functions of the keys	52
6.2	"PROFI" menu - CHANNEL	
6.2.1	Setting measuring parameters (projection, filters, decimal point, description)	56
6.2.2	Setting mathematic functions	60
6.2.3	Selection of evaluation of min/max. value	62
6.3	"PROFI" menu - OUTPUT	
6.3.1	Setting data logging	64
6.3.2	Setting Limits	66
6.3.3	Setting data output	69
6.3.4	Setting analog output	70
6.3.5	Selection of display projection	72
6.4	"PROFI" menu - SERVICE	
6.4.1	Selection of programming menu „LIGHT"/„PROFI"	74
6.4.2	Restoration manufacture setting	75
6.4.3	Calibration - input range (DU)	75
6.4.4	Selection of instrument menu language version	76
6.4.5	Setting new access password	76
6.4.6	Instrument identification	77
7.	Setting items into "USER" menu	78
7.0	Configuration "USER" menu	78
8.	Method of measuring of the cold junction	80
9.	Data protocol	81
10.	Error statements	82
11.	Table of symbols	83
12.	Technical data	84
13.	Instrument dimensions and instalation	86
14.	Certificate of guarantee	87
	Declaration of conformity	88

2.1 Description

The OM 402 model series are 4 digit panel programmable instruments designed for maximum efficiency and user comfort while maintaining their favourable price. Two models are available: UNI and PWR.

Type OM 402UNI is a multifunction instrument with the option of configuration for 8 various input options, easily configurable in the instrument menu. By further options of input modules it is feasible to measure larger ranges of DC voltage and current or increase the number of inputs up to 4 (applies for PM).

The instrument is based on an 8-bit microcontroller with a multichannel 24-bit sigma-delta converter, which secures high accuracy, stability and easy operation of the instrument.

The OM 402 is a multifunction instrument available in following types and ranges

type UNI

DC:	0...60/150/300/1200 mV
PM:	0...5 mA/0...20 mA/4...20 mA/±2 V/±5 V/±10 V/±40 V
OHM:	0...100 Ω/0...1 kΩ/0...10 kΩ/0...100 kΩ
RTD-Pt:	Pt 50/100/Pt 500/Pt 1 000
RTD-Cu:	Cu 50/Cu 100
RTD-Ni:	Ni 1 000/Ni 10 000
T/C:	J/K/T/E/B/S/R/N/L
DU:	Linear potentiometer (min. 500 Ω)

type UNI, option A

DC:	0...1 A/0...5 A/120 V/±250 V/±500 V
------------	-------------------------------------

type UNI, option B (expansion by 3 more inputs)

PM:	3x 0...5 mA/0...20 mA/4...20 mA/±2 V/±5 V/±10 V/±40 V
------------	---

PROGRAMMABLE PROJECTION

Selection:	of type of input and measuring range
Measuring range:	adjustable as fixed or with automatic change
Setting:	manual, optional projection on the display may be set in the menu for both limit values of the input signal, e.g. input 0...20 mA > 0...850,0
Projection:	-9999...9999 (-99999...999999)

COMPENSATION

of conduct:	in the menu it is possible to perform compensation for 2-wire connection
of conduct in probe:	internal connection (conduct resistance in measuring head)
of CJC (T/C):	manual or automatic, in the menu it is possible to perform selection of the type of thermocouple and compensation of cold junctions, which is adjustable or automatic (temperature at the brackets)

LINEARIZATION

Linearization:*	by linear interpolation in 50 points (solely via OM Link)
-----------------	---

DIGITAL FILTERS

Floating average:	from 2...30 measurements
Exponen.average:	from 2...100 measurements
Rounding:	setting the projection step for display

MATHEMATIC FUCTIONS

Min/max. value:	registration of min./max. value reached during measurement
Tare:	designed to reset display upon non-zero input signal
Peak value:	the display shows only max. or min. value
Mat. operations:	polynome, 1/x, logarithm, exponential, power, root, sin x

EXTERNAL CONTROL

Lock:	control keys blocking
Hold:	display/instrument blocking
Tare:	tare activation/resetting tare to zero
Resetting MM:	resetting min/max value
Memory:	data storage into instrument memory

2.2 Operation

The instrument is set and controlled by five control keys located on the front panel. All programmable settings of the instrument are performed in three adjusting modes:

LIGHT	Simple programming menu - contains solely items necessary for instrument setting and is protected by optional number code
PROFI	Complete programming menu - contains complete instrument menu and is protected by optional number code
USER	User programming menu - may contain arbitrary items selected from the programming menu (LIGHT/PROFI), which determine the right (see or change) - access without password

All programmable parameters are stored in the EEPROM memory (they hold even after the instrument is switched off).



Complete instrument operation and setting may be performed via OM Link communication interface, which is a standard equipment of all instruments.

The operation program is freely accessible (www.orbit.merret.cz) and the only requirement is the purchase of OML cable to connect the instrument to PC. It is manufactured in version RS 232 and USB and is compatible with all ORBIT MERRET instruments. Another option for connection is with the aid of data output RS 232 or RS 485 (without the need of the OML cable).

The program OM LINK in „Basic“ version will enable you to connect one instrument with the option of visualization and archiving in PC. The OM Link „Standard“ version has no limitation of the number of instruments connected.

2.3 Options

Excitation is suitable for supplying power to sensors and transmitters. It has a galvanic separation.

Comparators are assigned to monitor one, two, three or four limit values with relay output. The user may select limits regime: LIMIT/DOSING/FROM-TO. The limits have adjustable hysteresis within the full range of the display as well as selectable delay of the switch-on in the range of 0...99,9 s. Reaching the preset limits is signalled by LED and simultaneously by the switch-on of the relevant relay.

Data outputs are for their rate and accuracy suitable for transmission of the measured data for further projection or directly into the control systems. We offer an isolated RS232 and RS485 with the ASCII or DIN MessBus protocol.

Analog outputs will find their place in applications where further evaluating or processing of measured data is required in external devices. We offer universal analog output with the option of selection of the type of output - voltage/current. The value of analog output corresponds with the displayed data and its type and range are selectable in Menu.

Measured data record is an internal time control of data collection. It is suitable where it is necessary to register measured values. Two modes may be used. FAST is designed for fast storage (40 records/s) of all measured values up to 8 000 records. Second mode is RTC, where data record is governed by Real Time with data storage in a selected time segment and cycle. Up to 250 000 values may be stored in the instrument memory. Data transmission into PC via serial interface RS232/485 and OM Link.

The instrument supply leads should not be in proximity of the incoming low-potential signals.

Contactors, motors with larger input power should not be in proximity of the instrument.

The leads into the instrument input (measured quantity) should be in sufficient distance from all power leads and appliances. Provided this cannot be secured it is necessary to use shielded leads with connection to ground (bracket E).

The instruments are tested in compliance with standards for use in industrial area, yet we recommend to abide by the above mentioned principles.

MEASURING RANGES


Type	Input I	Input U
DC		0...60/150/300/1 200 mV
PM	0...5/20 mA/4...20 mA	$\pm 2/\pm 5/\pm 10/\pm 40$ V
OHM	0...0,1/1/10/100 k Ω /Autorange	
RTD-Pt	Pt 100/Pt 500/ Pt 1 000	
RTD-Cu	Cu 50/100	
RTD-Ni	Ni 1 000/10 000	
T/C	J/K/T/E/B/S/R/N/L	
DU	Linear potentiometer (min. 500 Ω)	

OPTION "A"

Type	Input I	Input U
DC	$\pm 0,1$ A/ $\pm 0,25$ A/ $\pm 0,5$ A to GND (C) ± 2 A/ ± 5 A to GND (B)	± 100 V/ ± 250 V/ ± 500 V to GND (C)

OPTION "B"


Type	Input 2, 3, 4/I	Input 2, 3, 4/U
PM	0...5/20 mA/4...20 mA	$\pm 2/\pm 5/\pm 10/\pm 40$ V

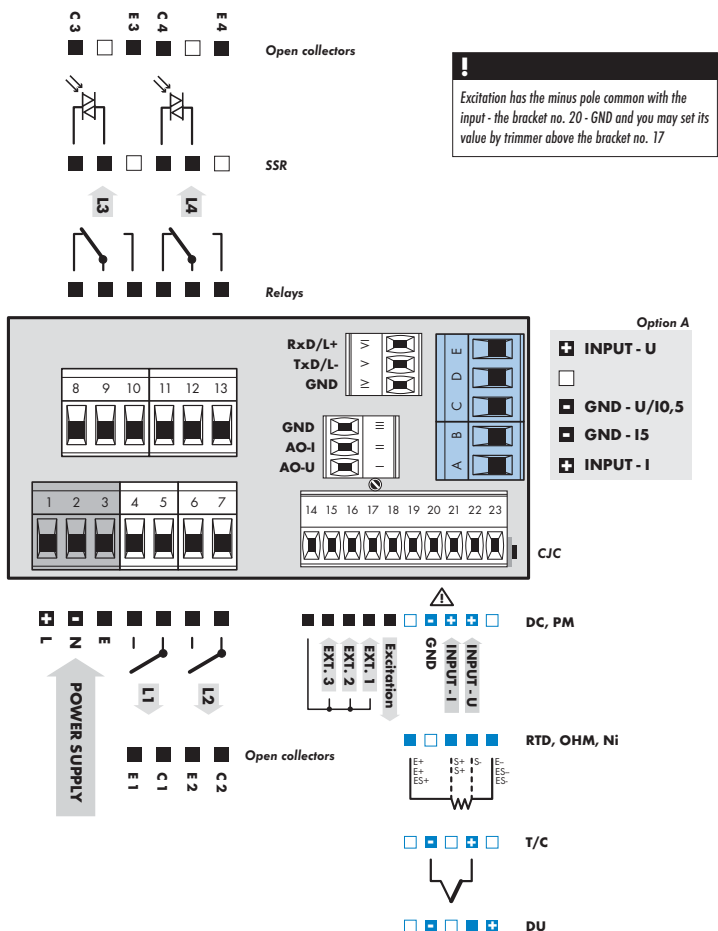


Maximum of 250 mA may be connected to "INPUT - I" (bracket no. 21) , i.e. 10-times range overload. Mind the correct connection/mistaking of current - voltage input. Destruction of measuring resistance in current input (15R) may occur.

3 INSTRUMENT CONNECTION


Example connection of a 2-wire sensor with current signal output powered by instrument's excitation

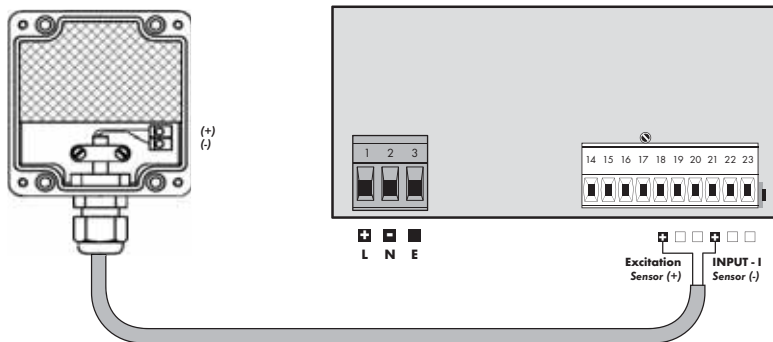

Example connection of a 3-wire sensor with current signal output powered by instrument's excitation

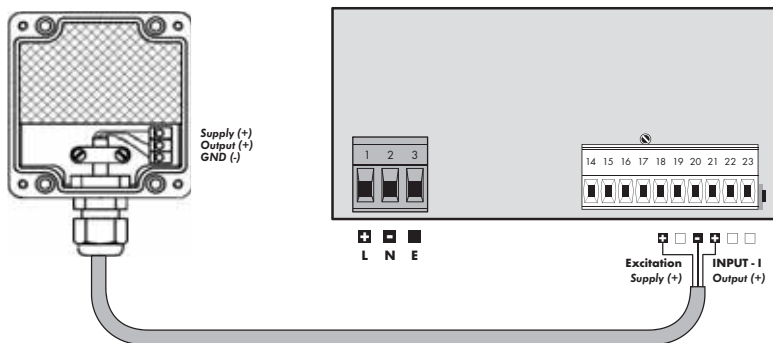


Example connection of 3-wire sensor with voltage signal output powered by instrument's excitation

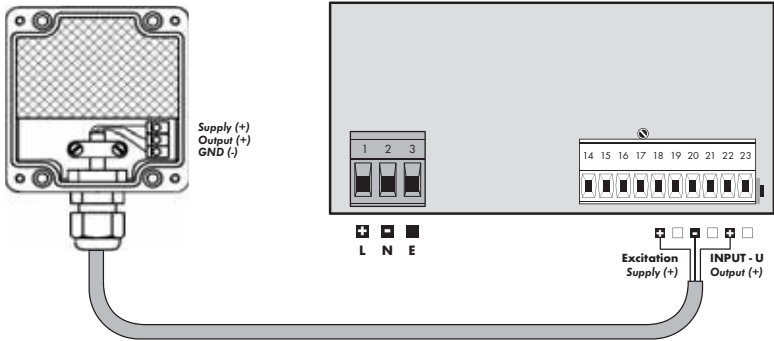

Example connection of resistance measurement using 4 wires

By connecting resistor R* we eliminate error message E. I.O.V. (input overflow) when the measured resistance is disconnected

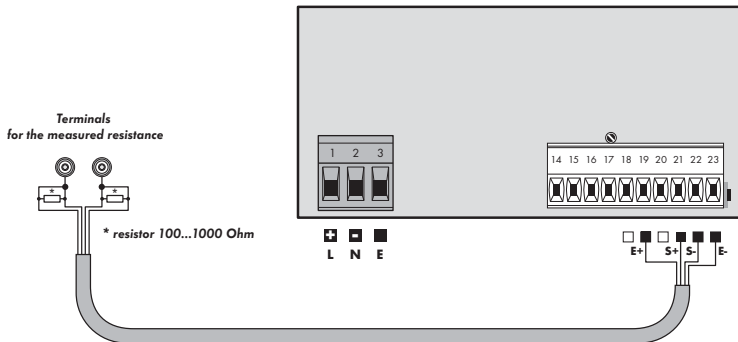

PROFI

Setting

profi

- ▶ For expert users
- ▶ Complete instrument menu
- ▶ Access is password protected
- ▶ Possibility to arrange items of the „User“ menu
- ▶ Tree menu structure

LIGHT

Setting

light

- ▶ For trained users
- ▶ Only items necessary for instrument setting
- ▶ Access is password protected
- ▶ Possibility to arrange items of the „User“ menu
- ▶ Linear menu structure

USER

Setting

*profi light**user*

- ▶ For user operation
- ▶ Menu items are set by the user (Profi/Light) as per request
- ▶ Access is not password protected
- ▶ Optional menu structure either tree (PROFI) or linear (LIGHT)

4.1 Setting

The instrument is set and controlled by five control keys located on the front panel. All programmable settings of the instrument are performed in three adjusting modes:


- LIGHT** **Simple programming menu**
 - contains solely items necessary for instrument setting and is protected by optional number code
- PROFI** **Complete programming menu**
 - contains complete instrument menu and is protected by optional number code
- USER** **User programming menu**
 - may contain arbitrary items selected from the programming menu (LIGHT/PROFI), which determine the right (see or change)
 - acces without password

All programmable parameters are stored in the EEPROM memory (they hold even after the instrument is switched off).


Complete instrument operation and setting may be performed via OM Link communication interface, which is a standard equipment of all instruments.

The operation program is freely accessible (www.orbit.merret.cz) and the only requirement is the purchase of OML cable to connect the instrument to PC. It is manufactured in version RS 232 and USB and is compatible with all ORBIT MERRET instruments. Another option for connection is with the aid of data output RS 232 or RS 485 (without the need of the OML cable).

Scheme of processing the measured signal

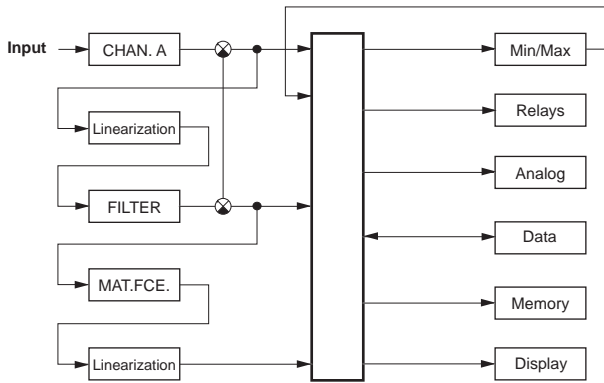


Setting and controlling the instrument is performed by means of 5 control keys located on the front panel. With the aid of these keys it is possible to browse through the operation menu and to select and set required values.

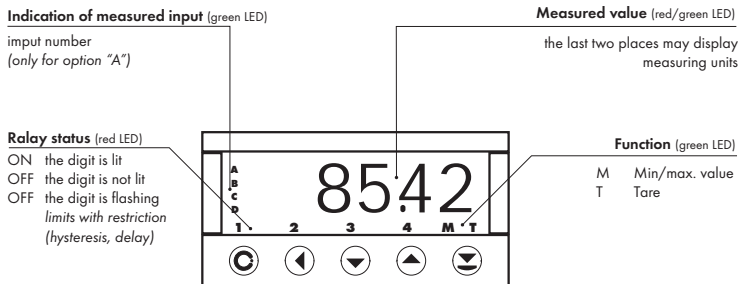


Symbols used in the instructions

DC **PM**
DU **OHM** **RTD** **T/C** Indicates the setting for given type of instrument

DEF values preset from manufacture

 symbol indicates a flashing light (symbol)

 inverted triangle indicates the item that can be placed in USER menu

 broken line indicates a dynamic item, i.e. it is displayed only in particular selection/version




 after pressing the key the set value will not be stored

 after pressing the key the set value will be stored


 **30** continues on page 30

Setting the decimal point and the minus sign

DECIMAL POINT

Its selection in the menu, upon modification of the number to be adjusted it is performed by the control key  with transition beyond the highest decade, when the decimal point starts flashing. Positioning is performed by / .

THE MINUS SIGN

Setting the minus sign is performed by the key  on higher decade. When editing the item subtraction must be made from the current number (e.g.: 013 > , on class 100 > -87)

Control keys functions

Key	Measurement	Menu	Setting numbers/selection
	access into USER menu	exit menu	quit editing
	programmable key function	back to previous level	move to higher decade
	programmable key function	move to previous item	move down
	programmable key function	move to next item	move up
	programmable key function	confirm selection	confirm setting/selection
			numeric value is set to zero
	access into LIGHT/PROFI menu		
	direct access into PROFI menu		
		configuration of an item for "USER" menu	
		determine the sequence of items in "USER - LIGHT" menu	

Setting items into „USER“ menu

- in LIGHT or PROFI menu
- no items permitted in USER menu from manufacture
- on items marked by inverted triangle



Legend is flashing - current setting is displayed



- NO** item will not be displayed in USER menu
- YES** item will be displayed in USER menu with the option of setting
- SHOW** item will be solely displayed in USER menu

5.0

Setting "LIGHT"

LIGHT**Simple programming menu**

- contains only items necessary for instrument setting and is protected by optional number code

SETTING LIGHT

Light

- For capable users
- Only items necessary for instrument setting
- Access is password protected
- Possibility to arrange items of the „User“ menu
- Linear menu structure

Preset from manufacture

Password	"0"
Menu	LIGHT
USER menu	off
Setting the items	DEF

Access password
 1428 (C) (+) PASSW. 0

Type of instruments: TYPE (PM) Measuring range: MODE (4-20mA)

RTD / OHM
 CONNEC. (2-WIRE) FORM.A (00000.0)

T/C
 CONNEC. (EXT.TTC) CJTEM. (23) FORM.A (00000.0)

DC / PM / OHM / DU
 MIN.A (0) MAX.A (100) FORM.A (0000.0)

Selecting projection and connection

LIM.L1 (20) LIM.L2 (40) LIM.L3 (60) LIM.L4 (80)
Option - comparator

TYP.A0 (I 20) MIN.A0 (0) MAX.A0 (100)
Option - Analog output

Menu type: MENU (LIGHT) Return to manufacture calibration: RE.CAL. (YES) Return to manufacture setting: RE.SET. (TYPE)

DU
 C.MIN (YES) C.MAX (YES)
Calibration - only for "DU"

Language selection: LANG. (ENGL) New password: PAS.LI. (0)

Identification: IDENT. (YES) Type of instruments: OM 402UNI SW: version: 78-001 Input: PM

1428 *Return to measuring mode*

!
 Upon delay exceeding 60 s the programming mode is automatically discontinued and the instrument itself restores the measuring mode

1428



PASSW.

0

Entering access password
for access into the menu

PASSW. Access into instrument menu

PAS = 0

- access into menu is unrestricted, after releasing keys you automatically move to first item of the menu

PAS > 0

- access into menu is protected by number code

Set "Password" = 42 Example

0 1 2 02 12 22

32 42 TYPE

TYPE

DC PM OHM RTD- Pt RTD-Ni TC

DU RTD- Cu

TYPE Selection of the type of instrument

- primary selection of the type of instrument
- performs default setting **DEF** of values from manufacture, incl. calibration

Menu	Type of instrument
DC	DC voltmeter
PM	Process monitor
OHM	Ohmmeter
RTD-Pt	Thermometer for sensors Pt
RTD-Ni	Thermometer for sensors Ni
TC	Thermometer for thermocouples
DU	Display for lin. potentiometer
RTD-Cu	Thermometer for sensors Cu


Type "PM"

DC PM MODE

Example

Type „DC“	18
Type "PM"	20
Type "OHM"	22
Type "RTD-Pt"	24
Type "RTD-Ni"	26
Type "T/C"	28
Type "DU"	30
Type "RTD-Cu"	32

Type "DC"



MODE

Selection of the instrument measuring range

DEF = 60 mV

DEF = 500 V*

* only for option "A"

Menu	Measuring range
60 mV	±60 mV
150 mV	±150 mV
300 mV	±300 mV
1200mV	±1,2 V
100 V	±100 V
250 V	±250 V
500 V	±500 V
0.10 A	±0,1 A
0.25 A	±0,25 A
0.50 A	±0,5 A
1.00 A	±1 A
5.00 A	±5 A

Range ±150 mV

Example

60 mV 150 mV MIN A



MIN A

Setting display projection for minimum value of input signal

- range of the setting is -99999...999999

- position of the DP does not affect display projection
- the DP is automatically shifted after the value is confirmed

DEF = 0

Projection for 0 mV > MIN A = 0

Example

0 MAX A



MAX A Setting display projection for maximum value of input signal


- position of the DP does not affect display projection
- the DP is automatically shifted after the value is confirmed

- range of the setting is -99999...999999

DEF = 100

Projection for 150 mV > MAX A = 3500 Example

100	100	100	200	300	400
500	500	1500	2500	3500	FORM.A

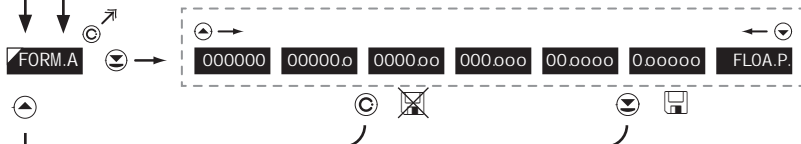

FORM.A Setting projection of the decimal point


- positioning of the DP is set here in the measuring mode

DEF = 0000.00

Projection of DP on display > 00000.0 Example

0000.00	00000.0	MENU
---------	---------	------

*subsequent item on the menu depends on instrument equipment

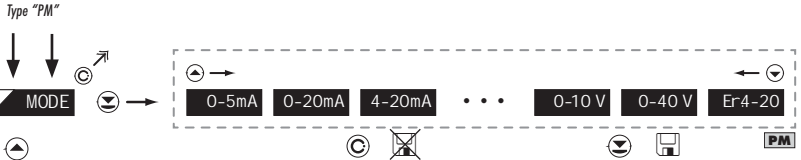

MODE Selection of the instrument measuring range

DEF = 4 - 20 mA

Menu	Range
0-5mA	0...5 mA
0-20mA	0...20 mA
4-20mA	4...20 mA
0.2 V	±2 V
0.5 V	±5 V
0-10 V	±10 V
0-40 V	±40 V
Er.4-20	4...20 mA, with error statement of „underfl ow“ upon signal smaller than 3,36 mA

Range 0...20 mA Example

4-20mA 0-20 mA MIN A

MIN A Setting for minimum input signal

0

Setting for minimum input signal

DEF = 0

MIN A Setting display projection for minimum value of input signal

- position of the DP does not affect display projection
- the DP is automatically shifted after the value is confirmed

- range of the setting is -99999...999999

DEF = 0

Projection for 0 mA > MIN A = -25 Example

0

0.5 1 2 3 4 5

0.5 1 2 3 4 5

MAX A



MAX A Setting display projection for maximum value of input signal


- position of the DP does not affect display projection
- the DP is automatically shifted after the value is confirmed

- range of the setting is -99999...999999

DEF = 100

Projection for 20 mA > MAX A = 2500 Example

100	100	100	200	300	400
500	0500	1500	2500	FORM A	

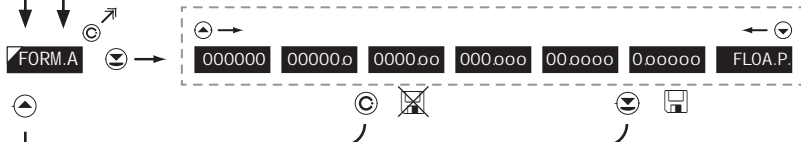

FORM.A Setting projection of the decimal point


DEF = 0000.00

- positioning of the DP is set here in the measuring mode

Projection of DP on display > 00000.0 Example

0000.00	00000.0	MENU
---------	---------	------

* subsequent item on the menu depends on instrument equipment

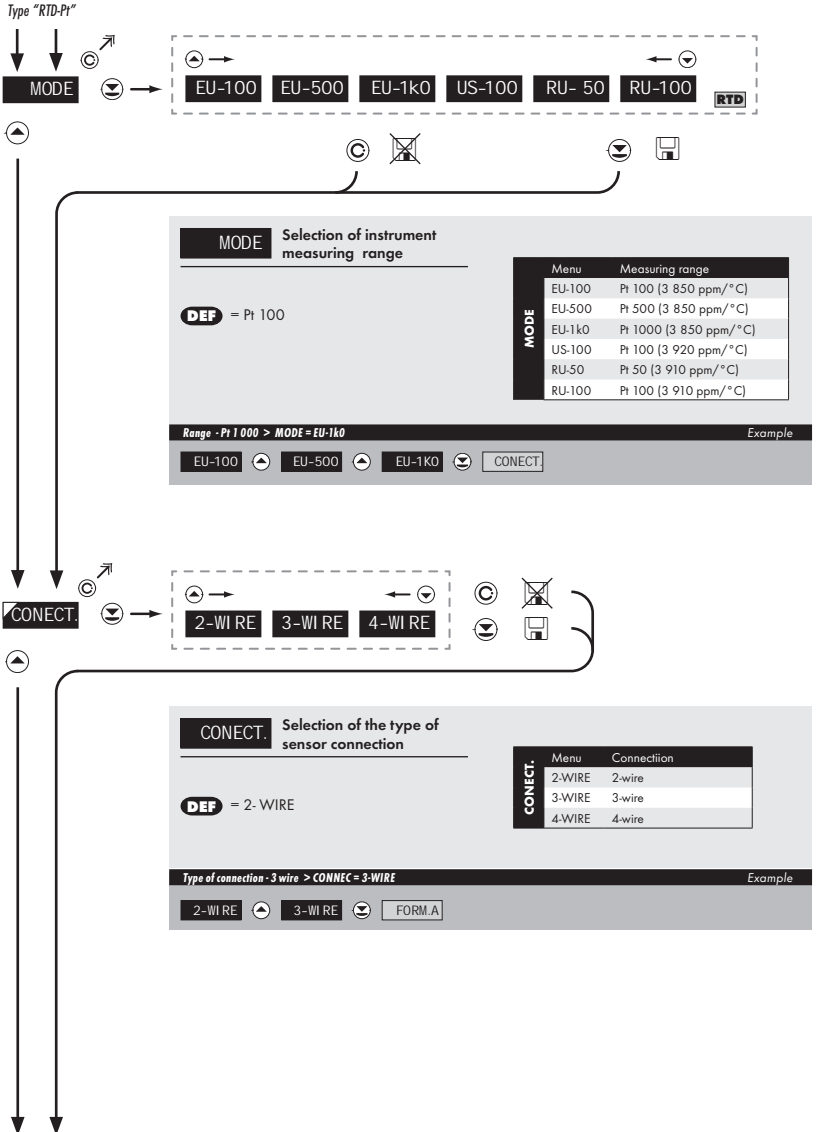




FORM.A Setting projection of the decimal point **DEF** = 00000.0

- positioning of the DP is set here in the measuring mode

Projection of DP on display > 000000 *Example*

00000.0 000000 MENU *subsequent item on the menu depends on instrument equipment



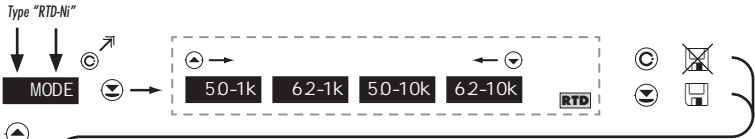

MODE Selection of instrument measuring range

DEF = Ni 1 000 - 5 000 ppm/°C

Menu	Measuring range
5.0-1k	Ni 1 000 (5 000 ppm/°C)
6.2-1k	Ni 1 000 (6 180 ppm/°C)
5.0-10k	Ni 10 000 (5 000 ppm/°C)
6.2-10k	Ni 10 000 (6 180 ppm/°C)

Range - Ni 10 000, 5 000 ppm > MODE = 5.0-10k Example

50-1k 62-1k 50-10k CONNECT



CONNECT Selection of the type of sensor connection

DEF = 2-WIRE

Menu	Connection
2-WIRE	2-wire
3-WIRE	3-wire
4-WIRE	4-wire

Type of connection - 3 wire > CONNEC = 3-WIRE Example

2-WIRE 3-WIRE FORM.A



FORM.A

Setting projection of the decimal point

DEF = 00000.0

- positioning of the DP is set here in the measuring mode

Projection of DP on display > 000000

Example

00000.0

▼


000000

▼

MENU

*subsequent item on the menu depends on instrument equipment



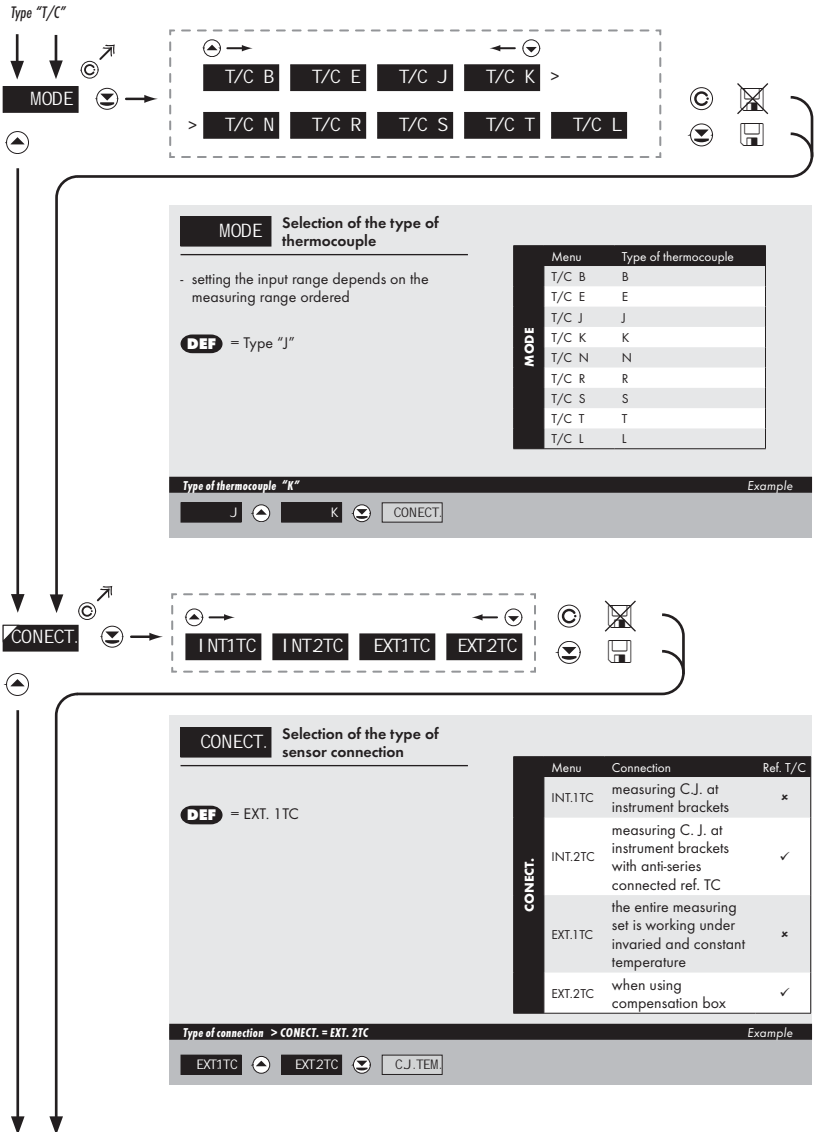



CJ.TEM. Setting temperature of cold junction **DEF** = 23

- range 0...99 °C with compensation box

Setting temperature of cold junction > CJ.TEM. = 35 *Example*

23 24 25 25 35 FORM.A



FORM.A Setting projection of the decimal point **DEF** = 00000.0

- positioning of the DP is set here in the measuring mode


Projection of DP on display > 000000 *Example*

00000.0 000000 MENU * subsequent item on the menu depends on instrument equipment

! For thermocouple type "B" the items **CONNECT.** and **C.J. TEM.** are not available

! Method and procedure of setting the cold junctions is described in separate chapter on page 80

Type "DU"

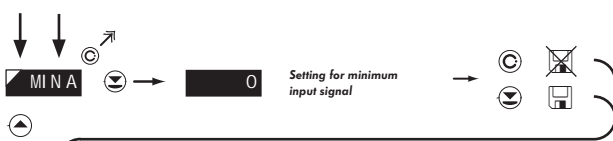


MIN A Setting display projection for minimum value of input signal

- position of the DP does not affect display projection
- the DP is automatically shifted after the value is confirmed

- range of the setting is -99999...999999

DEF = 0

Projection for the beginning > MIN A = 0 Example

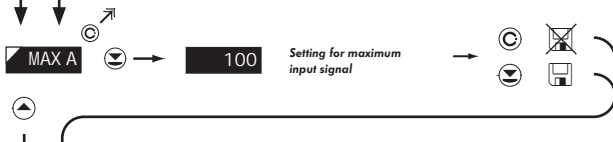


MAX A Setting display projection for maximum value of input signal

- position of the DP does not affect display projection
- the DP is automatically shifted after the value is confirmed

- range of the setting is -99999...999999

DEF = 100

Projection for the end > MAX A = 5000 Example

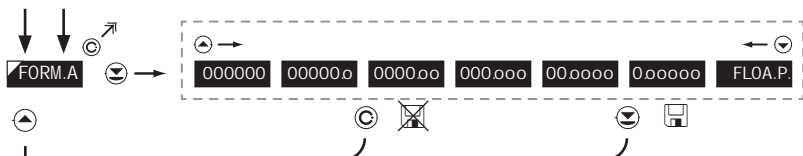

FORM.A Setting projection of the decimal point **DEF** = 0000.00

- positioning of the DP is set here in the measuring mode

Projection of DP on display > 0000.00 Example

0000.00 * subsequent item on the menu depends on instrument equipment



Type "RTD-Cu"




MODE Selection of instrument measuring range

DEF = Cu 50/4 280 ppm

MODE	Menu	Measuring range
	5.0-1k	Ni 1 000 (5 000 ppm/°C)
	6.2-1k	Ni 1 000 (6 180 ppm/°C)
	5.0-10k	Ni 10 000 (5 000 ppm/°C)
	6.2-10k	Ni 10 000 (6 180 ppm/°C)

Range - Cu 50/4 280 ppm > MODE = 426-50 Example

428-50 ◀ 428-01 ▶ 426-50 ◻ CONNECT

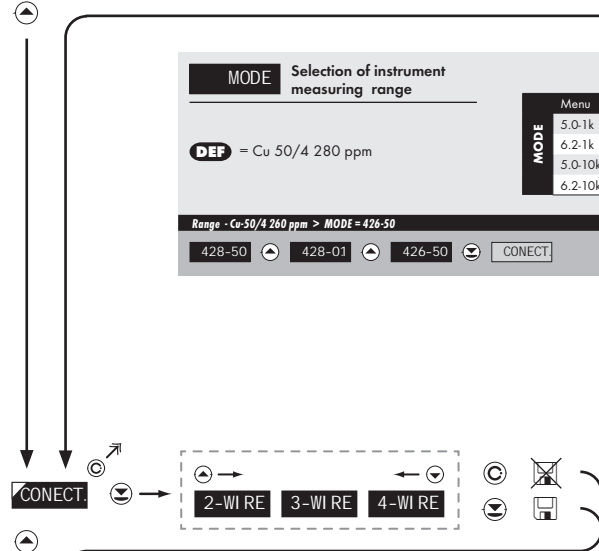

CONNECT. Selection of the type of sensor connection

DEF = 2- WIRE

CONNECT.	Menu	Connection
	2-WIRE	2-wire
	3-WIRE	3-wire
	4-WIRE	4-wire

Type of connection - 3 wire > CONNEC = 3-WIRE Example

2- WIRE ◀ 3- WIRE ▶ FORM.A



FORM.A

Setting projection of the decimal point

DEF = 00000.0

- positioning of the DP is set here in the measuring mode

Projection of DP on display > 000000

Example

00000.0

▼

000000


▼

MENU

* subsequent item on the menu depends on instrument equipment



34

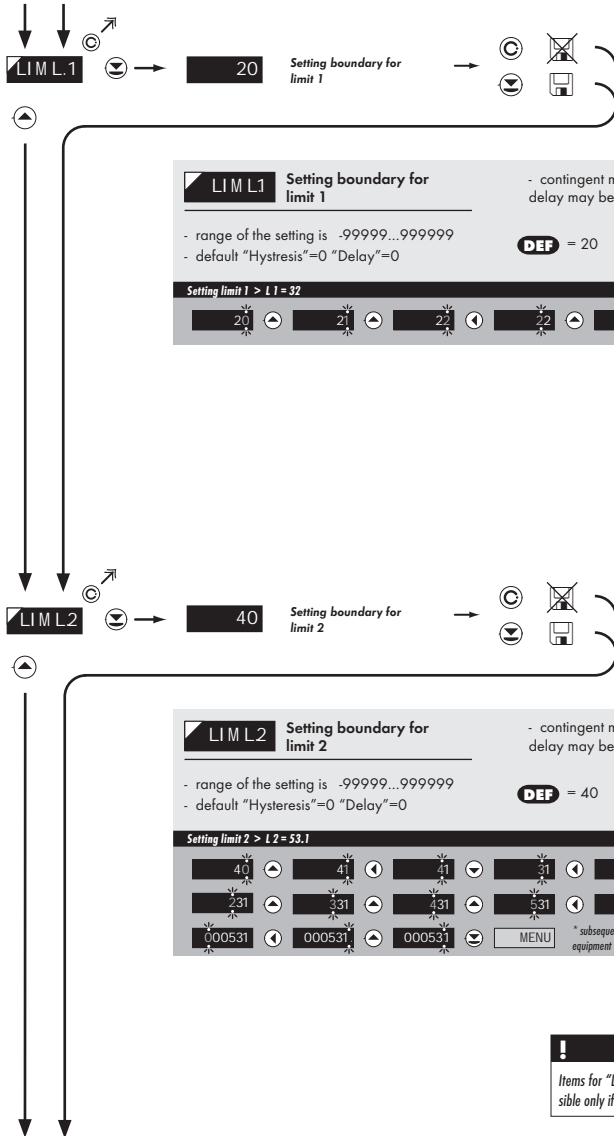

! Items for "Limits" and "Analog output" are accessible only if incorporated in the instrument.



LIM L3 Setting boundary for limit 3

- range of the setting is .99999...999999
- default "Hysteresis"=0 "Delay"=0

DEF = 60

Setting limit 3 > L3 = 85 Example

60	61	62	63	64	65	MENU	* subsequent item on the menu depends on instrument equipment
65	75	85	83	83	93		



LIM L4 Setting boundary for limit 4

- range of the setting is .99999...999999
- default "Hysteresis"=0 "Delay"=0

DEF = 80

Setting limit 4 > L4 = 103 Example

80	81	82	83	83	93	MENU	* subsequent item on the menu depends on instrument equipment
03	003	103	83	83	93		

Diagram illustrating the configuration of the analog output (A.O.) settings, showing the menu flow and the resulting display values.

The top diagram shows the menu structure for the analog output settings, including options like TYP.A.O., 0-20mA, Er4-T, 4-20 T, Er4-20, 0-10 V, and +10 V.


The middle diagram shows the **TYP.A.O.** menu, titled "Setting the type of analog output". It displays a table of available ranges and their descriptions:

Menu	Range	Description
0-20mA	0...20 mA	
Er.4-T	4...20 mA	signaling interrupted current loop and displaying an error message (<3,6 mA)
4-20 T	4...20 mA	signaling broken current loop
E. 4-20mA	4...20 mA	with indication of error statement (<3,6 mA)
4-20mA	4...20 mA	
0.5 mA	0...5 mA	
0.2 V	0...2 V	
0.5 V	0...5 V	
0-10 V	0...10 V	
+10 V	±10 V	

The **DEF** value is set to 4...20 mA. Below the table, an example shows the configuration: **Type of analog output - 0...10 V > TYP.A.O. = 0-10 V**. The displayed range is 4-20mA, 0-5mA, 0-2 V, 0-5 V, 0-10 V, and MIN A.O.

The bottom diagram shows the **MIN A.O.** menu, titled "Assigning the display value to the beginning of the AO range". The display value is set to 0. The **DEF** value is 0. Below the menu, it states: "range of the setting is -99999...999999". An example shows the configuration: **Display value for the beginning of the AO range > MIN A.O. = 0**. The displayed value is 0 and MAX A.O.

! Items for "Limits" and "Analog output" are accessible only if incorporated in the instrument.

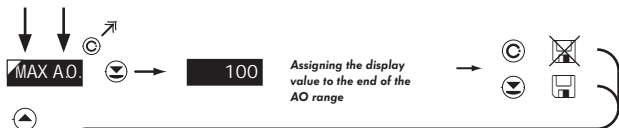


MAX A.O. Assigning the display value to the end of the AO range **DEF** = 100


- range of the setting is -99999...999999

Display value for the end of the AO range > MAX A.O. = 120 Example


100 ◀ 100 ▶ 110 ▶ 120 ◀ MENU

Displayed only with options > **Analog output**

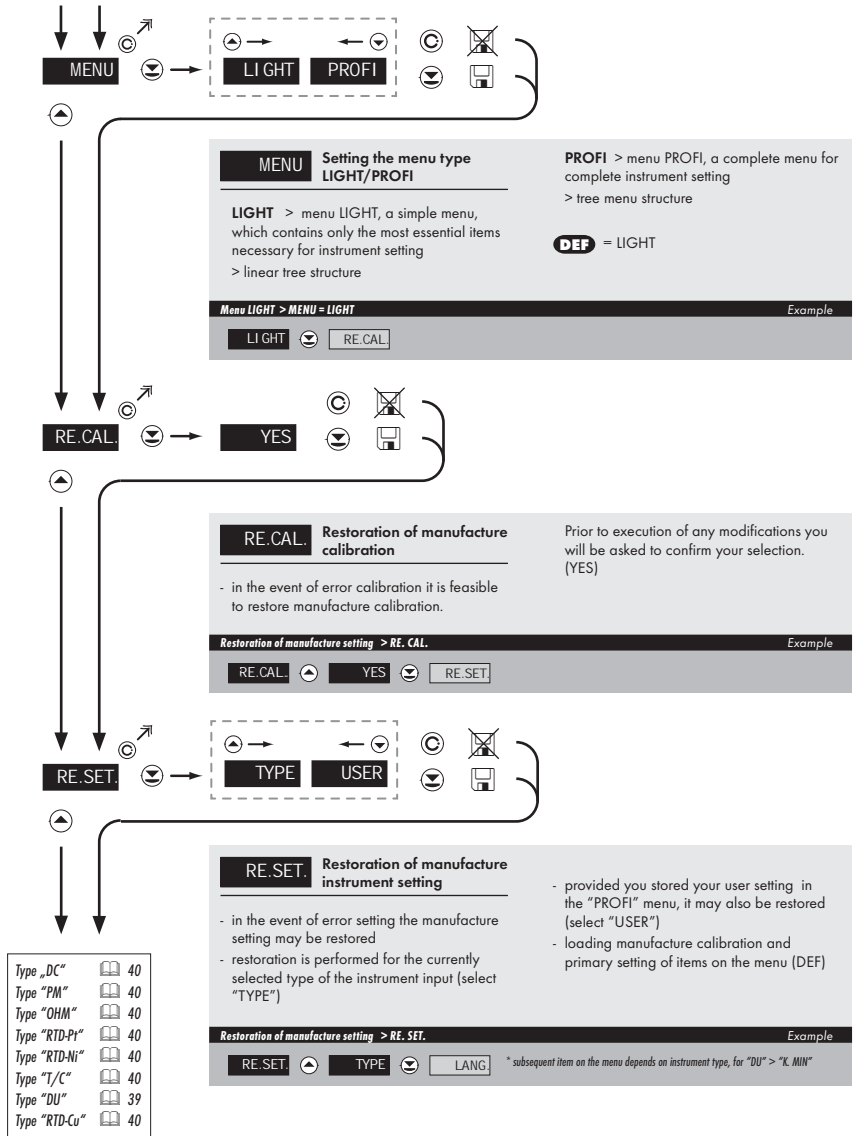

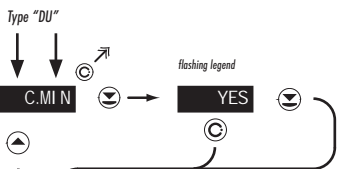


C.MI.N	Calibration of input range - the potentiometer traveller in initial position	<i>Only for type "DU"</i>
<p>- prior confirming the flashing "YES" sign the potentiometer traveller has to be in given idle position</p>		
Calibration of the beginning of the range > C. MIN		<i>Example</i>
YES	C.MAX	

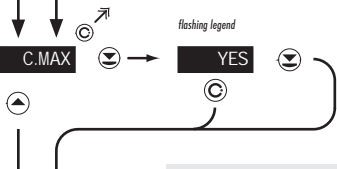

C.MAX	Calibration of input range - the potentiometer traveller in end position	<i>Only for type "DU"</i>
<p>- prior confirming the flashing "YES" sign the potentiometer traveller has to be in given idle position</p>		
Calibration of the end of the range > C. MAX		<i>Example</i>
YES	LANG	



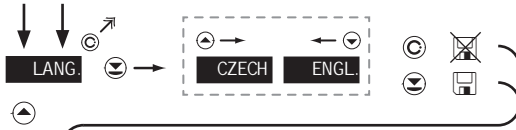

LANG. Selection of language in instrument menu

- selection of language version of the instrument menu **DEP** = ENGL.

Language selection - ENGLISH > LANG. = ENGL. Example

CZECH ENGL. PAS.LI



PAS.LI. Setting new access password


- access password for menu LIGHT
- range of the number code 0...9999

- upon setting the password to "000" the access to menu LIGHT is free without prompt to enter it
- in the event of loss universal password "8177" may be used

DEP = 0

New password - 341 > PAS.LI. = 341 Example

0	1	01	11	21	31
1	041	141	241	341	IDENT

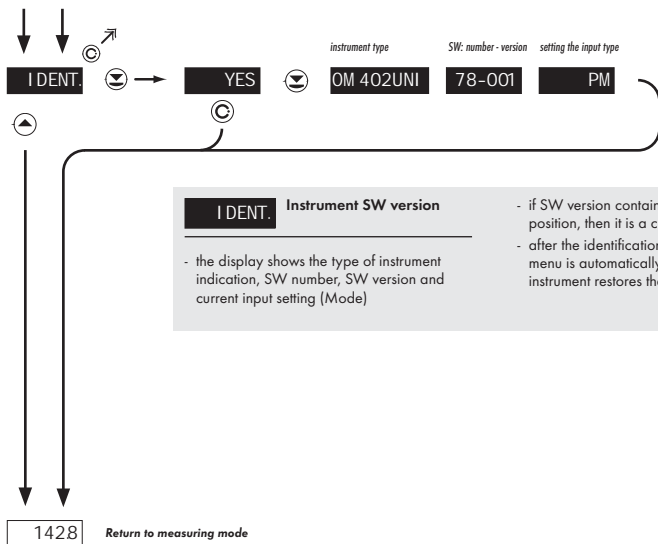

I.DENT. Instrument SW version

- the display shows the type of instrument indication, SW number, SW version and current input setting (Mode)
- if SW version contains a letter in first position, then it is a customer SW
- after the identification is completed the menu is automatically exited and the instrument restores the measuring mode

6.0

Setting "PROFI"

PROFI

Complete programming menu

- contains complete instrument menu and is protected by optional number code
- designed for expert users
- preset from manufacture is menu **LIGHT**

SETTING

PROFI



- For expert users
- Complete instrument menu
- Access is password protected
- Possibility to arrange items of the „User“ menu
- Tree menu structure

Switching over to "PROFI" menu




- access to **PROFI** menu
- authorization for access to **PROFI** menu does not depend on setting under item SERVIC. > MENU
- password protected access (unless set as follows under the item SERVIC. > N. PASS. > PROFI =0)




- access to menu selected under item SERVIC. > MENU > **LIGHT/PROFI**
- password protected access (unless set as follows under the item SERVIC. > N. PASS. > LIGHT =0)
- for access to **LIGHT** menu passwords for **LIGHT** and **PROFI** menu may be used

1428 + PASSW 0 Access password

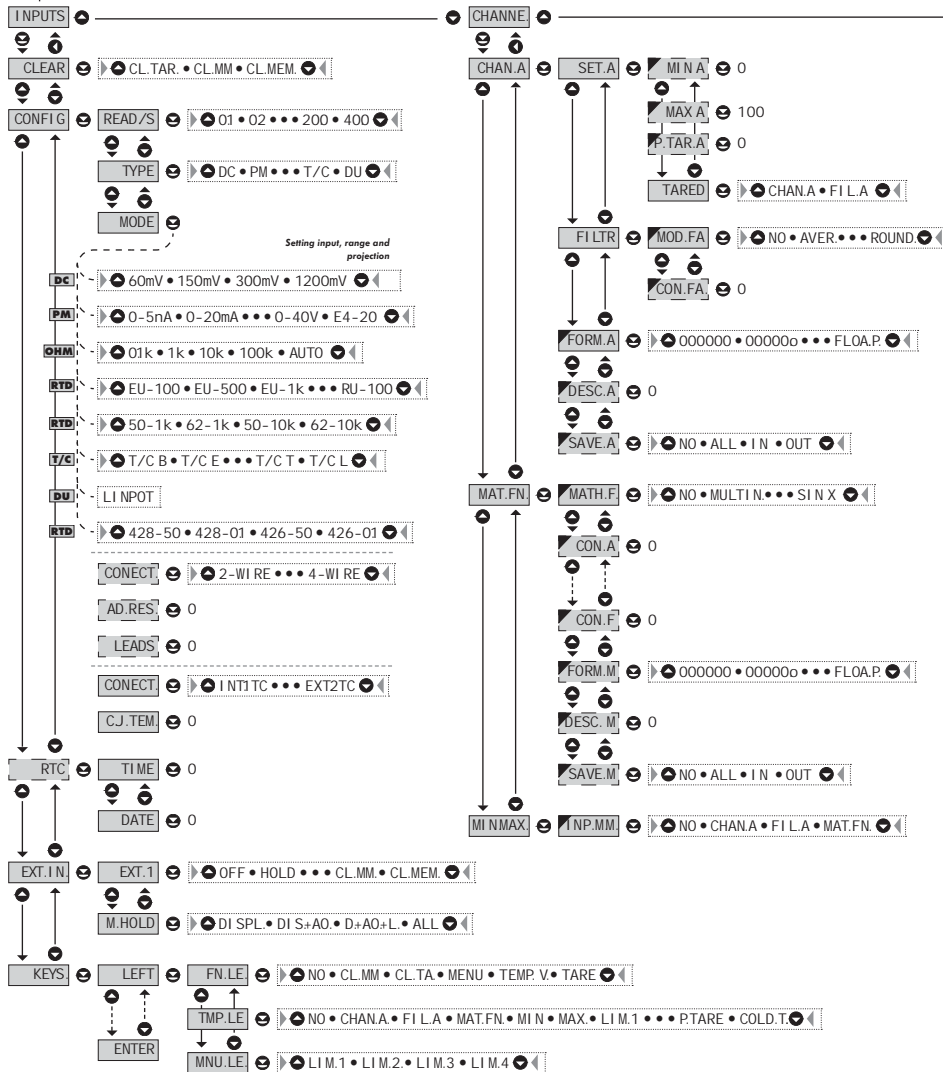


name PROFI MENU

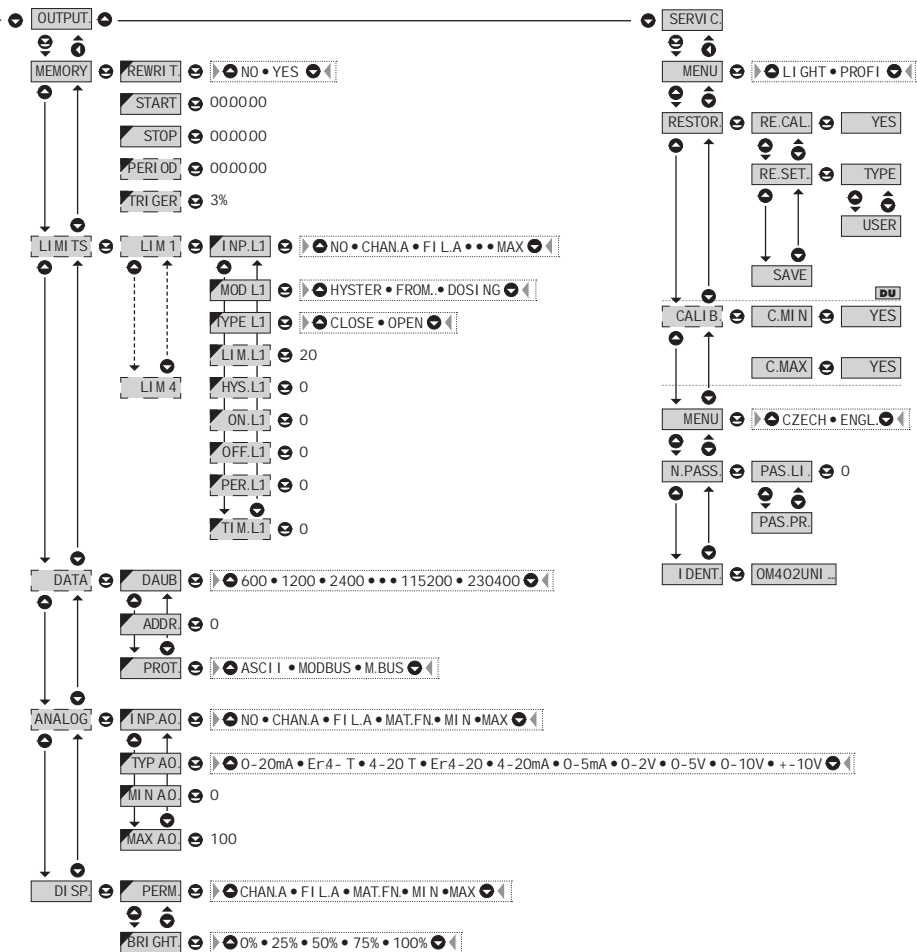

!
 Upon delay exceeding 60 s the programming mode is automatically discontinued and the instrument itself restores the measuring mode


6.1 Setting "PROFI" - INPUT

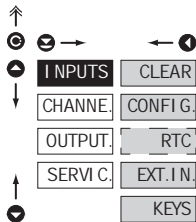

The primary instrument parameters are set in this menu

CLEAR	Resetting internal values
CONFIG.	Selection of measuring range and parameters
RTC	Setting date and time for option with RTC
EXT. I N.	Setting external inputs functions
KEYS	Assigning further functions to keys on the instrument

6.1.1 Resetting internal values

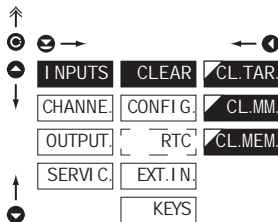

CLEAR	Resetting internal values
CL.TAR.	Tare resetting
CL.MM.	Resetting min/max value
CL.MEM.	Resetting the instrument memory

- resetting memory for the storage of minimum and maximum value achieved during measurement
- resetting memory with data measured in the "FAST" or "RTC" modes
- not in standard equipment

6.1.2a Selection of measuring rate

↑
 Ⓞ →
 ↕
 Ⓞ →

INPUTS	CLEAR	READ/S	40.0
CHANNE	CONF I G	TYPE	20.0
OUTPUT	RTC	MODE	10.0
SERVIC	EXT.I.N	CONNECT	5.0
	KEYS	C.J.TEM	20
		AD.RES	10
		LEADS	05
			02
			01

← ①

DEF

↑

Ⓞ

READ/S Selection of measuring rate

40.0	40,0 measurements/s
20.0	20,0 measurements/s
10.0	10,0 measurements/s
5.0	5,0 measurements/s
2.0	2,0 measurements/s
1.0	1,0 measurement/s
0.5	0,5 measurements/s
0.2	0,2 measurements/s
0.1	0,1 measurements/s

6.1.2b Selection of „instrument“ type

↑
 Ⓞ →
 ↕
 Ⓞ →

INPUTS	CLEAR	READ/S	DC
CHANNE	CONF I G	TYPE	PM
OUTPUT	RTC	MODE	OHM
SERVIC	EXT.I.N	CONNECT	RTD-Pt
	KEYS	C.J.TEM	RTD-Ni
		AD.RES	TC
		LEADS	DU
			RTD-Cu

← ①

DEF

↑

Ⓞ

TYPE Selection of „instrument“ type

- selection of particular type of "instrument" is bound to relevant dynamic items

DC	DC voltmeter
PM	Process monitor
OHM	Ohmmeter
RTD-Pt	Thermometer for Pt xxx
RTD-Ni	Thermometer for Ni xxxx
TC	Thermometer pro thermocouples
DU	Display for linear potentiometers
RTD-Cu	Thermometer for Cu xxx

6.1.2c Selection of measuring range

↑

⊖ →

⊖

↓

↑	⊖	→	DC	OHM	←	!
⊖	I INPUTS	CLEAR	READ/S	60mV	100 R	DEF
⊖	CHANNE	CONF1 G.	TYPE	150mV	1 k	
⊖	OUTPUT	RTC	MODE	300mV	10 k	
⊖	SERVI C.	EXT. I.N.	CONNECT	1200mV	100 k	
⊖		KEYS	C.J. TEM		AUTO	
⊖			AD. RES			
⊖			LEADS			
			DC - A	PM		
			100 V	0-5mA		
			250 V	0-20mA		
		DEF	500 V	4-20mA	DEF	
			010 A	0-2 V		
			025 A	0-5 V		
			050 A	0-10 V		
			100 A	0-40 V		
			500 A	Er4-20		
			RTD-Pt	RTD-Cu		
		DEF	EU-100	428-50	DEF	
			EU-500	428-01		
			EU-1k0	426-50		
			US-100	426-01		
			RU-50			
			RU-100			
				T/C		
				T/C B		
			RTD-Ni	T/C E		
		DEF	50-1k	T/C J		
			62-1k	T/C K	DEF	
			50-10k	T/C N		
			62-10k	T/C R		
				T/C S		
				T/C T		
			DU	T/C L		
		DEF	LI NPOT			

!

Switching in the mode AUTO - "OHM"

0.1 > 1 k	0.101 k
1 k > 10 k	1.010 k
10 k > 100 k	10.10 k
100 > 10 k	9.900 k
10 k > 1 k	0.990 k
1 k > 0.1 k	0.099 k

When selecting the "AUTO" range, the items "MIN", "MAX", "P. TAR. A" will not be displayed in the "CHAN. A" setting



↑

⊖

MODE		Selection of instrument measuring range	
DC	Menu	Measuring range	
		60 mV	±60 mV
		150 mV	±150 mV
		300 mV	±300 mV
		1200mV	±1.2 V
DC - A	Menu	Measuring range	
		100 V	±100 V
		250 V	±250 V
		500 V	±500 V
		0.10 A	±0.1 A
		0.25 A	±0.25 A
PM	Menu	Measuring range	
		0.50 A	±0.5 A
		1.00 A	±1 A
		5.00 A	±5 A
		0.5 mA	0...5 mA
		0.20 mA	0...20 mA
		4.20 mA	4...20 mA
		0.2 V	±2 V
		0.5 V	±5 V
		0.10 V	±10 V
OHM	Menu	Measuring range	
		100 R	0...100 Ω
		1 k	0...1 k Ω
		10 k	0...10 kΩ
		100 k	0...100 kΩ
	AUTO	Autorange	
RTD-Pt	Menu	Measuring range	
		EU-100	Pt 100 (3 850 ppm/°C)
		EU-500	Pt 500 (3 850 ppm/°C)
		EU-1k0	Pt 1000 (3 850 ppm/°C)
		US-100	Pt 100 (3 920 ppm/°C)
		RU-50	Pt 50 (3 910 ppm/°C)
RTD-Ni	Menu	Measuring range	
		RU-100	Pt 100 (3 910 ppm/°C)
		5.0-1k	Ni 1 000 (5 000 ppm/°C)
		6.2-1k	Ni 1 000 (6 180 ppm/°C)
RTD-Cu	Menu	Measuring range	
		5.0-10k	Ni 10 000 (5 000 ppm/°C)
		6.2-10k	Ni 10 000 (6 180 ppm/°C)
T/C	Menu	Measuring range	
		428-50	Cu 50 (4 280 ppm/°C)
		428-01	Cu 1 00 (4 280 ppm/°C)
		426-50	Cu 50 (4 260 ppm/°C)
		426-01	Cu 100 (4 260 ppm/°C)
		Type of thermocouple	
		T/C B	B
		T/C E	E
		T/C J	J
		T/C K	K
		T/C N	N
		T/C R	R
	T/C S	S	
	T/C T	T	
	T/C L	L	

6.1.2d Selection of type of sensor connection

RTD **OHM** **T/C**

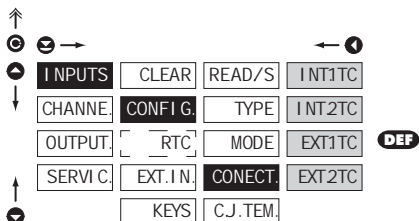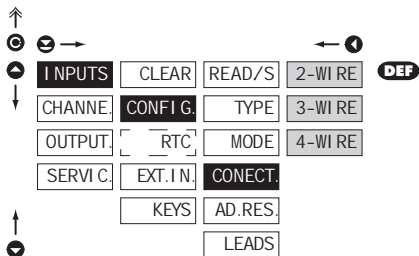

CONNECT. Selection of type of sensor connection

RTD **OHM**

- 2-WI RE** 2-wire connection
- 3-WI RE** 3-wire connection
- 4-WI RE** 4-wire connection

T/C


- INT1TC** Measurement without reference thermocouple
 - measuring cold junction at instrument brackets
- INT2TC** Measurement with reference thermocouple
 - measuring cold junction at instrument brackets with anti-series connected reference thermocouple
- EXT1TC** Measurement without reference thermocouple
 - the entire measuring set is working under invaried and constant temperature
- EXT2TC** Measurement with reference thermocouple
 - when using compensation box

!
 Method and procedure of setting the cold junctions is described in separate chapter on page 80

!
 For thermocouple type "B" the items **CONNECT.** and **C.J. TEM.** are not available

6.1.2e Setting temperature of cold junction


T/C

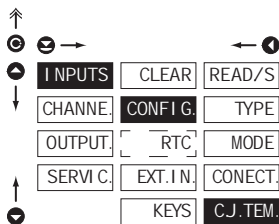**C.J. TEM.** Setting temperature of cold junction

- range 0...99 °C with compensation box
- **DEF** = 23 °C

6.1.2f Compensation of 2-wire conduct


RTD OHM

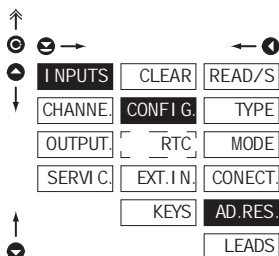**AD. RES.** Offset of the beginning of the measuring range

- in cases when it is necessary to offset the beginning of the range by certain value, e.g. while using sensor in measuring head
- entered directly in Ohm (0...9999)
- **DEF** = 0


6.1.2g Compensation of 2-wire conduct

RTD OHM

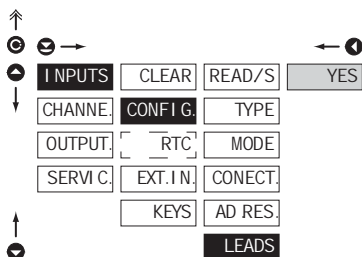**LEADS** Compensation of 2-wire conduct

- for measurement accuracy it is necessary to perform compensation of conduct always in case of 2-wire connection
- prior confirmation of the displayed prompt „YES“ it is necessary to substitute the sensor at the end of the conduct by a short-circuit
- **DEF** = 0

6.1.3 Setting the real time clock

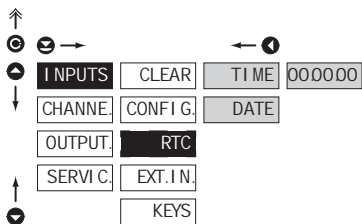

RTC Setting the real time clock (RTC)


TIME Time setting

- format 23.59.59

DATE Date setting

- format DD.MM.YY

6.1.4a External input function selection

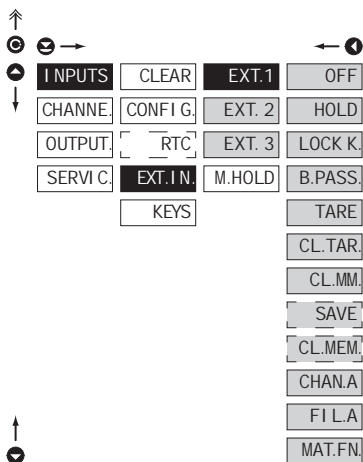

EXT. I.N. External input function selection

OFF Input is off

HOLD Activation of HOLD

LOCK K. Locking keys on the instrument

B.PASS. Activation of locking access into programming menu LIGHT/PROFI

TARE Tare activation

CL.TAR. Tare resetting

CL.MM. Resetting min/max value

SAVE Activation of measured data record in instrument memory

CL.MEM. Clearing memory for option FAST/RTC

CHAN.A Displaying value of "Channel A"

FI L.A Displaying value of "Channel A" after being processed by digital filters

MAT.FN. Displaying value of "Mathematical function"

- **DEF** EXT. 1 > HOLD


- **DEF** EXT. 2 > LOCK K.

- **DEF** EXT. 3 > TARE

*

Setting procedure is identical for EXT. 2 and EXT. 3

6.1.4b Selection of function "HOLD"

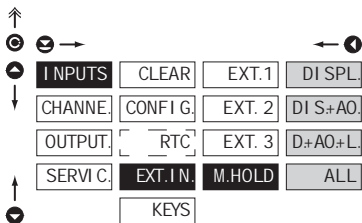**M.HOLD** Selection of function "HOLD"


DI SPL. "HOLD" locks only the value displayed

DI S+AO. "HOLD" locks the value displayed and on AO

D+AO+L. "HOLD" locks the value displayed, on AO and limit evaluation

ALL "HOLD" locks the entire instrument

6.1.5a Optional accessory functions of the keys

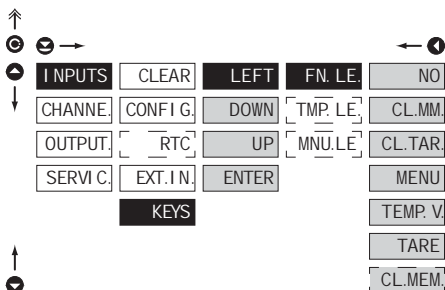**FN. LE.** Assigning further functions to instrument keys

- „FN. LE.“ > executive functions
- „TMP. LE.“ > temporary projection of selected values
- „MNU. LE.“ > direct access into menu on selected item

NO Key has no further function

CL.MM. Resetting min/max value

CL.TAR. Tare resetting

MENU Direct access into menu on selected item

- after confirmation of this selection the "MNU. LE." item is displayed on superior menu level, where required selection is performed

TEMP. V. Temporary projection of selected values

- after confirmation of this selection the item "TMP. LE." is displayed on superior menu level, where required selection is performed

TARE Tare function activation

CL..MEM. Clearing memory

- clearing memory with data measured in modes "FAST" or "RTC"


Preset values of the control keys **DEF.**

LEFT	Show Tare
UP	Show Max. value
DOWN	Show Min. value
ENTER	w/o function



Setting is identical for LEFT, DOWN, UP and ENTER

6.1.5b Optional accessory functions of the keys - Temporary projection

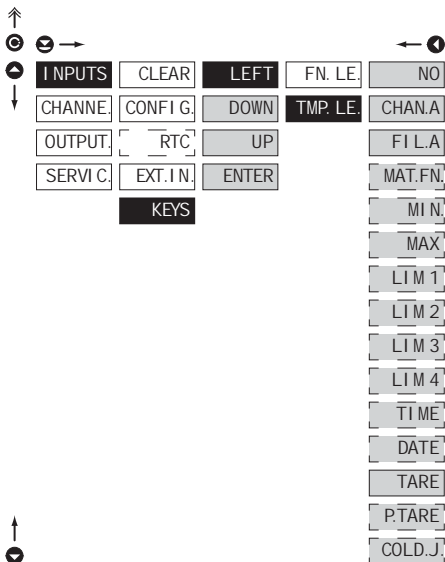

TMP. LE. Temporary projection of selected item


- "Temporary" projection of selected value is displayed for the time of keystroke
- "Temporary" projection may be switched to permanent by pressing ⊕ + "Selected key", this holds until the stroke of any key

NO	Temporary projection is off
CHAN.A	Temporary projection of "Channel A" value
FIL.A	Temporary projection of "Channel A" value after processing digital filters
MAT.FN.	Temporary projection of "Mathematic functions" value
MIN	Temporary projection of "Min. value"
MAX	Temporary projection of "Max. value"
LIM 1	Temporary projection of "Limit 1" value
LIM 2	Temporary projection of "Limit 2" value
LIM 3	Temporary projection of "Limit 3" value
LIM 4	Temporary projection of "Limit 4" value
TIME	Temporary projection of "TIME" value
DATE	Temporary projection of "DATE" value
TARE	Temporary projection of "TARE" value
P.TARE	Temporary projection of "P. TARE" value
COLD.J.	Temporary projection of "CJC" value



Setting is identical for LEFT, DOWN, UP and ENTER


6.1.5c Optional accessory functions of the keys - Direct access to item

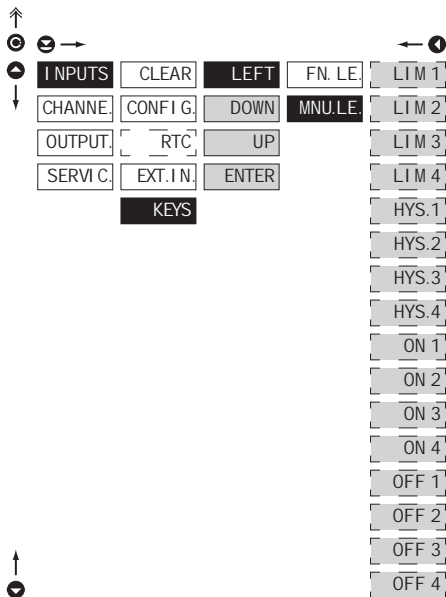
MNU. LE. Assigning access to selected menu item

LIM 1	Direct access to item "LIM 1"
LIM 2	Direct access to item "LIM 2"
LIM 3	Direct access to item "LIM 3"
LIM 4	Direct access to item "LIM 4"
HYS.1	Direct access to item "HYS. 1"
HYS.2	Direct access to item "HYS. 2"
HYS.3	Direct access to item "HYS. 3"
HYS.4	Direct access to item "HYS. 4"
ON 1	Direct access to item "ON 1"
ON 2	Direct access to item "ON 2"
ON 3	Direct access to item "ON 3"
ON 4	Direct access to item "ON 4"
OFF 1	Direct access to item "OFF 1"
OFF 2	Direct access to item "OFF 2"
OFF 3	Direct access to item "OFF 3"
OFF 4	Direct access to item "OFF 4"

!
Setting is identical for LEFT, DOWN, UP and ENTER

6.2 Setting "PROFI" - CHANNELS

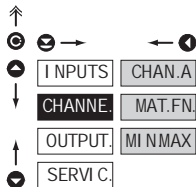


The primary instrument parameters are set in this menu

CHAN. A	Setting parameters of measuring "Channel"
MAT. FN.	Setting parameters of mathematic functions
MI NMAX	Selection of access and evaluation of Min/max value

6.2.1 a Display projection

DC PM DU OHM

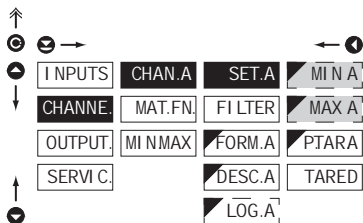


SET. A Setting display projection

MI N A Setting display projection for minimum value of input signal
 - range of the setting is -99999...999999
 - **DEF** = 0

MAX A Setting display projection for maximum value of input signal
 - range of the setting is -99999...999999
 - **DEF** = 100


6.2.1 b Setting fixed tare

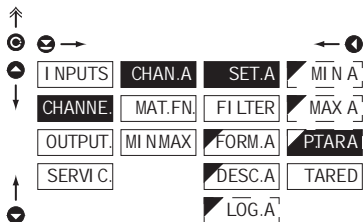

P. TAR. A Setting "Fixed tare" value

- setting is designed for the event when it is necessary to firmly shift the beginning of the range by known size
- when setting (P. TAR. A ≠ 0) is in effect, display does not show the "T" symbol
- range of the setting is: -99999...999999
- **DEF** = 0

6.2.1c Selecting where tare will be applied

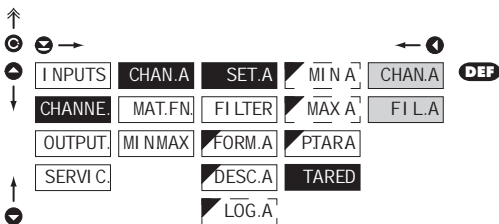


TARED Selecting the position of tare

CHAN.A The value will be tared before linearisation and digital filter

FIL.A The value will be tared after linearisation and digital filter

6.2.1d Digital filters

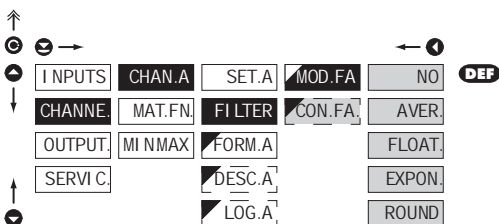

MOD.FA Selection of digital filters

- at times it is useful for better user projection of data on display to modify it mathematically and properly, wherefore the following filters may be used:

NO Filters are off

AVER. Measured data average

- arithmetic average from given number („CON.F.A.“) of measured values
- range 2...100

FLOAT. Selection of floating filter

- floating arithmetic average from given number („CON.F.A.“) of measured data and updates with each measured value
- range 2...30

EXPON. Selection of exponential filter

- integration filter of first prvnho grade with time constant („CON.F.A.“) measurement
- range 2...100


ROUND Measured value rounding

- is entered by any number, which determines the projection step (e.g.: “CON.F.A.“=2,5 > display 0, 2,5, 5,...)


CON.F.A. Setting constants

- this menu item is always displayed after selection of particular type of filter

- **DEF** = 2

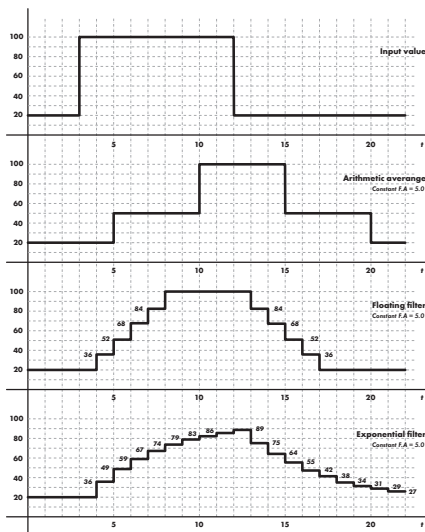

6.2.1e Projection format - positioning of decimal point

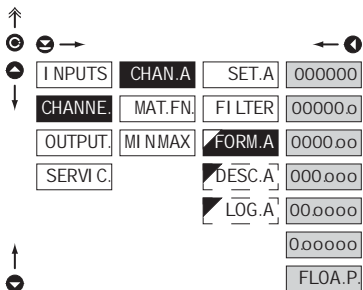

FORM. A Selection of decimal point

- the instrument allows for classic projection of a number with positioning of the DP as well as projection with floating DP, allowing to display a number in its most exact form „FLOA.T.P.“

000000. Setting DP - XXXXXX.

00000.0 Setting DP - XXXXX.x

- **DEF** > **RTD** **T/C**

0000.00 Setting DP - XXXX.xx

- **DEF** > **DC** **PM** **DU** **OHM**


000.000 Setting DP - XXX.xxx

00.0000 Setting DP - XX.xxxx

0.00000 Setting DP - X.xxxxx

FLOA.P. Floating DP

6.2.1f Projection of description - the measuring units

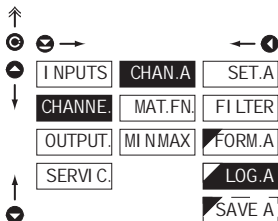


DESC. A Setting projection of description for "Channel A"

- projection of measured data may be extended (at the expense of the number of displayed places) by two characters for description
- description is set by shifted ASCII code, when two first places show the set description and two last characters their code in period 0...95
- description is cancelled by code 00
- **RTD** **T/C** **DEF** = °C
- **DC** **PM** **DU** **OHM** **DEF** = none



Table of signs on page 83

6.2.1g Selection of storing data into instrument memory

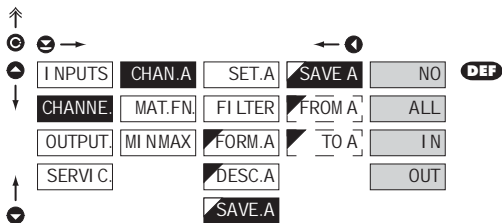

SAVE.A Selection of storing data into instrument memory

- by selection in this item you allow to register values into instrument memory
- another setting in item "OUTPUT. > MEMORY" (not in standard experiment)

- NO** Measured data is not stored
- ALL** Measured data is stored in memory
- IN** Only data measured within the set interval is stored in memory
- OUT** Only data measured outside the set interval is stored in memory


FROM A Setting the initial interval value

- setting range: -99999...999999

TO A Setting the final interval value

- setting range: -99999...999999

6.2.2a Mathematic functions

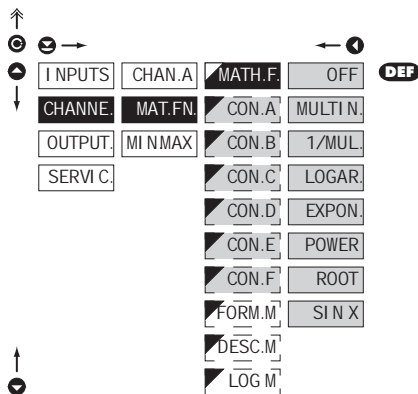
MATH.F. Selection of mathematic functions

OFF

Mathematic functions are off

MULTI.N.

Multinomial

$$Ax^3 + Bx^4 + Cx^3 + Dx^2 + Ex + F$$

1/MUL.

1/x

$$\frac{A}{x^3} + \frac{B}{x^4} + \frac{C}{x^3} + \frac{D}{x^2} + \frac{E}{x} + F$$

LOGAR.

Logarithm

$$A \times \ln\left(\frac{Bx+C}{Dx+E}\right) + F$$

EXPON.

Exponential

$$A \times e^{\left(\frac{Bx+C}{Dx+E}\right)} + F$$

POWER

Power

$$A \times (Bx+C)^{(Dx+E)} + F$$

ROOT

Root

$$A \times \sqrt{\frac{Bx+C}{Dx+E}} + F$$

SIN X

Sin x

$$A \sin^5 x + B \sin^4 x + C \sin^3 x + D \sin^2 x + E \sin x + F$$

CON. -

Setting constants for calculation of mat. functions

- this menu is displayed only after selection of given mathematic function

6.2.2b Mathematic functions - decimal point

INPUTS	CHAN.A	MATH.F	000000
CHANNE.	MAT.FN	CON.A	00000.0
OUTPUT	MI NMAX	CON.B	0000.00
SERVI.C		CON.C	000.000
		CON.D	00.0000
		CON.E	0.00000
		CON.F	FLOA.P. DEF
		FORM.M	
		DESC.M	
		LOG.M	

FORM.M. Selection of decimal point

- the instrument allows for classic projection of a number with positioning of the DP as well as projection with floating DP, allowing to display a number in its most exact form „FLOA.P.“

- Setting DP - XXXXXX.
- Setting DP - XXXXX.x
- Setting DP - XXXX.xx
- Setting DP - XXX.xxx
- Setting DP - XX.xxxx
- Setting DP - X.xxxxx
- Floating DP
- DEF**


6.2.2c Mathematic functions - measuring units

INPUTS	CHAN.A	MATH.F
CHANNE.	MAT.FN	CON.A
OUTPUT	MI NMAX	CON.B
SERVI.C		CON.C
		CON.D
		CON.E
		CON.F
		FORM.M
		DESC.M
		LOG.M

DESC.M. Setting projection of description for "MAT.FN"

- projection of measured data may be extended (at the expense of the number of displayed places) by two characters for description
- description is set by shifted ASCII code, when two first places show the set description and two last characters their code in period 0...95
- description is cancelled by code 00
- **DEF** = no description

! Table of signs on page 83

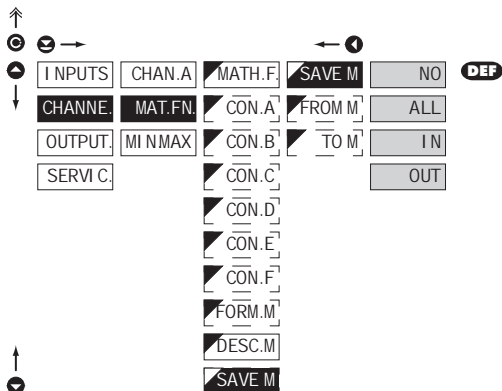6.2.2d **Mathematic functions - selection of storing data into instrument memory**

SAVE M **Selection of storing data into instrument memory**

- by selection in this item you allow to register values into instrument memory
- another setting in item "OUTPUT. > MEMORY" (not in standard experiment)


- NO Measured data is not stored
- ALL Measured data is stored in memory
- IN Only data measured within the set interval is stored in memory
- OUT Only data measured outside the set interval is stored in memory

FROM M Setting the initial interval value

- setting range: -99999...999999

TO M Setting the final interval value


- setting range: -99999...999999

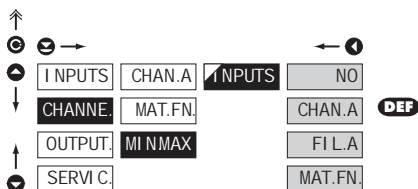6.2.3 **Selection of evaluation of min/max value**

I INPUTS **Selection of evaluation of min/max value**

- selection of value from which the min/max value will be calculated

- NO Evaluation of min/max value is off
- CHAN.A From "Channel A"
- FIL.A From "Channel A" after digital filters processing
- MAT.FN. From "Mathematic functions"

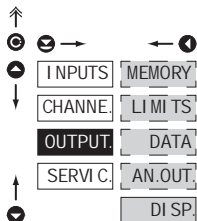
6.3 Setting „PROFI“ - OUTPUTS



In this menu it is possible to set parameters of the instrument output signals

MEMORY	Setting data logging into memory
LI MI TS	Setting type and parameters of limits
DATA	Setting type and parameters of data output
AN. OUT.	Setting type and parameters of analog output
DI SP.	Setting display projection and brightness

6.3.1a Selection of mode of data logging into instrument memory

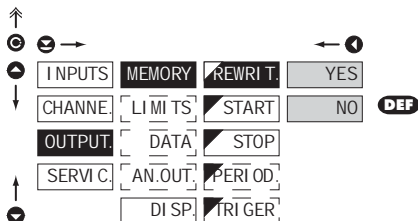


REWRI T. Selection of the mode of data logging

- selection of the mode in the event of full instrument memory

NO	Rewriting values prohibited
YES	Rewriting values permitted, the oldest get rewritten by the latest

6.3.1b Setting data logging into instrument memory - RTC

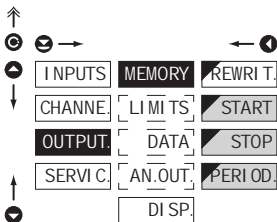

START Start of data logging into instrument memory

- time format HH.MM.SS

STOP Stop data logging into instrument memory

- time format HH.MM.SS

PERIOD Period of data logging into instrument memory

- determines the period in which values will be logged in an interval delimited by the time set under items START and STOP

- time format HH.MM.SS


- records are made on a daily basis in selected interval and period

- item not displayed if "SAVE" is selected in menu (INPUT > EXT. IN.)

RTC

The lowest recording rate possible is once a day, the highest is every second. Under exceptional circumstances it is possible to set the rate to 8 times per second by entering the recording period as 00:00:00. However, this mode is not recommended due to the memory overload. Recordings are realised in a timeframe of one day and are repeated periodically every following day. Recordings can take place either inside or outside of selected time intervals. The duration of re-writing can be determined by the number of channels recorded as well as by the recording rate.

6.3.1c Setting data logging into instrument memory - FAST

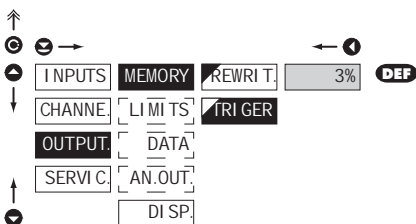

TRI GER Setting logging data into inst. memory

- logging data into inst. memory is governed by the following selection, which determines how many percent of the memory is reserved for data logging prior to initiation of trigger impulse

- initialization is on ext. input or button

- setting in range 1...100 %

- when setting 100 %, datalogging works in the mode ROLL > data keep getting rewritten in cycles

1. Memory initialization

- clear memory (ext.input, button)

- LED "M" flashes, after reading TRIGGER (%) memory is permanently shining. In ROLL flashes constantly.

2. Triggering

- external input, button

- after the memory LED is full "M" turns off


- in the ROLL mode the trigger ends datalogging and LED turns off

3. Termination


- ext. input, button or reading data via RS

FAST

The memory operates on the basis of memory oscilloscope. Select an area of 0...100% of the memory capacity (100% represents 8 192 individual recordings for a single channel measurement). This area is filled cyclically up to the point when the recording starts (activated by the front panel button or by an external input). When the remaining memory capacity fills up the recording stops. A new recording is possible after the deletion of the latest recording. It is possible to abort a recording before its completion by reading out the data.

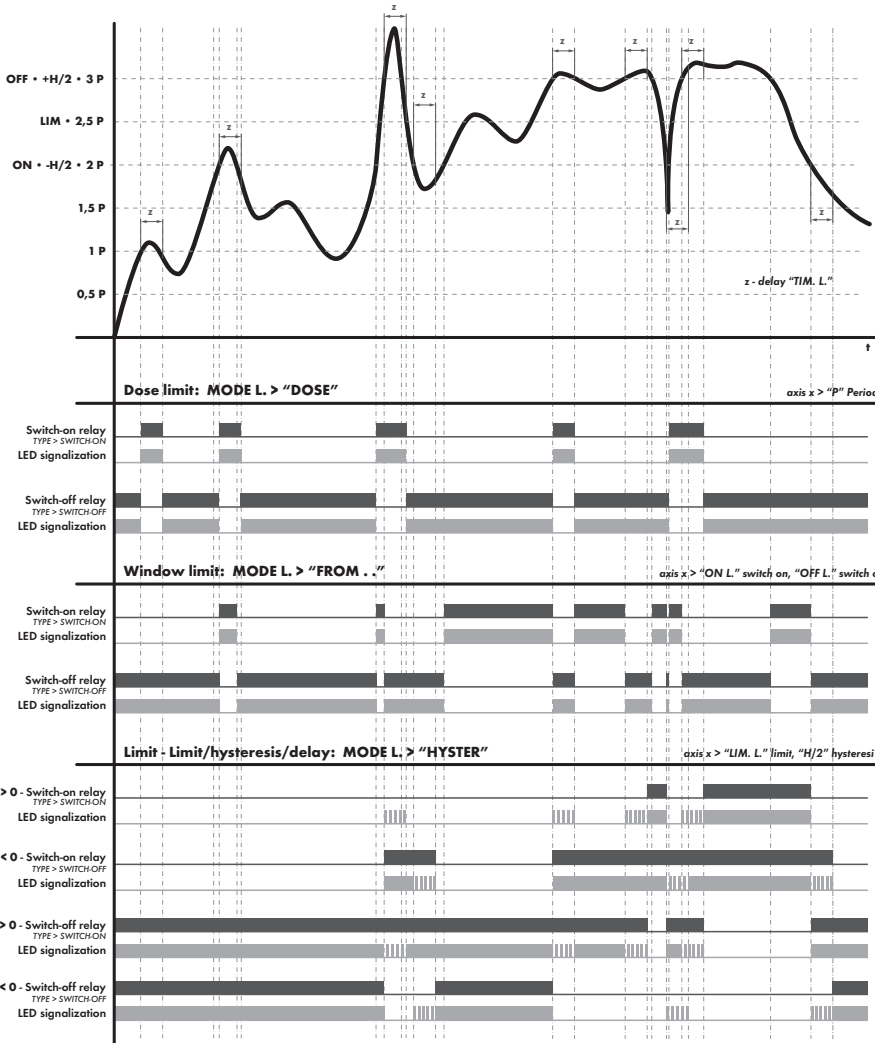

6.3.2a Selection of input for limits evaluation

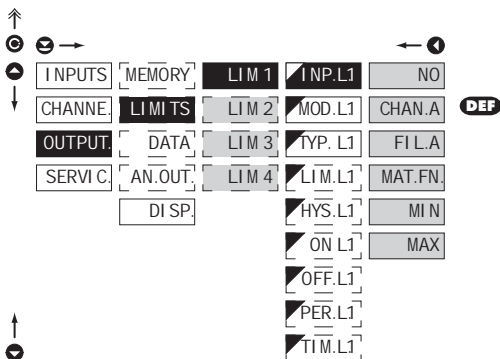

!


Setting is identical for LIM 2, LIM 3 and LIM 4

INP.L1 Selection evaluation of limits

- selection of value from which the limit will be evaluated

- NO** Limit evaluation is off
- CHAN.A** Limit evaluation from "Channel A"
- FI.LA** Limit evaluation from "Channel A" after digital filters processing
- MAT.FN.** Limit evaluation from "Mathematic functions"
- MIN** Limit evaluation from "Min.value"
- MAX** Limit evaluation from "Max.value"

6.3.2b Selection of type of limit

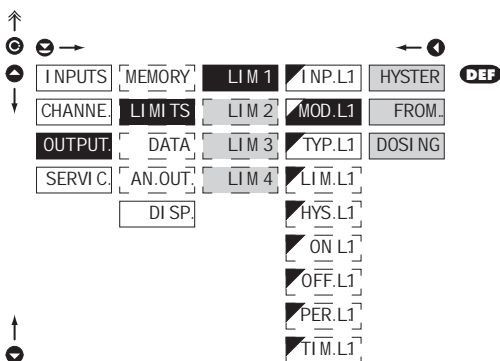


!

Setting is identical for LIM 2, LIM 3 and LIM 4

MOD.L1 Selection the type of limit

- HYSTER** Limit is in mode "Limit, hysteresis, delay"
 - for this mode the parameters of "LIM. L." are set, at which the limit will shall react, "HYS. L." the hysteresis range around the limit (LIM ±1/2 HYS) and time "TIM. L." determining the delay of relay switch-on
- FROM.** Frame limit
 - for this mode the parameters are set for interval "ON. L." the relay switch-on and "OFF. L." the relay switch-off
- DOSI NG** Dose limit (periodic)
 - for this mode the parameters are set for "PER. L." determining the limit value as well as its multiples at which the output is active and "TIM. L." indicating the time during which is the output active

6.3.2c Selection of type of output

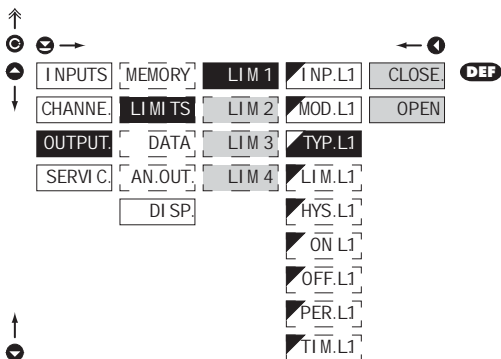


TYP.L1 Selection of type of output

CLOSE. Output switches on when condition is met

OPEN Output switches off when condition is met

! Setting is identical for LIM 2, LIM 3 and LIM 4

6.3.2d Setting values for limits evaluation

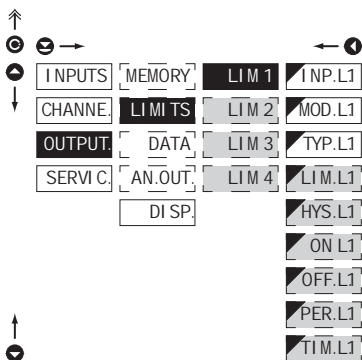

LIM.L1 Setting limit for switch-on

- for type "HYSTER"

HYS.L1 Setting hysteresis

- for type "HYSTER"
- indicates the range around the limit (in both directions, LIM. $\pm 1/2$ HYS.)

ON.L1 Setting the outset of the interval of limit switch-on

- for type "FROM"

OFF.L1 Setting the end of the interval of limit switch-on

- for type "FROM"

PER.L1 Setting the period of limit switch-on


- for type "DOSE"

TIM.L1 Setting the time switch-on of the limit

- for type "HYSTER" and "DOSE"
- setting within the range: $\pm 0...99,9$ s
- positive time > relay switches on after crossing the limit (LIM. L1) and the set time (TIM. L1)
- negative time > relay switches off after crossing the limit (LIM. L1) and the set negative time (TIM. L1)


! Setting is identical for LIM 2, LIM 3 and LIM 4

6.3.3a Selection of data output baud rate

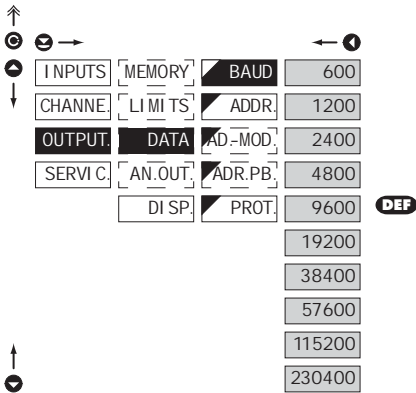


BAUD	Selection of data output baud rate
600	Rate - 600 Baud
1200	Rate - 1 200 Baud
2400	Rate - 2 400 Baud
4800	Rate - 4 800 Baud
9600	Rate - 9 600 Baud
19200	Rate - 19 200 Baud
38400	Rate - 38 400 Baud
57600	Rate - 57 600 Baud
115200	Rate - 115 200 Baud
230400	Rate - 230 400 Baud

6.3.3b Setting instrument address

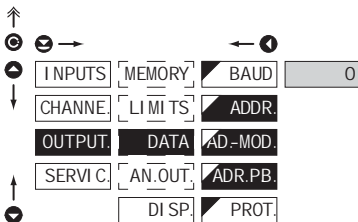

ADDR.	Setting instrument address
	- setting in range 0...31 - DEF = 00
ADDR.	Setting instrument address - MODBUS
	- setting in range 1...247 - DEF = 1
ADR.PB.	Setting instrument address - PROFIBUS
	- setting in range 1...127 - DEF = 19

6.3.3c Selection of data output protocol

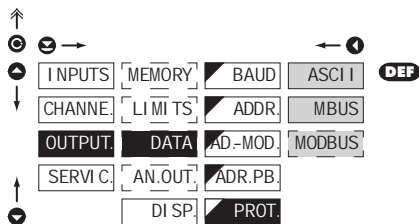
PROT. Selection of the type of analog output


ASCII Data protocol ASCII

M.BUS Data protocol DIN MessBus

MODBUS Data protocol MODBUS-RTU

- option is available only for RS 485

6.3.4a Selection of input for analog output

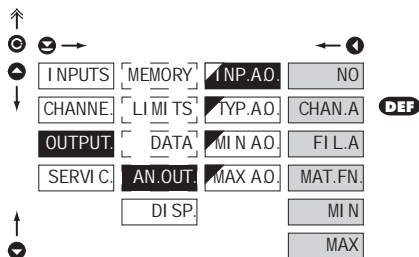
INP.AO. Selection evaluation analog output

- selection of value from which the analog output will be evaluated

NO AO evaluation is off

CHAN.A AO evaluation from "Channel A"


FILA AO evaluation from "Channel A" after digital filters processing

MAT.FN. AO evaluation from "Math.functions"

MIN AO evaluation from "Min.value"

MAX AO evaluation from "Max.value"


6.3.4b Selection of the type of analog output

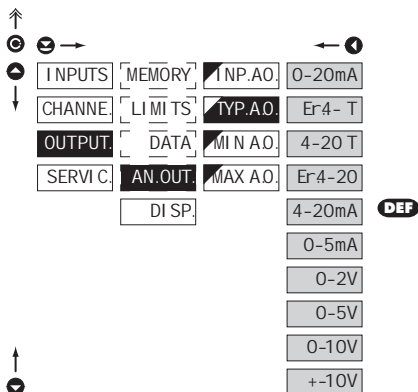

TYP. A.O. Selection of the type of analog output

0-20mA	Type - 0...20 mA
Er4-T	Type - 4...20 mA with broken loop detection and indication of error statement
4-20 T	Type - 4...20 mA with broken loop detection
Er4-20	Type - 4...20 mA, with indic. of error statement (< 3,0 mA)
4-20mA	Type - 4...20 mA
0-5mA	Type - 0...5 mA
0-2V	Type - 0...2 V
0-5V	Type - 0...5 V
0-10V	Type - 0...10 V
+ -10V	Type - ±10 V

6.3.4c Setting the analog output range

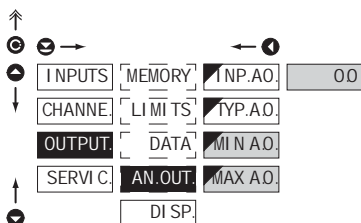

AN. OUT. Setting the analog output range

- analog output is isolated and its value corresponds with displayed data. It is fully programmable, i.e. it allows to assign the AO limit points to two arbitrary points of the entire measuring range

MIN A.O. Assigning the display value to the beginning of the AO range

- range of the setting is -99999...999999


- **DEF** = 0

MAX A.O. Assigning the display value to the end of the AO range

- range of the setting is -99999...999999

- **DEF** = 100

6.3.5a Selection of input for display projection

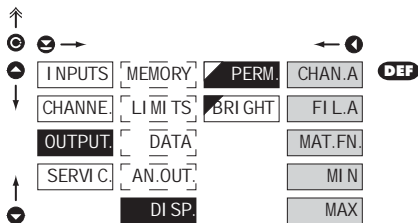


PERM. Selection display projection

- selection of value which will be shown on the instrument display

CHAN.A	Projection of values from "Channel A"
FIL.A	Projection of values from "Channel A" after digital filters processing
MAT.FN.	Projection of values from "Math.functions"
MIN.	Projection of values from "Min.value"
MAX	Projection of values from "Max.value"

6.3.5b Selection of display brightness

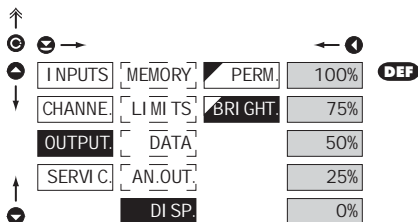


BRIGHT Selection of display brightness

- by selecting display brightness we may appropriately react to light conditions in place of instrument location

0%	Display is off
25%	Display brightness - 25%
50%	Display brightness - 50%
75%	Display brightness - 75%
100%	Display brightness - 100%


6.4 Setting "PROFI" - SERVIS

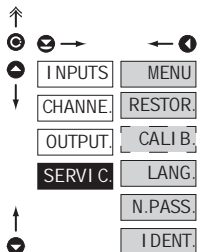

The instrument service functions are set in this menu

MENU	Selection of menu type LIGHT/PROFI
RESTOR.	Restore instrument manufacture setting and calibration
CALI B.	Input range calibration for „DU“ version
LANG.	Language version of instrument menu
N.PASS.	Setting new access password
I DENT.	Instrument identification



6.4.1 Selection of type of programming menu

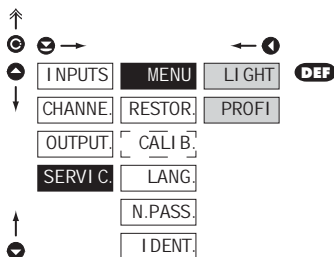

Change of setting is valid upon next access into menu

MENU	Selection of menu type - LIGHT/PROFI
<ul style="list-style-type: none"> - enables setting the menu complexity according to user needs and skills 	
LI GHT	Active LIGHT menu
<ul style="list-style-type: none"> - simple programming menu, contains only items necessary for configuration and instrument setting - linear menu > items one after another 	
PROFI	Active PROFI menu
<ul style="list-style-type: none"> - complete programming menu for expert users - tree menu 	

6.4.2 Restoration of manufacture setting

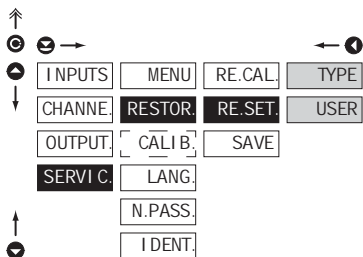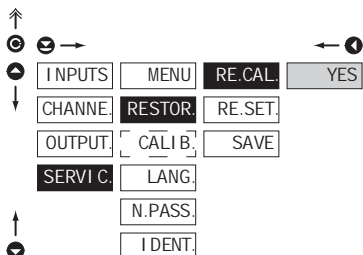

RESTOR. Restoration of manufacture setting

- in the event of error setting or calibration, manufacture setting may be restored.

RE.CAL. Restoration of manufacture calibration of the instrument

- prior executing the changes you will be asked to confirm your selection „YES“

RE.SET. Restoration of instrument manufacture setting

TYPE Restoration of instrument manufacture setting

- generating the manufacture setting for currently selected type of instrument (items marked DEF)

USER Restoration of instrument user setting

- generating the instrument user setting, i.e. setting stored under SERVIC./RESTOR./SAVE

SAVE Save instrument user setting

- storing the user setting allows the operator to restore it in future if needed


Jobs performed	Restore	
	Calibration	Setting
cancels USER menu rights	✓	✓
deletes table of items order in USER - LIGHT menu	✓	✓
adds items from manufacture to LIGHT menu	✓	✓
deletes data stored in FLASH	✓	✓
clears or linearization tables	✓	✓
clears tare	✓	✓
clears conduct resistances	✓	✓
restore manufacture calibration	✓	✗
restore manufacture setting	✗	✓



After restoration the instrument switches off for couple seconds

6.4.3 Calibration - Input range


DU

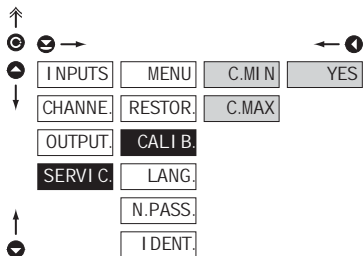

CALI B. Input range calibration

- when "C. MIN" is displayed, move the potentiometer traveller to the required minimum position and confirm by „Enter“, calibration is confirmed by "YES"
- when "C. MAX" is displayed, move the potentiometer traveller to required maximum position and confirm by „Enter“, calibration is confirmed by „YES"


6.4.4 Selection of instrument menu language version

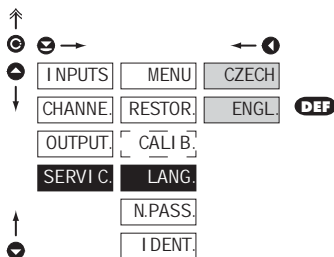

LANG. Selection of instrument menu language version

- CZECH** Instrument menu is in Czech
- ENGL.** Instrument menu is in English


6.4.5 Setting new access password

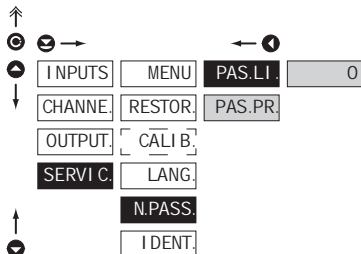

N.PASS. Setting new password for access to LIGHT and PROFi menu

- this option allows to change the numeric code, which blocks the access into LIGHT and PROFi Menu.
- numeric code range: 0...9999
- universal passwords in the event of loss:
LIGHT Menu > „8177“
PROFI Menu > „7915“

6.4.6 Instrument identification

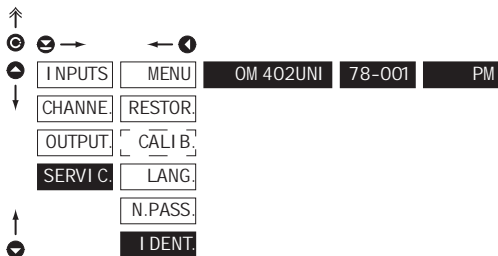


I.DENT. Projection of instrument SW version

- display shows type identification of the instrument, SW number, SW version and current input setting (Mode)
- if the SW version reads a letter on first position, it is a customer SW

I.DENT.	pos	Description
	1.	type of instrument
	2.	SW: number - version
	3.	the input type

7.0 Setting items into "USER" menu

- **USER** menu is designed for users who need to change only several items of the setting without the option to change the primary instrument setting (e.g. repeated change of limit setting)
- there are no items from manufacture permitted in **USER** menu
- on items indicated by inverse triangle  L 1
- setting may be performed in **LIGHT** or **PROFI** menu, with the **USER** menu then overtaking the given menu structure



- For user operation
- Menu items are set by the user (Profi/Light) as per request
- Access is not password protected

Setting

flashing legend - current setting is displayed



NO

item will not be displayed in USER menu

YES

item will be displayed in USER menu with editing option

SHOW

item will be solely displayed in USER menu

Setting sequence of items in "USER" menu

In compiling USER menu from active LIGHT menu the items (max. 10) may be assigned a sequence, in which they will be projected in the menu



Example:

Into USER menu were selected these items


(keys +) > CL. TAR., LIM 1, LIM 2, LIM 3, for which we have preset this sequence (keys +):

CL. TAR.	5
LIM 1	0 (sequence not determined)
LIM 2	2
LIM 3	1

Upon entering USER menu

(key) items will be projected in the following sequence: LIM 3 > LIM 2 > CL.TAR. > LIM 1

Instrument with input for temperature measurement with thermocouple allows to set two types of measurement of cold junction.

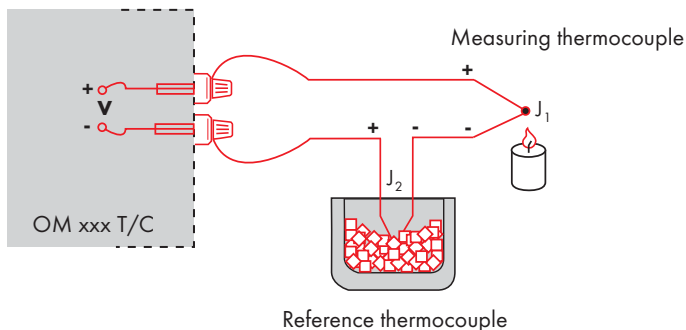

WITH REFERENCE THERMOCOUPLE

- a reference thermocouple may be located in the same place as the measuring instrument or in place with stable temperature/compensation box
- when measuring with reference thermocouple set **CONNECT.** in the instrument menu to **I NT2TC** or **EXT2TC**
- when using a thermostat (a compensation box or environment with constant temperature) set in the instrument menu **CJCTEM.** its temperature (applies for setting **CONNECT.** to **EXT2TC**)
- if the reference thermocouple is located in the same environment as the measuring instrument then set in the instrument menu **CONNECT.** to **I NT2TC.** Based on this selection the measurement of the ambient temperature is performed by a sensor located in the instrument terminal board.

WITHOUT REFERENCE THERMOCOUPLE

- inaccuracy originating from the creation of dissimilar thermocouples on the transition point terminal/conductor of the thermocouple is not compensated for in the instrument
- when measuring without reference thermocouple set **CONNECT.** in the instrument menu to **I NT1TC** or **EXT1TC**
- when measuring temperature without reference thermocouple the error in measured data may be as much as 10 °C (applies for setting **CONNECT.** to **EXT1TC**)

The instruments communicate via serial line RS232 or RS485. For communication they use the ASCII protocol.

The commands are described in specifications you can find at [na www.orbit.merret.cz/rs](http://na.www.orbit.merret.cz/rs) or in the OM Link program.

DETAILED DESCRIPTION OF COMMUNICATION VIA SERIAL LINE

Event	Type	Protocol	Transmitted data														
Data solicitation (PC)	232	ASCII	#	A	A	<CR>											
		MessBus	No - data is transmitted permanently														
	485	ASCII	#	A	A	<CR>											
		MessBus	<SADR>	<ENQ>													
Data transmission (instrument)	232	ASCII	>	D	[D]	[D]	[D]	[D]	[D]	[D]	[D]	[D]	[D]	[D]	[D]	<CR>	
		MessBus	<SADR>	D	[D]	[D]	[D]	[D]	[D]	[D]	[D]	[D]	[D]	[D]	[D]	[D]	<ETX>
	485	ASCII	>	D	[D]	[D]	[D]	[D]	[D]	[D]	[D]	[D]	[D]	[D]	[D]	<CR>	
		MessBus	<SADR>	D	[D]	[D]	[D]	[D]	[D]	[D]	[D]	[D]	[D]	[D]	[D]	<ETX>	<BCC>
Command confirmation (inst.) - OK	485	MessBus	!	A	A	<CR>											
Command confirmati (instrument) - Bad			?	A	A	<CR>											
Instrument identification			#	A	A	1Y	<CR>										
HW identification			#	A	A	1Z	<CR>										
One-time transmission			#	A	A	7X	<CR>										
Repeated transmission			#	A	A	8X	<CR>										

LEGEND

#	35	23 _H	Command beginning
A	A	0...31	Two characters of instrument address (sent in ASCII - tens and units, e.g. "01", "99" universal)
<CR>	13	0D _H	Carriage return
<SP>	32	20 _H	Space
N, P			Number and command - command code
D			Data - usually characters "0"..."9", "-", ".", ";", [D] - dp. and [] may prolong data
R	30 _H ...3F _H		Relay and tare status
!	33	21 _H	Positive confirmation of command (ok)
?	63	3F _H	Negative confirmation of command (point)
>	62	3E _H	Beginning of transmitted data
<STX>	2	02 _H	Beginning of text
<ETX>	3	03 _H	End of text
<SADR>	address +60 _H		Prompt to send from address
<EADR>	address +40 _H		Prompt to accept command at address
<ENQ>	5	05 _H	Terminate address
<DLE>1	16 49	10 _H 31 _H	Confirm correct statement
<NAK>	21	15 _H	Confirm error statement
<BCC>			Check sum -XOR

RELAY, TARE

Sign	Relay 1	Relay 2	Tare	Change relay 3/4
P	0	0	0	0
Q	1	0	0	0
R	0	1	0	0
S	1	1	0	0
T	0	0	1	0
U	1	0	1	0
V	0	1	1	0
W	1	1	1	0
p	0	0	0	1
q	1	0	0	1
r	0	1	0	1
s	1	1	0	1
t	0	0	1	1
u	1	0	1	1
v	0	1	1	1
w	1	1	1	1

ERROR	CAUSE	ELIMINATION
E.D.Un.	Number is too small (large negative) to be displayed	change DP setting, channel constant setting
E.D.Ov.	Number is too large to be displayed	change DP setting, channel constant setting
E.T.Un.	Number is outside the table range	increase table values, change input setting (channel constant setting)
E.T.Ov.	Number is outside the table range	increase table values, change input setting (channel constant setting)
E.I .Un.	Input quantity is smaller than permitted input quantity range	change input signal value or input (range) setting
E.I .Ov.	Input quantity is larger than permitted input quantity range	change input signal value or input (range) setting
E. HW.	A part of the instrument does not work properly	send the instrument for repair
E. EE	Data in EEPROM corrupted	perform restoration of manufacture setting, upon repeated error statement send instrument for repair
E.SET	Change of a linked item in the menu, Data in EEPROM outside the range	change of contiguous items, perform restoration of manufacture setting, upon repeated error statement send instrument for repair
E. CLR.	Memory was empty (presetting carried out)	upon repeated error statement send instrument for repair, possible failure in calibration
E.OUT.	Analogue output current loop disconnected	check wire connection

The instrument allows to add two descriptive characters to the classic numeric formats (at the expense of the number of displayed places). The setting is performed by means of a shifted ASCII code. Upon modification the first two places display the entered characters and the last two places the code of the relevant symbol from 0 to 95. Numeric value of given character equals the sum of the numbers on both axes of the table.

Description is cancelled by entering characters with code 00

0		Q	"	£	\$	¥	€	'	0		!	"	#	\$	%	&	'
8	()	*	+	,	-	.	/	8	()	*	+	,	-	.	/
16	0	1	2	3	4	5	6	7	16	0	1	2	3	4	5	6	7
24	8	9	VA	Vr	<	=	>	?	24	8	9	VA	Vr	<	=	>	?
32	Q	R	B	C	D	E	F	G	32	@	A	B	C	D	E	F	G
40	H	I	J	K	L	M	N	O	40	H	I	J	K	L	M	N	O
48	P	Q	R	S	T	U	V	W	48	P	Q	R	S	T	U	V	W
56	X	Y	Z	[\]	^	_	56	X	Y	Z	[\]	^	_
64	`	a	b	c	d	e	f	g	64	`	a	b	c	d	e	f	g
72	h	i	j	k	l	m	n	o	72	h	i	j	k	l	m	n	o
80	p	q	r	s	t	u	v	w	80	p	q	r	s	t	u	v	w
88	X	Y	Z	{		}	~		88	x	y	z	{		}	~	

INPUT

range is adjustable

±60 mV	>100 MOhm
±150 mV	>100 MOhm
±300 mV	>100 MOhm
±1200 mV	>100 MOhm

DC

Input U
Input U
Input U
Input UVoltage of lin. pot. 2,5 VDC/6 mA
min. potentiometer resistance is 500 Ohm

DU

PROJECTION

Display: 999999, intensive red or green
14-ti segment LED, digit height 14 mm
Projection: ±99999 (.99999...999999)
Decimal point: adjustable - in menu
Brightness: adjustable - in menu

range is adjustable

±0,1 A	< 300 mV
±0,25 A	< 300 mV
±0,5 A	< 300 mV
±1 A	< 30 mV
±5 A	< 150 mV
±100 V	20 MOhm
±250 V	20 MOhm
±500 V	20 MOhm

DC - option "A"

Input I
Input I
Input I
Input I
Input I
Input U
Input U
Input U

INSTRUMENT ACCURACY

TC: 50 ppm/°C
Accuracy: ±0,1% of range + 1 digit
±0,15% of range + 1 digit **RTD, T/C**
Above accuracies apply for projection 9999

range is adjustable

0/4...20 mA	< 400 mV
±2 V	1 MOhm
±5 V	1 MOhm
±10 V	1 MOhm
±40 V	1 MOhm

PM

Input I
Input U
Input U
Input U
Input UResolution: 0,01°/0,1°/1° **RTD**
Rate: 0,1...40 measurements/s**
Overload capacity: 10x (t < 100 ms) not for 500 V and 5 A,
2x (long-term)
Linearisation: by linear interpolation in 38 points
- solely via OM Link

range is adjustable

0...100 Ohm
0...1 kOhm
0...10 kOhm
0...100 kOhm
Autorange

OHM

Connection:

2, 3 or 4 wire

Pt xxxx

-200°...850°C

RTD

Pt xxxx/3910 ppm

-200°...1 100°C

Ni xxxx

-50°...250°C

Cu/4260 ppm

-50°...200°C

Cu/4280 ppm

-200°...200°C

Type Pt:

EU > 100/500/1 000 Ohm, with 3 850 ppm/°C
US > 100 Ohm, with 3 920 ppm/°C
RU > 50/100 Ohm, with 3 910 ppm/°C

Type Ni:

Ni 1 000/ Ni 10 000 with 5 000/6 180 ppm/°C

Type Cu:

Cu 50/Cu 100 with 4 260/4 280 ppm/°C

Connection:

2, 3 or 4 wire

range is adjustable in configuration menu

Type:	J (Fe-CuNi)	-200°...900°C
	K (NiCr-Ni)	-200°...1 300°C
	T (Cu-CuNi)	-200°...400°C
	E (NiCr-CuNi)	-200°...690°C
	B (PtRh30-PtRh6)	300°...1 820°C
	S (PtRh10-Pt)	-50°...1 760°C
	R (Pt13Rh-Pt)	-50°...1 740°C
	N (Omegalloy)	-200°...1 300°C
	L (Fe-CuNi)	-200°...900°C

T/C

Digital filters: Averaging, Floating average, Exponential filter, Rounding
Comp. of conduct: max. 40 Ohm/100 Ohm **RTD**
Comp. of cold junct.: adjustable **T/C**
0°...99°C or automatic
Functions: Tare - display resetting
Hold - stop measuring (at contact)
Lock - control key locking
MM - min/max value
Mathematic functions
OM Link: company communication interface for setting, operation
and update of instrument SW
Watch-dog: reset after 400 ms
Calibration: at 25°C and 40% of r.h.

COMPARATOR

Type: digital, adjustable in menu
Mode: Hysteresis, From, Dosing
Limit: -99999...999999
Hysteresis: 0...999999
Delay: 0...99,9 s
Outputs: 2x relays with switch-on contact (Form A)
(230 VAC/30 VDC, 3 A)*
2x relays with switch-off contact (Form C)
(230 VAC/50 VDC, 3 A)*
2x SSR (250 VAC/ 1 A)*
2x/4x open collector (30 VDC/100 mA)
2x bistabil relays (250 VAC/250 VDC, 3 A/0,3 A)*
Relay: 1/8 HP 277 VAC, 1/10 HP 125 V, Pilot Duty D300

* values apply for resistance load

DATA OUTPUTS

Protocols:	ASCII, DIN MessBus, MODBUS, PROBUS
Data format:	8 bit + no parity + 1 stop bit (ASCII) 7 bit + even parity + 1 stop bit (MessBus)
Rate:	600...230 400 Baud 9 600 Baud...12 Mbaud (PROFIBUS)
RS 232:	isolated, two-way communication
RS 485:	isolated, two-way communication, addressing (max. 31 instruments)
PROFIBUS	Data protocol SIEMENS

ANALOGO OUTPUTS

Type:	isolated, programmable with 12 bits D/A convertor, analog output corresponds with displayed data, type and range are adjustable
Non-linearity:	0,1 % of range
TC:	15 ppm/°C
Rate:	response to change of value < 1 ms
Voltage:	0...2 V/5 V/10 V/±10 V
Current:	0...5/20 mA/4...20 mA - compensation of conduct to 500 Ohm/12 V or 1 000 Ohm/24 V

MEASURED DATA RECORD

Type RTC:	time-controlled logging of measured data into instrument memory, allows to log up to 250 000 values
Type FAST:	fast data logging into instrument memory, allows to log up to 8 000 values at a rate of 40 records/s
Transmission:	via data output RS 232/485 or via OM Link

EXCITATION

Adjustable:	5...24 VDC/max. 1,2 W, isolated
-------------	---------------------------------

POWER SUPPLY

Options:	10...30 V AC/DC, 10 VA, isolated, - fuse inside (T 4000 mA) 80...250 V AC/DC, 10 VA, isolated - fuse inside (T 630 mA)
----------	---

MECHANIC PROPERTIES

Material:	Noryl GFN2 SE1, incombustible UL 94 V-1
Dimensions:	96 x 48 x 120 mm
Panel cut-out:	90,5 x 45 mm

OPERATING CONDITIONS

Connection:	connector terminal board, conductor cross-section <1,5 mm ² / <2,5 mm ²
Stabilisation period:	within 15 minutes after switch-on
Working temp.:	0°...60°C
Storage temp.:	-10°...85°C
Cover:	IP65 (front panel only)
Construction:	safety class I
Dielectric strength:	4 kVAC after 1 min between supply and input 4 kVAC after 1 min between supply and data/analog output 4 kVAC after 1 min between supply and relay output 2,5 kVAC after 1 min between supply and data/analog output
Overvoltage cat.:	EN 61010-1, A2
Insulation resistance:	for pollution degree II, measurement category III instrum. power supply > 670 V (PI), 300 V (DI) Input/output > 300 V (PI), 150 (DI)
EMC:	EN 61000-3-2+A12; EN 61000-4-2, 3, 4, 5, 8, 11; EN 550222, A1, A2
Seismic resistance:	IEC 980: 1993, par. 6


**Table of rate of measurement in relation to number of inputs

Channels/Rate	40	20	10	5	2	1	0,5	0,2	0,1
No. of channels: 1 (Type: DC, PM, DU)	40,00	20,00	10,00	5,00	2,00	1,00	0,50	0,20	0,10
No. of channels: 2	5,00	2,50	1,25	1,00	0,62	0,38	0,22	0,09	0,05
No. of channels: 3	3,33	1,66	0,83	0,66	0,42	0,26	0,14	0,06	0,03
No. of channels: 4	2,50	1,25	0,62	0,50	0,31	0,19	0,11	0,05	0,02
No. of channels: 1 (Type: OHM, RTD, T/C)	5,00	2,50	1,25	1,00	0,62	0,38	0,22	0,09	0,05
No. of channels: 2	3,33	1,066	0,83	0,66	0,42	0,26	0,14	0,06	0,03
No. of channels: 3	2,50	1,25	0,62	0,50	0,31	0,19	0,11	0,05	0,02
No. of channels: 4	2,00	1,00	0,50	0,40	0,25	0,15	0,08	0,04	0,02


Front view



Panel cut

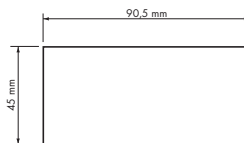



Side view

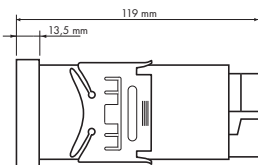

Panel thickness: 0,5...20 mm

Instrument installation

1. insert the instrument into the panel cut-out
2. fit both travellers on the box
3. press the travellers close to the panel

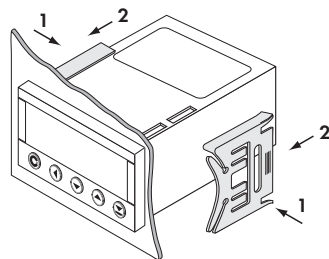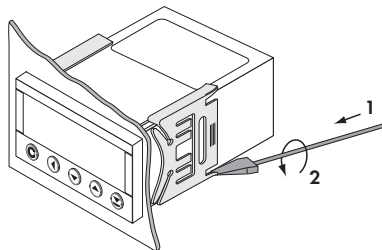

Instrument disassembly

1. slide a screw driver under the traveller wing
2. turn the screw driver and remove the traveller
3. take the instrument out of the panel

Product **OM 402UNI A**
 Type
 Manufacturing No.
 Date of sale

GUARANTEE

A guarantee period of 60 months from the date of sale to the user applies to this instrument.
 Defects occurring during this period due to manufacture error or due to material faults shall be eliminated free of charge.

For quality, function and construction of the instrument the guarantee shall apply provided that the instrument was connected and used in compliance with the instructions for use.

The guarantee shall not apply to defects caused by:

- mechanic damage
- transportation
- intervention of unqualified person incl. the user
- unavoidable event
- other unprofessional interventions

The manufacturer performs guarantee and post.guarantee repairs unless provided for otherwise.



YEARS

Stamp, signature

ES DECLARATION OF CONFORMITY

Company: **ORBIT MERRET, spol. s r.o.**
Klánska 81/141, 142 00 Prague 4, Czech Republic, IDNo.: 00551309

Manufactured: **ORBIT MERRET, spol. s r.o.**
Vodňanská 675/30, 198 00 Prague 9, Czech Republic

declares at its explicit responsibility that the product presented hereunder meets all technical requirements, is safe for use when utilised under the terms and conditions determined by ORBIT MERRET, spol.s r.o. and that our company has taken all measures to ensure conformity of all products of the types referred-to hereunder, which are being brought out to the market, with technical documentation and requirements of the appurtenant Czech statutory orders.

Product: Programmable panel instrument

Type **OM 402**

Version: UNI, PWR

That has been designed and manufactured in line with requirements of:

Statutory order no. 17/2003 Coll., on low-voltage electrical equipment (directive no. 73/23/EHS)
Statutory order no. 616/2006 Coll., on electromagnetic compatibility (directive no. 2004/108/EHS)

The product qualities are in conformity with harmonized standard:

El. safety: EN 61010-1

EMC: EN 61326-1

Electronic measuring, control and laboratory devices – Requirements for EMC “Industrial use”
EN 50131-1, chap. 14 and chap. 15, EN 50130-4, chap. 7, EN 50130-4, chap. 8
(EN 61000-4-11, ed. 2), EN 50130-4, chap. 9 (EN 61000-4-2), EN 50130-4, chap. 10
(EN 61000-4-3, ed. 2), EN 50130-4, chap. 11 (EN 61000-4-6), EN 50130-4, chap. 12
(EN 61000-4-4, ed. 2), EN 50130-4, chap. 13 (EN 61000-4-5), EN 61000-4-8,
EN 61000-4-9, EN 61000-6-1, EN 61000-6-2, EN 55022, chap. 5 and chap. 6

Seismic resistance: IEC 980: 1993, par.6

The product is furnished with CE label issued in 2006.

As documentation serve the protocols of authorized and accredited organizations:

EMC MO CR, Testing institute of technical devices, protocol no. 80/6-46/2006 of 03/03/2006
MO CR, Testing institute of technical devices, protocol no. EMI.80/6-333/2006 of 15/01/2007

Seizmická odolnost VOP-026 Stemberk, protocol no.: 6430-16/2007 of 07/02/2007

Place and date of issue: Prague, 19. Juli 2010

Miroslav Hackl
Company representative

Assessment of conformity pursuant to §22 of Act no. 22/1997 Coll. and changes as amended by Act no.71/2000 Coll. and 205/2002 Coll