



OM 402UNI_{/20mm}

4 DIGIT PROGRAMMABLE UNIVERSAL INSTRUMENT

DC VOLTMETER / AMMETER
PROCESS MONITOR
OHMMETER
THERMOMETER FOR PT 100 / 500 / 1 000
THERMOMETER FOR NI 1 000
THERMOMETER FOR THERMOCOUPLES
DISPLAYS FOR LIN. POTENTIOMETERS



SAFETY INSTRUCTIONS

Please, read the enclosed safety instructions carefully and observe them!
These instruments should be safeguarded by isolated or common fuses (breakers)!
For safety information the EN 61 010-1 + A2 standard must be observed.
This instrument is not explosion-safe!

TECHNICAL DATA

Measuring instruments of the OM 402 series conform to the European regulation 89/336/EWG and the Ordinance 168/1997 Coll.

The instruments are up to the following European standards:
EN 55 022, class B
EN 61000-4-2, -4, -5, -6, -8, -9, -10, -11

Seismic capacity:
IEC 980: 1993, par. 6

The instruments are applicable for unlimited use in agricultural and industrial areas.

CONNECTION

Supply of energy from the main line has to be isolated from the measuring leads.



ORBIT MERRET, spol. s r.o.

Vodnanská 675/30
198 00 Prague 9
Czech Republic

Tel: +420 - 281 040 200
Fax: +420 - 281 040 299
e-mail: orbit@merret.cz
www.orbit.merret.cz



1.	Contents	3
2.	Instrument description	4
3.	Instrument connection	6
4.	Instrument setting	8
	Symbols used in the instructions	10
	Setting the DP and the (-) sign	10
	Control keys function	11
	Setting/permitting items into "USER" menu	11
5.	Setting "LIGHT" menu	12
5.0	Description "LIGHT" menu	12
	Setting input - Type "DC"	16
	Setting input - Type "PM"	18
	Setting input - Type "OHM"	20
	Setting input - Type "RTD - Pt"	22
	Setting input - Type "RTD - Ni"	24
	Setting input - Type "T/C"	26
	Setting input - Type "DU"	28
	Setting input - Type "RTD - Cu"	30
	Setting Limits	32
	Setting analog output	34
	Selection of display color	36
	Selection of programming menu „LIGHT"/„PROFI"	38
	Restoration of manufacture setting	38
	Calibration - input range (DU)	39
	Selection of instrument menu language version	40
	Setting new access password	40
	Instrument identification	41
6.	Setting "PROFI" menu	42
6.0	Description of "PROFI" menu	42
6.1	"PROFI" menu - INPUT	
6.1.1	Resetting internal values	46
6.1.2	Setting measuring type, range, mode, rate,	47
6.1.3	Setting the Real Time	51
6.1.4	External input function selection	51
6.1.5	Optional accessory functions of the keys	52
6.2	"PROFI" menu - CHANNEL	
6.2.1	Setting measuring parameters (projection, filters, decimal point, description)	56
6.2.2	Setting mathematic functions	59
6.2.3	Selection of evaluation of min/max. value	61
6.3	"PROFI" menu - OUTPUT	
6.3.1	Setting data logging	62
6.3.2	Setting Limits	64
6.3.3	Setting data output	67
6.3.4	Setting analog output	68
6.3.5	Selection of display projection	70
6.4	"PROFI" menu - SERVICE	
6.4.1	Selection of programming menu „LIGHT"/„PROFI"	72
6.4.2	Restoration manufacture setting	73
6.4.3	Calibration - input range (DU)	74
6.4.4	Selection of instrument menu language version	74
6.4.5	Setting new access password	74
6.4.6	Instrument identification	75
7.	Setting items into "USER" menu	76
7.0	Configuration "USER" menu	76
8.	Method of measuring of the cold junction	78
9.	Data protocol	80
10.	Error statements	82
11.	Technical data	84
12.	Instrument dimensions and instalation	86
13.	Certificate of guarantee	87
	Declaration of conformity	88

2.1

Description

The OM 402 model series are 4 digit panel programmable instruments designed for maximum efficiency and user comfort while maintaining their favourable price. Two models are available: UNI and PWR.

Type OM 402UNI is a multifunction instrument with the option of configuration for 8 various input options, easily configurable in the instrument menu. By further options of input modules it is feasible to measure larger ranges of DC voltage and current or increase the number of inputs up to 4 (applies for PM).

The instrument is based on an 8-bit microcontroller with a multichannel 24-bit sigma-delta converter, which secures high accuracy, stability and easy operation of the instrument.

The OM 402 is a multifunction instrument available in following types and ranges

type UNI

DC:	0...60/150/300/1200 mV
PM:	0...5 mA/0...20 mA/4...20 mA/±2 V/±5 V/±10 V/±40 V
OHM:	0...100 Ω/0...1 kΩ/0...10 kΩ/0...100 kΩ/Auto
RTD-Pt:	Pt 50/100/Pt 500/Pt 1 000
RTD-Cu:	Cu 50/Cu 100
RTD-Ni:	Ni 1 000/Ni 10 000
T/C:	J/K/T/E/B/S/R/N/L
DU:	Linear potentiometer (min. 500 Ω)

type UNI, option A

DC:	±0,1 A/±0,25 A/±0,5 A/±2 A/±5 A/±100 V/±250 V/±500 V
------------	--

type UNI, option B (expansion by 3 more inputs)

PM:	3x 0...5 mA/0...20 mA/4...20 mA/±2 V/±5 V/±10 V/±40 V
------------	---

PROGRAMMABLE PROJECTION

Selection:	of type of input and measuring range
Measuring range:	adjustable as fixed or with automatic change
Setting:	manual, optional projection on the display may be set in the menu for both limit values of the input signal, e.g. input 0...20 mA > 0...850,0
Projection:	-9999...9999

COMPENSATION

of conduct:	in the menu it is possible to perform compensation for 2-wire connection
of conduct in probe:	internal connection (conduct resistance in measuring head)
of CJC (T/C):	manual or automatic, in the menu it is possible to perform selection of the type of thermocouple and compensation of cold junctions, which is adjustable or automatic (temperature at the brackets)

LINEARIZATION

Linearization:*	by linear interpolation in 50 points (solely via OM Link)
-----------------	---

DIGITAL FILTERS

Float. average:	from 2...30 measurements
Exponen. average:	from 2...100 measurements
Rounding:	setting the projection step for display

MATHEMATIC FUCTIONS

Min/max. value:	registration of min./max. value reached during measurement
Tare:	designed to reset display upon non-zero input signal
Peak value:	the display shows only max. or min. value
Mat. operations:	polynome, 1/x, logarithm, exponential, power, root, sin x

EXTERNAL CONTROL

Lock:	control keys blocking
Hold:	display/instrument blocking
Tare:	tare activation/resetting tare to zero
Resetting MM:	resetting min/max value
Memory:	data storage into instrument memory

2.2 Operation

The instrument is set and controlled by five control keys located on the front panel. All programmable settings of the instrument are performed in three adjusting modes:

LIGHT	Simple programming menu - contains solely items necessary for instrument setting and is protected by optional number code
PROFI	Complete programming menu - contains complete instrument menu and is protected by optional number code
USER	User programming menu - may contain arbitrary items selected from the programming menu (LIGHT/PROFI), which determine the right (see or change) - access without password

All programmable parameters are stored in the EEPROM memory (they hold even after the instrument is switched off).



Complete instrument operation and setting may be performed via OM Link communication interface, which is a standard equipment of all instruments.

The operation program is freely accessible (www.orbit.merret.cz) and the only requirement is the purchase of OML cable to connect the instrument to PC. It is manufactured in version RS 232 and USB and is compatible with all ORBIT MERRET instruments. Another option for connection is with the aid of data output RS 232 or RS 485 (without the need of the OML cable).

The program OM LINK in „Basic“ version will enable you to connect one instrument with the option of visualization and archiving in PC. The OM Link „Standard“ version has no limitation of the number of instruments connected.

2.3 Options

Excitation is suitable for supplying power to sensors and transmitters. It has a galvanic separation.

Comparators are assigned to monitor one, two, three or four limit values with relay output. The user may select limits regime: LIMIT/DOSING/FROM-TO. The limits have adjustable hysteresis within the full range of the display as well as selectable delay of the switch-on in the range of 0...99,9 s. Reaching the preset limits is signalled by LED and simultaneously by the switch-on of the relevant relay.

Data outputs are for their rate and accuracy suitable for transmission of the measured data for further projection or directly into the control systems. We offer an isolated RS232 and RS485 with the ASCII or DIN MessBus protocol.

Analog outputs will find their place in applications where further evaluating or processing of measured data is required in external devices. We offer universal analog output with the option of selection of the type of output - voltage/current. The value of analog output corresponds with the displayed data and its type and range are selectable in Menu.

Measured data record is an internal time control of data collection. It is suitable where it is necessary to register measured values. Two modes may be used. FAST is designed for fast storage (40 records/s) of all measured values up to 8 000 records. Second mode is RTC, where data record is governed by Real Time with data storage in a selected time segment and cycle. Up to 250 000 values may be stored in the instrument memory. Data transmission into PC via serial interface RS232/485 and OM Link.

The instrument supply leads should not be in proximity of the incoming low-potential signals.

Contactors, motors with larger input power should not be in proximity of the instrument.

The leads into the instrument input (measured quantity) should be in sufficient distance from all power leads and appliances. Provided this cannot be secured it is necessary to use shielded leads with connection to ground (bracket E).

The instruments are tested in compliance with standards for use in industrial area, yet we recommend to abide by the above mentioned principles.

MEASURING RANGES


Type	Input I	Input U
DC		0...60/150/300/1 200 mV
PM	0...5/20 mA/4...20 mA	$\pm 2/\pm 5/\pm 10/\pm 40$ V
OHM	0...0,1/1/10/100 k Ω /Autorange	
RTD-Pt	Pt 100/Pt 500/ Pt 1 000	
RTD-Cu	Cu 50/100	
RTD-Ni	Ni 1 000/10 000	
T/C	J/K/T/E/B/S/R/N	
DU	Linear potentiometer (min. 500 Ω)	

OPTION "A"


Type	Input I	Input U
DC	$\pm 0,1$ A/ $\pm 0,25$ A/ $\pm 0,5$ A to GND (C) ± 2 A/ ± 5 A to GND (B)	± 100 V/ ± 250 V/ ± 500 V to GND (C)

OPTION "B"



Type	Input 2, 3, 4/I	Input 2, 3, 4/U
PM	0...5/20 mA/4...20 mA	$\pm 2/\pm 5/\pm 10/\pm 40$ V

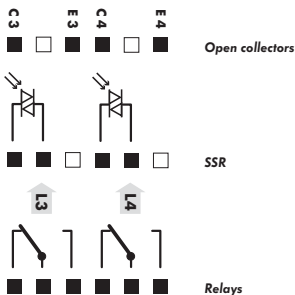

! Excitation has the minus pole common with the input - the bracket no. 20 - GND and you may set its value by trimmer above the bracket no. 17

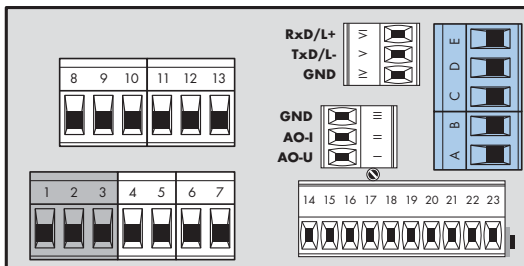

- Option A**
- INPUT - U
 -
 - GND - U/10,5
 - GND - I5
 - INPUT - I

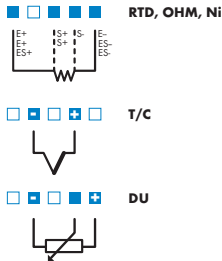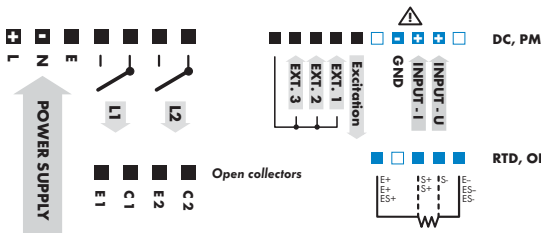

Maximum of 250 mA may be connected to "INPUT - I" (bracket no. 21) , i.e. 10-times range overload. Mind the correct connection/mistaking of current - voltage input. Destruction of measuring resistance in current input (15R) may occur.

PROFI

Setting

profi

- ▶ For expert users
- ▶ Complete instrument menu
- ▶ Access is password protected
- ▶ Possibility to arrange items of the „User“ menu
- ▶ Tree menu structure

LIGHT

Setting

light

- ▶ For trained users
- ▶ Only items necessary for instrument setting
- ▶ Access is password protected
- ▶ Possibility to arrange items of the „User“ menu
- ▶ Linear menu structure

USER

Setting

*profi light**user*

- ▶ For user operation
- ▶ Menu items are set by the user (Profi/Light) as per request
- ▶ Access is not password protected
- ▶ Optional menu structure either tree (PROFI) or linear (LIGHT)

4.1 Setting

The instrument is set and controlled by five control keys located on the front panel. All programmable settings of the instrument are performed in three adjusting modes:

- LIGHT** **Simple programming menu**
- contains solely items necessary for instrument setting and is protected by optional number code
- PROFI** **Complete programming menu**
- contains complete instrument menu and is protected by optional number code
- USER** **User programming menu**
- may contain arbitrary items selected from the programming menu (LIGHT/PROFI), which determine the right (see or change)
 - acces without password


All programmable parameters are stored in the EEPROM memory (they hold even after the instrument is switched off).

Complete instrument operation and setting may be performed via OM Link communication interface, which is a standard equipment of all instruments.


The operation program is freely accessible (www.orbit.merret.cz) and the only requirement is the purchase of OML cable to connect the instrument to PC. It is manufactured in version RS 232 and USB and is compatible with all ORBIT MERRET instruments.

Another option for connection is with the aid of data output RS 232 or RS 485 (without the need of the OML cable).

Scheme of processing the measured signal

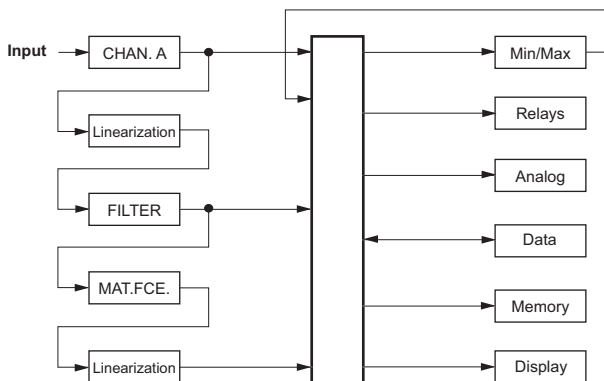

Setting and controlling the instrument is performed by means of 5 control keys located on the front panel. With the aid of these keys it is possible to browse through the operation menu and to select and set required values.

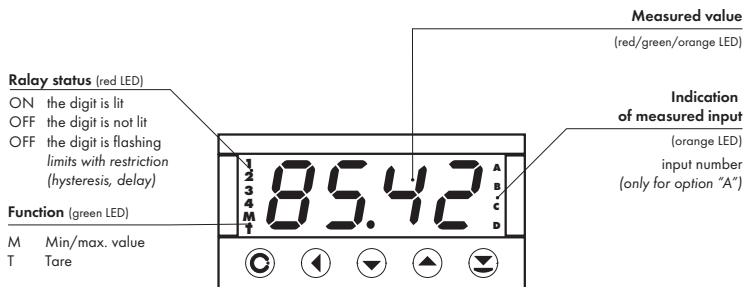

Symbols used in the instructions

DC **PM**

DU **OHM**

RTD **T/C**

Indicates the setting for given type of instrument

DEF

values preset from manufacture



symbol indicates a flashing light (symbol)



inverted triangle indicates the item that can be placed in USER menu



broken line indicates a dynamic item, i.e. it is displayed only in particular selection/version



after pressing the key the set value will not be stored



after pressing the key the set value will be stored



30 continues on page 30

Setting the decimal point and the minus sign

DECIMAL POINT

Its selection in the menu, upon modification of the number to be adjusted it is performed by the control key with transition beyond the highest decade, when the decimal point starts flashing. Positioning is performed by / .

THE MINUS SIGN

Setting the minus sign is performed by the key on higher decade. When editing the item subtraction must be made from the current number (e.g.: 013 > , on class 100 > -87)

Control keys functions

Key	Measurement	Menu	Setting numbers/selection
	access into USER menu	exit menu	quit editing
	programmable key function	back to previous level	move to higher decade
	programmable key function	move to previous item	move down
	programmable key function	move to next item	move up
	programmable key function	confirm selection	confirm setting/selection
			numeric value is set to zero
	access into LIGHT/PROFI menu		
	direct access into PROFI menu		
		configuration of an item for "USER" menu	
		determine the sequence of items in "USER - LIGHT" menu	

Setting items into „USER“ menu

- in LIGHT or PROFI menu
- no items permitted in USER menu from manufacture
- on items marked by inverted triangle

user

Legend is flashing - current setting is displayed



- item will not be displayed in USER menu
- item will be displayed in USER menu with the option of setting
- item will be solely displayed in USER menu

5.0

Setting "LIGHT"

LIGHT

Simple programming menu

- contains only items necessary for instrument setting and is protected by optional number code

SETTING

LIGHT

Light

- For capable users
- Only items necessary for instrument setting
- Access is password protected
- Possibility to arrange items of the „User“ menu
- Linear menu structure

Preset from manufacture

Password	"0"
Menu	LIGHT
USER menu	off
Setting the items	DEF

1428



PASS

0

Access password



Upon delay exceeding 60 s the programming mode is automatically discontinued and the instrument itself restores the measuring mode

TYPE

PI

MODE

4-20

Selecting input and range

RTD OHM

CO_n

2-w

FO_rR

000.0

Selecting projection and connection

TC

CO_n

EMF. 16C

C.J.t

23

FO_rR

0000

DC

PM

OHM

DU

AI_nA

0

AA_HA

100

FO_rR

000.0

LL1

20

LL2

40

Option - comparator

LL3

60

LL4

80

Option - Analog output

EA₀

120

AI₀

0

AA₀

100

Basic color

Co.0

GrE

First color's limit

d.L.1

9999

Color after first limit

Co.2

rEd

Second color's limit

d.L.1

9999

Color after second limit

Co.2

OrR

Menu type

AE_nU

LIGH

Return to manufacture calibration

r.E.C.A

YES

Return to manufacture setting

r.E.S.E

YES

Calibration - only for "DU"

DU

C.N.1

YES

C.N.A

YES

Language selection

LANG

EnGL

New password

n.PAS

0

Identification

IdEn

YES

Return to measuring mode

ON 402

1428

PRSS

0

Entering access password for access into the menu

PRSS Access into instrument menu

PAS = 0

- access into menu is unrestricted, after releasing keys you automatically move to first item of the menu

PAS > 0

- access into menu is protected by number code

Set "Password" = 42 Example

0 2 02 12 22

32 42 4YPE

TYPE

dC Pn OHM Pt n i tC

dU Cu

TYPE Selection of the type of instrument

- primary selection of the type of instrument
- performs default setting **DEF** of values from manufacture, incl. calibration

Menu	Type of instrument
DC	DC voltmeter
PM	Process monitor
OHM	Ohmmeter
Pt	Thermometer for sensors Pt
Ni	Thermometer for sensors Ni
TC	Thermometer for thermocouples
DU	Display for lin. potentiometer
Cu	Thermometer for sensors Cu

Type "PM"

dC Pn nDE

Type „DC“	16
Type "PM"	18
Type "OHM"	20
Type "RTD-Pt"	22
Type "RTD-Ni"	24
Type "T/C"	26
Type "DU"	28
Type "RTD-Cu"	30

Type "DC"



nDdE Selection of the instrument measuring range

DEF = 60 mV

DEF = 500 V*

* only for option "A"

MODE	Menu	Measuring range
MODE-A	60	±60 mV
	150	±150 mV
	300	±300 mV
	1200	±1,2 V
	100	±100 V
	250	±250 V
	500	±500 V
	0.10	±0,1 A
	0.25	±0,25 A
	0.50	±0,5 A
	1.00	±1 A
	5.00	±5 A

Range ±150 mV Example

60 150 nInR



nInR Setting display projection for minimum value of input signal

- position of the DP does not affect display projection
- the DP is automatically shifted after the value is confirmed

- range of the setting is -999...9999

DEF = 0

Projection for 0 mV > MIN.A = 0 Example

0 nInR



MAX.A Setting display projection for maximum value of input signal


- position of the DP does not affect display projection
- the DP is automatically shifted after the value is confirmed

- range of the setting is -999...9999

DEF = 100

Projection for 150 mV > MAX.A = 3500 Example

100	100	100	200	300	400
500	500	1500	2500	3500	FO-R

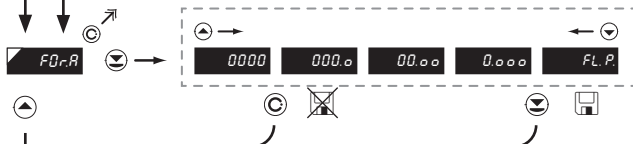

FO-R Setting projection of the decimal point

- positioning of the DP is set here in the measuring mode

DEF = 000.0

Projection of DP on display > 000.0 Example

000.0	0000	COL.0
-------	------	-------

*subsequent item on the menu depends on instrument equipment



Setting for maximum input signal

MAX.A Setting display projection for maximum value of input signal


- position of the DP does not affect display projection
- the DP is automatically shifted after the value is confirmed

- range of the setting is -999...9999

DEF = 100

Projection for 20 mA > MAX.A = 2500 Example

100	100	100	200	300	400
500	500	500	500	500	FD-R

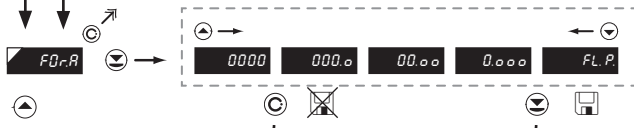

FD-R Setting projection of the decimal point


DEF = 000.0

- positioning of the DP is set here in the measuring mode

Projection of DP on display > 0000 Example

000.0	0000	COLD
-------	------	------

* subsequent item on the menu depends on instrument equipment

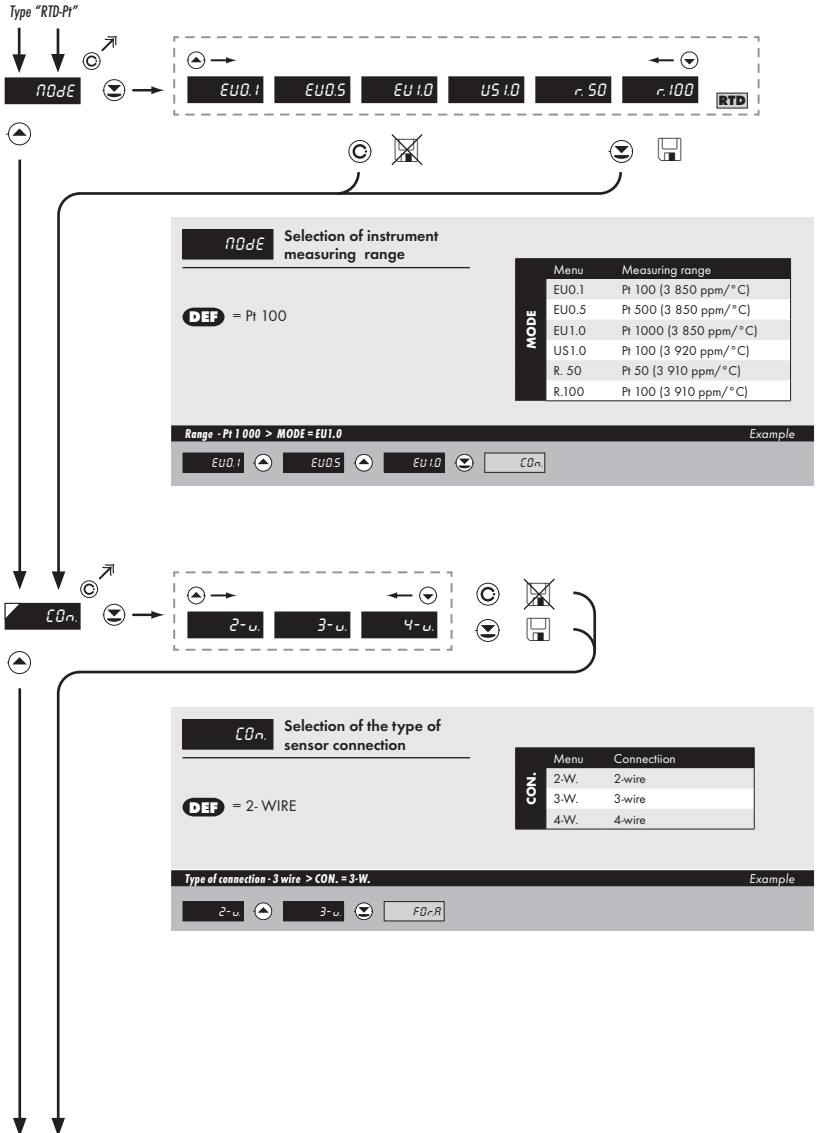





F0_r.R Setting projection of the decimal point **DEF** = 000.0

- positioning of the DP is set here in the measuring mode

Projection of DP on display > 0000	Example
<div style="display: flex; justify-content: space-between; align-items: center;"> 000.0 ▼ 0000 ▼ 00.0 </div>	<small>* subsequent item on the menu depends on instrument equipment</small>



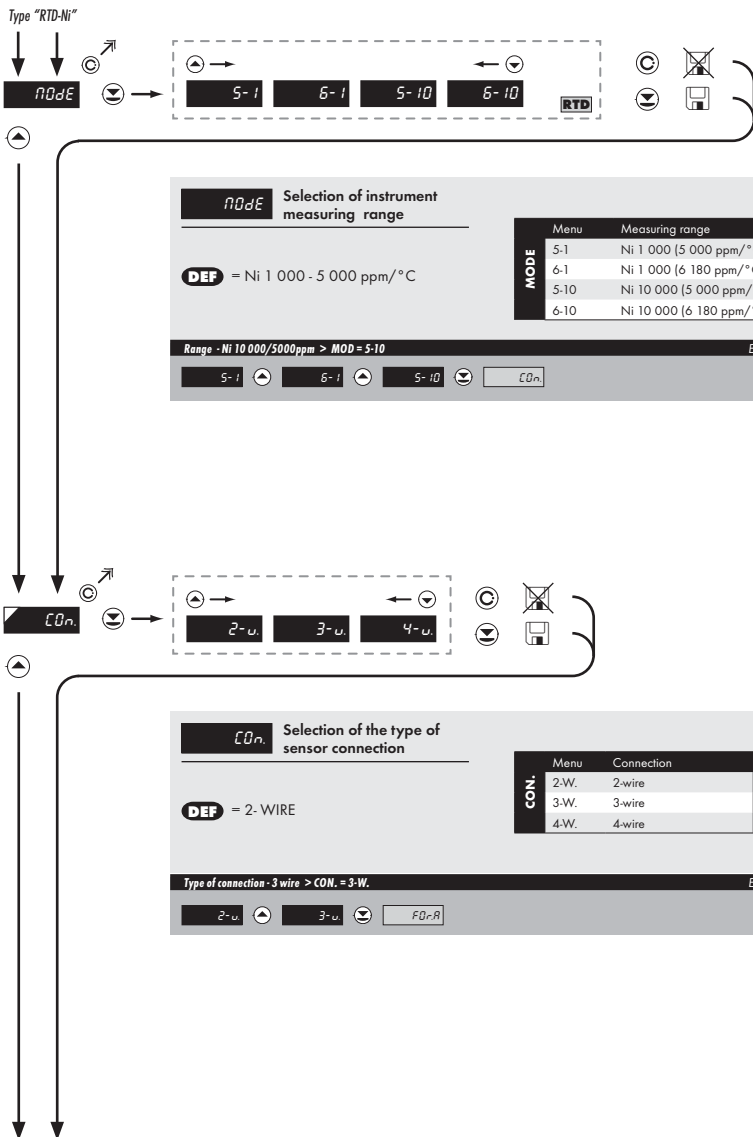



F0-r-R Setting projection of the decimal point **DEF** = 000.0


- positioning of the DP is set here in the measuring mode

Projection of DP on display > 0000 *Example*

000.0	0000	00.00	*subsequent item on the menu depends on instrument equipment
-------	------	-------	--

32

RTD-Ni RTD-Ni RTD-Ni RTD-Ni RTD-Ni RTD-Ni RTD-Ni RTD-Ni RTD-Ni

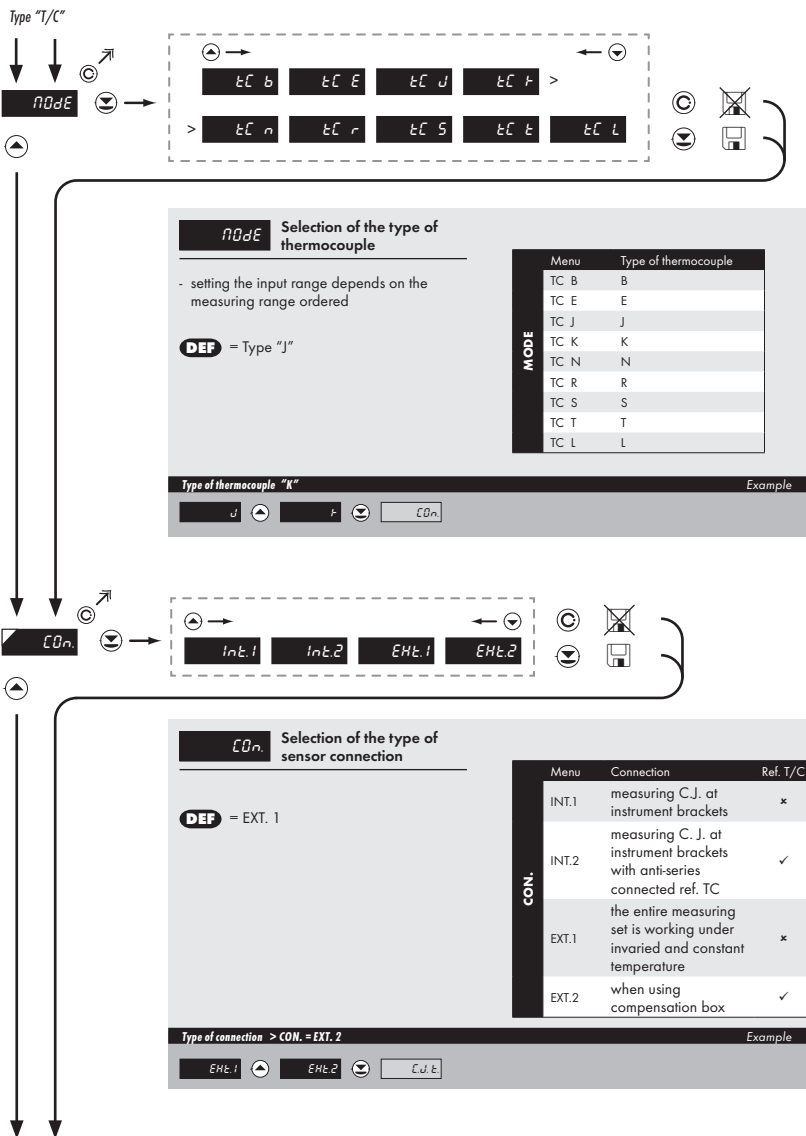

Type "DU"



MIN.A Setting display projection for minimum value of input signal

- position of the DP does not affect display projection
- the DP is automatically shifted after the value is confirmed

- range of the setting is -999...9999

DEF = 0

Projection for the beginning > MIN.A = 0 Example




MAX.A Setting display projection for maximum value of input signal

- position of the DP does not affect display projection
- the DP is automatically shifted after the value is confirmed

- range of the setting is -999...9999

DEF = 100

Projection for the end > MAX.A = 5000 Example

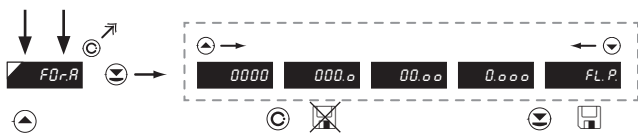

FD_r.A Setting projection of the decimal point **DEF** = 000.0

- positioning of the DP is set here in the measuring mode

Projection of DP on display > 000.0 *Example*

000.0 * subsequent item on the menu depends on instrument equipment

32

Calibration of the beginning and the end of range of linear potentiometer is on page 39



Type "RTD-Cu"




MODE Selection of instrument measuring range

DEF = Cu 50/4 280 ppm

Menu	Measuring range
8-50	Cu 50 (4 285 ppm/°C)
8-0.1	Cu 100 (4 285 ppm/°C)
6-50	Cu 50 (4 260 ppm/°C)
6-0.1	Cu 100 (4 260 ppm/°C)

Range - Cu 50/4 260 ppm > MODE = 6-50 Example

8-50 ◀ ◀ 8-0.1 ◀ ◀ 6-50 ◀ ◀ CON

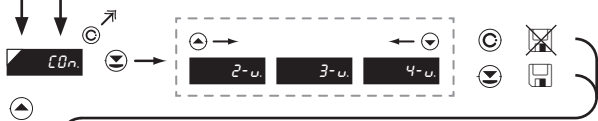

CON Selection of the type of sensor connection

DEF = 2-WIRE

CONNECT	Menu	Connection
	2-W.	2-wire
	3-W.	3-wire
	4-W.	4-wire

Type of connection - 3 wire > CON. = 3-W. Example

2-w ◀ ◀ 3-w ◀ ◀ F0-R




FD_rR Setting projection of the decimal point **DEF** = 000.0

- positioning of the DP is set here in the measuring mode

Projection of DP on display > 0000 Example

000.0 0000 00.0 * subsequent item on the menu depends on instrument equipment

 32

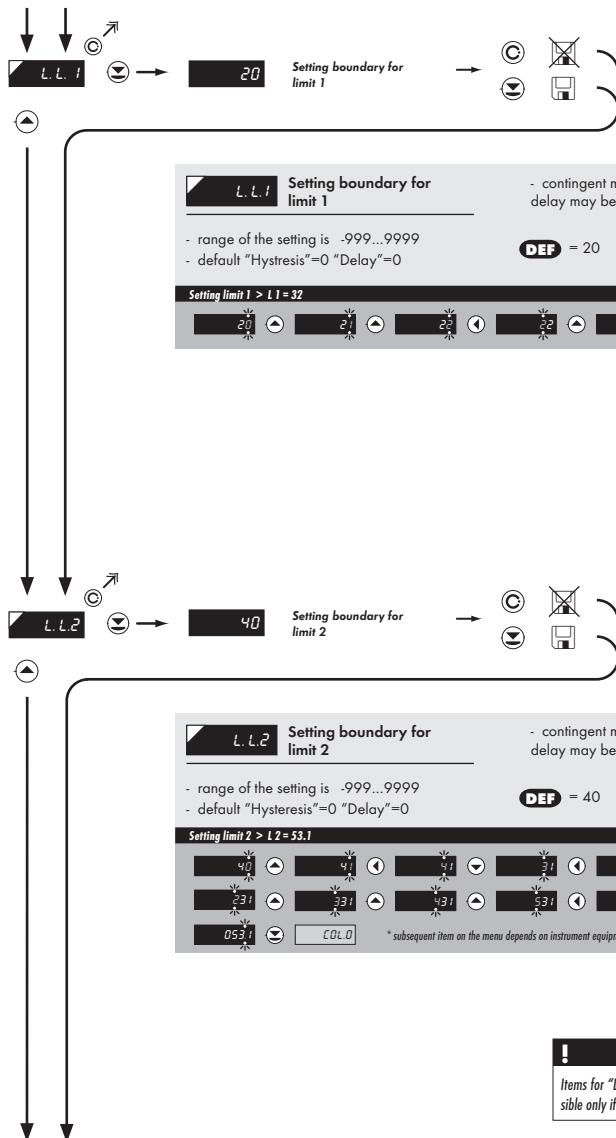

!
Items for "Limits" and "Analog output" are accessible only if incorporated in the instrument.



L.L.3 Setting boundary for limit 3

- range of the setting is -999...9999
- default "Hysteresis"=0 "Delay"=0

DEF = 60

Setting limit 3 > L3 = 85 Example

<input type="text" value="80"/>	<input type="text" value="61"/>	<input type="text" value="62"/>	<input type="text" value="63"/>	<input type="text" value="64"/>	<input type="text" value="65"/>
<input type="text" value="65"/>	<input type="text" value="65"/>	<input type="text" value="85"/>	<input type="text" value="COLD"/>	* subsequent item on the menu depends on instrument equipment	



L.L.4 Setting boundary for limit 4

- range of the setting is -999...9999
- default "Hysteresis"=0 "Delay"=0

DEF = 80

Setting limit 4 > L4 = 103 Example

<input type="text" value="80"/>	<input type="text" value="81"/>	<input type="text" value="82"/>	<input type="text" value="83"/>	<input type="text" value="83"/>	<input type="text" value="93"/>
<input type="text" value="03"/>	<input type="text" value="03"/>	<input type="text" value="103"/>	<input type="text" value="COLD"/>	* subsequent item on the menu depends on instrument equipment	

TY.A.O. Setting the type of analog output

Menu	Range	Description
0-20	0...20 mA	
E. 4	4...20 mA	with indication of error statement (<3,6 mA)
4-20	4...20 mA	
0.5	0...5 mA	
0.2	0...2 V	
0.5	0...5 V	
0-10	0...10 V	

DEF = 4...20 mA

Type of analog output - 0...10 V > TY.A.O. = 0-10 Example

4-20 0-5 0-2 0-5 0-10 **M.A.O.**

M.A.O. Assigning the display value to the beginning of the AO range

DEF = 0


- range of the setting is -999...9999

Display value for the beginning of the AO range > M.L.A.O. = 0 Example

M.A.O.

!

Items for "Limits" and "Analog output" are accessible only if incorporated in the instrument.

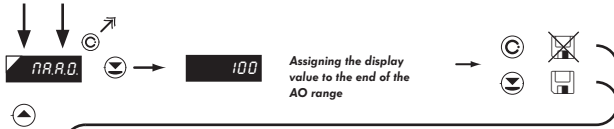


n.n.n.n. Assigning the display value to the end of the AO range **DEF** = 100

- range of the setting is -999...9999

Display value for the end of the AO range > MA.A.O. = 120 Example

100 [DOWN] 100 [UP] 110 [UP] 120 [DOWN] COL.D

Displayed only with options > **Analog output**

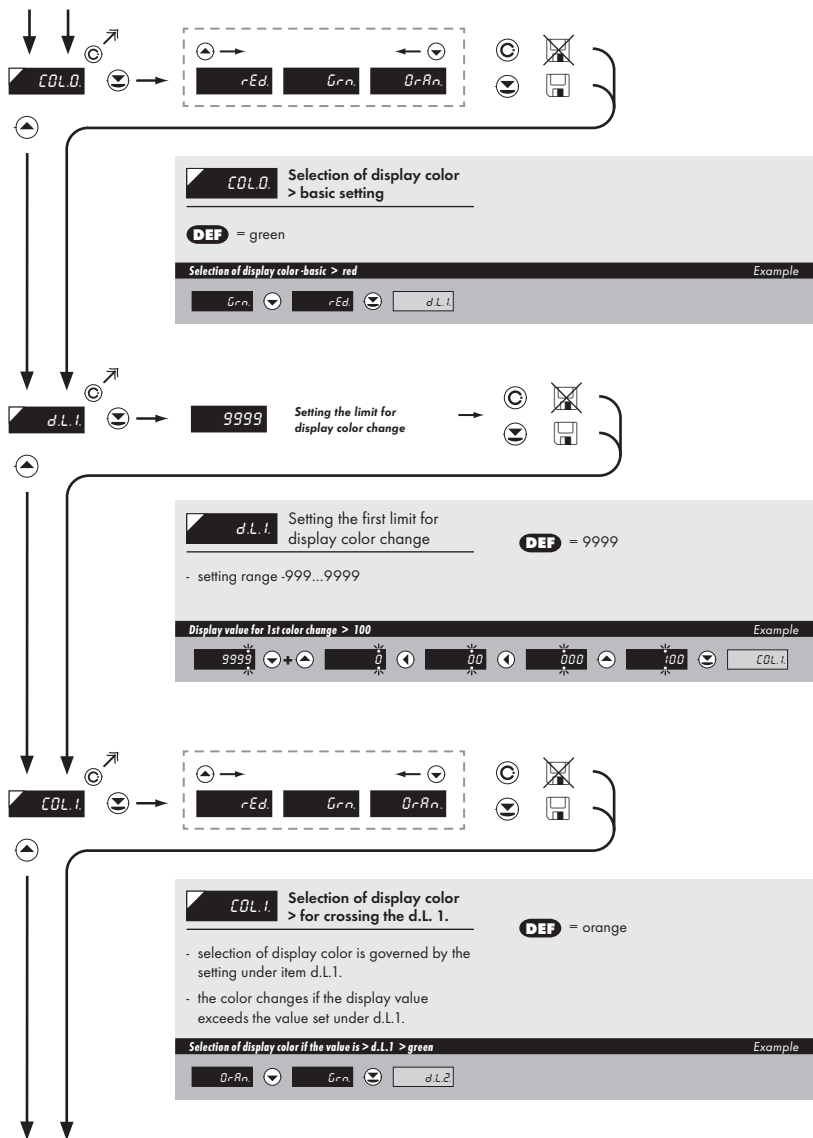



d.L.2. Setting the limit for display color change **DEF** = 9999

- setting range -999...9999

Setting display for 2nd color change > 400 Example

9999	+	0	00	000
200		300	400	COL.2



COL.2. Selection of display color > for crossing the d.L. 2. **DEF** = red

- selection of display color is governed by the setting under item d.L.2.

- the color changes if the display value exceeds the value set under d.L.2.

Selection of display color if the value is > d.L.2 > orange Example

rEd	0-Rn	ORnU
-----	------	------



MENU Setting the menu type LIGHT/PROFI

LIGHT > menu LIGHT, a simple menu,
which contains only the most essential items
necessary for instrument setting
> linear tree structure

PROFI > menu PROFi, a complete menu for
complete instrument setting
> tree menu structure

DEF = LIGHT

Menu LIGHT > MENU = LIGHT

Example

LIGHT r.ECR



r.ECR Restoration of manufacture calibration


- in the event of error calibration it is feasible
to restore manufacture calibration.

Prior to execution of any modifications you
will be asked to confirm your selection.
(YES)

Restoration of manufacture setting > RE.CA.

Example

r.ECR YES r.ESE



r.ESE Restoration of manufacture instrument setting

- in the event of error setting the manufacture
setting may be restored
- restoration is performed for the currently
selected type of the instrument input (select
"TYPE")


- provided you stored your user setting in
the "PROFI" menu, it may also be restored
(select "USER")
- loading manufacture calibration and
primary setting of items on the menu (DEF)

Restoration of manufacture setting > RE.SE.

Example

r.ESE TYPE L.R.N.G. * subsequent item on the menu depends on instrument type, for "DU" > "K.ML."

Type „DC“		40
Type "PM"		40
Type "OHM"		40
Type "RTD-Pl"		40
Type "RTD-Ni"		40
Type "T/C"		40
Type "DU"		39
Type "RTD-Cu"		40

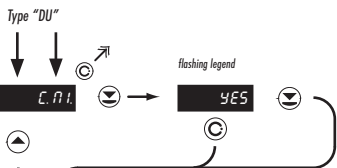


C.NI. Calibration of input range - the potentiometer traveller in initial position Only for type "DU"

- prior confirming the flashing "YES" sign the potentiometer traveller has to be in given idle position

Calibration of the beginning of the range > C. MI. Example

YES

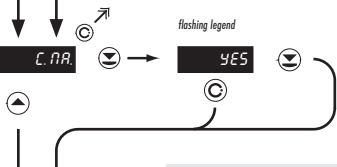

C.NR. Calibration of input range - the potentiometer traveller in end position Only for type "DU"

- prior confirming the flashing "YES" sign the potentiometer traveller has to be in given idle position

Calibration of the end of the range > C. MA. Example

YES





LANG. Selection of language in instrument menu

- selection of language version of the instrument menu **DEF** = ENGL.

Language selection - ENGLISH > LANG. = ENGL. Example

CZE. EnGL. n.PAS




n.PAS. Setting new access password

- upon setting the password to "000" the access to menu LIGHT is free without prompt to enter it
- in the event of loss universal password "8177" may be used

DEF = 0

New password - 341 > n.PAS. = 341 Example

0	0	0	0	0	0	0	0	0
1	1	1	1	1	1	1	1	1
2	2	2	2	2	2	2	2	2
3	3	3	3	3	3	3	3	3
4	4	4	4	4	4	4	4	4
5	5	5	5	5	5	5	5	5
6	6	6	6	6	6	6	6	6
7	7	7	7	7	7	7	7	7
8	8	8	8	8	8	8	8	8
9	9	9	9	9	9	9	9	9
*	*	*	*	*	*	*	*	*
#	#	#	#	#	#	#	#	#
idEn	idEn	idEn	idEn	idEn	idEn	idEn	idEn	idEn

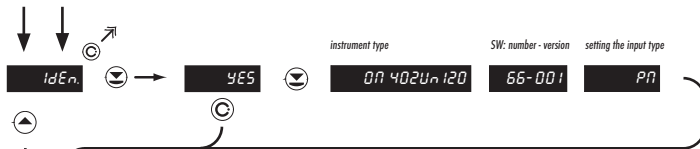

IdEn.

Instrument SW version

- the display shows the type of instrument indication, SW number, SW version and current input setting (Mode)

- if SW version contains a letter in first position, then it is a customer SW
- after the identification is completed the menu is automatically exited and the instrument restores the measuring mode

1428

Return to measuring mode


6.0

Setting "PROFI"

PROFI

Complete programming menu

- contains complete instrument menu and is protected by optional number code
- designed for expert users
- preset from manufacture is menu **LIGHT**

 SETTING
 PROF I
 


- For expert users
- Complete instrument menu
- Access is password protected
- Possibility to arrange items of the „User“ menu
- Tree menu structure

Switching over to "PROFI" menu




- access to **PROFI** menu
- authorization for access to **PROFI** menu does not depend on setting under item SERV. > MENU
- password protected access (unless set as follows under the item SERV. > N. PAS. > PROF. =0)



- access to menu selected under item SERV. > MENU > **LIGH./PROF.**
- password protected access (unless set as follows under the item SERV. > N. PAS. > LIGH. =0)
- for access to **LIGHT** menu passwords for **LIGHT** and **PROFI** menu may be used


6.1 Setting "PROFI" - INPUT

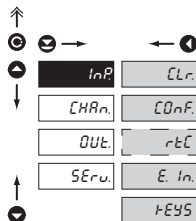

The primary instrument parameters are set in this menu

- Resetting internal values
- Selection of measuring range and parameters
- Setting date and time for option with RTC
- Setting external inputs functions
- Assigning further functions to keys on the instrument

6.1.1 Resetting internal values

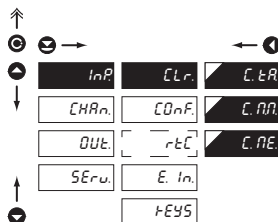

Resetting internal values

- Tare resetting
- Resetting min/max value

- resetting memory for the storage of minimum and maximum value achieved during measurement

- Resetting the instrument memory
- resetting memory with data measured in the "FAST" or "RTC" modes
- not in standard equipment

6.1.2a Selection of measuring rate

↑	⊙	⊖	→		←	⊕	
↑				InP	CLr	rrS	40.0
↓				CHARn	CDnF	TYPE	20.0
				OUT	rEt	NOdE	10.0
				SErv	E. In	CDn	5.0
					FEYS	CUt	2.0
						Ad.r	1.0
						LEAd	0.5
							0.2
							0.1
↑							
↓							

DEF

rrS Selection of measuring rate

40.0	40,0 measurements/s
20.0	20,0 measurements/s
10.0	10,0 measurements/s
5.0	5,0 measurements/s
2.0	2,0 measurements/s
1.0	1,0 measurement/s
0.5	0,5 measurements/s
0.2	0,2 measurements/s
0.1	0,1 measurements/s

6.1.2b Selection of „instrument“ type


↑	⊙	⊖	→		←	⊕	
↑				InP	CLr	rrS	dC
↓				CHARn	CDnF	TYPE	Pn
				OUT	rEt	NOdE	OHn
				SErv	E. In	CDn	Pt
					FEYS	CUt	ni
						Ad.r	tC
						LEAd	dU
							CU
↑							
↓							

DEF


TYPE Selection of „instrument“ type

- selection of particular type of "instrument" is bound to relevant dynamic items

dC	DC voltmeter
Pn	Process monitor
OHn	Ohmmeter
Pt	Thermometer for Pt xxx
ni	Thermometer for Ni xxxx
tC	Thermometer pro thermocouples
dU	Display for linear potentiometers
CU	Thermometer for Cu xxx

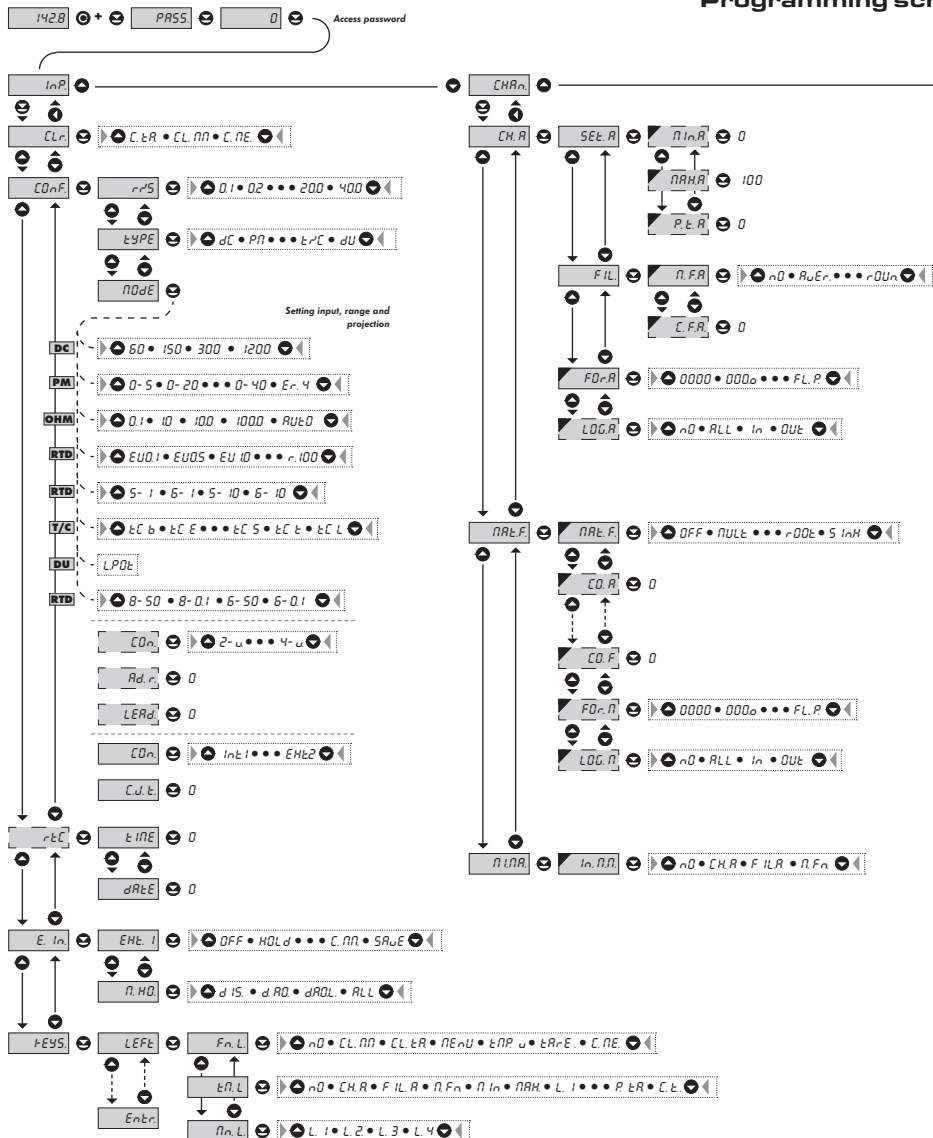

Menu PROFIMENU

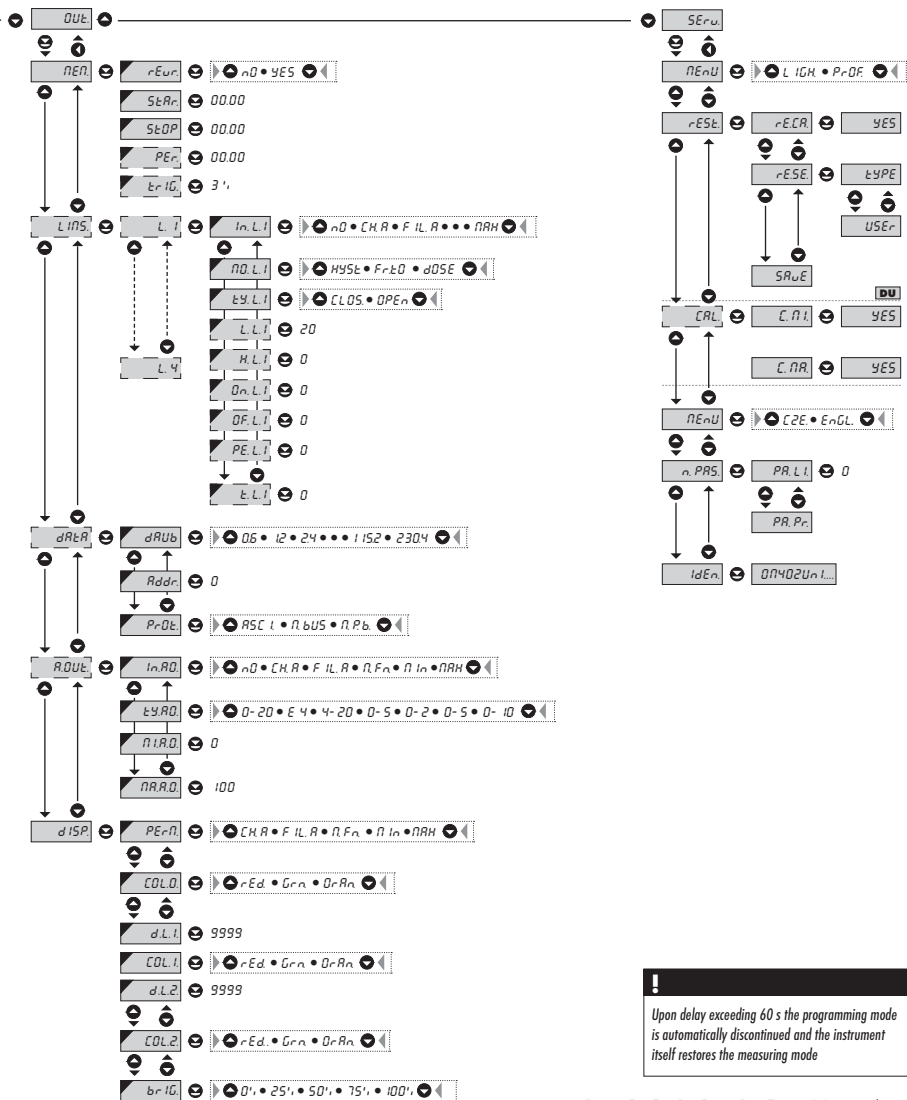

!
Upon delay exceeding 60 s the programming mode is automatically discontinued and the instrument itself restores the measuring mode

6.1.2c Selection of measuring range

↑
⊙ →
⊖ ↓

inP	CLr	r r S	DC	60	OHM	0.1
CHAn	COmF	tyPE	150	1.0	DEF	
OUt	r t C	NOdE	300	10.0		
SErU	E. In.	COm	1200	100.0		
	FEYS	CLt				
		Ad. r				
		LEAd				
			DC - A		PM	
			100	0-5		
			250	0-20		
		DEF	500	4-20	DEF	
			0.10	0-2		
			0.25	0-5		
			0.50	0-10		
			1.00	0-40		
			5.00	Er. 4		
			RTD-Pt		RTD-Cu	
		DEF	EU0.1	8-50	DEF	
			EU0.5	8-0.1		
			EU1.0	6-50		
			US0.1	6-0.1		
			r. 50			
			r. 100			
				T/C		
				ε C b		
			RTD-Ni		ε C E	
		DEF	5-1	ε C J		
			6-1	ε C T	DEF	
			5-10	ε C n		
			6-10	ε C r		
				ε C S		
				ε C t		
			DU	ε C L		
		DEF	L.PdE			

! Switching in the mode AUTO - "OHM"

0.1 > 1 k	0.101 k
1 k > 10 k	1.010 k
10 k > 100 k	10.10 k
100 > 10 k	9.900 k
10 k > 1 k	0.990 k
1 k > 0.1 k	0.099 k


When selecting the "AUTO" range, the items "MIN", "MAX", "P. TAR. A" will not be displayed in the "CHAN. A" setting

NOdE Selection of instrument measuring range

Menu	Measuring range
60	±60 mV
150	±150 mV
300	±300 mV
1200	±1.2 V
100	±100 V
250	±250 V
500	±500 V
0.10	±0.1 A
0.25	±0.25 A
0.50	±0.5 A
1.00	±1 A
5.00	±5 A
Menu	Measuring range
0-5	0...5 mA
0-20	0...20 mA
4-20	4...20 mA
0-2	±2 V
0-5	±5 V
0-10	±10 V
0-40	±40 V
Er. 4	4...20 mA, with error statement of "underflow" upon signal smaller than 3.36 mA
Menu	Measuring range
0.1	0...100 Ω
1.0	0...1 kΩ
10.0	0...10 kΩ
100.0	0...100 kΩ
AUTO	Automatic change of range
Menu	Measuring range
EU0.1	Pt 100 (3 850 ppm/°C)
EU0.5	Pt 500 (3 850 ppm/°C)
EU1.0	Pt 1000 (3 850 ppm/°C)
US1.0	Pt 100 (3 920 ppm/°C)
R. 50	Pt 50 (3 910 ppm/°C)
R.100	Pt 100 (3 910 ppm/°C)
Menu	Measuring range
5-1	Ni 1 000 (5 000 ppm/°C)
6-1	Ni 1 000 (6 180 ppm/°C)
5-10	Ni 10 000 (5 000 ppm/°C)
6-10	Ni 10 000 (6 180 ppm/°C)
Menu	Measuring range
8-50	Cu 50 (4 280 ppm/°C)
8-0.1	Cu 1 00 (4 280 ppm/°C)
6-50	Cu 50 (4 260 ppm/°C)
6-0.1	Cu 100 (4 260 ppm/°C)
Menu	Type of thermocouple
TC B	B
TC E	E
TC J	J
TC K	K
TC N	N
TC R	R
TC S	S
TC T	T
TC L	L

6.1.2e Setting temperature of cold junction

T/C

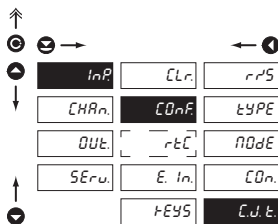


C.J.t. Setting temperature of cold junction

- range 0...99 °C with compensation box
- **DEF** = 23 °C

6.1.2f Compensation of 2-wire conduct

RTD OHM

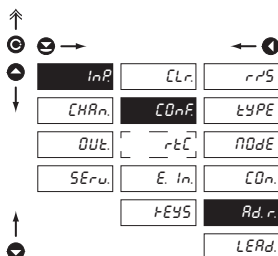


Ad.r. Offset of the beginning of the measuring range

- in cases when it is necessary to offset the beginning of the range by certain value, e.g. while using sensor in measuring head
- entered directly in Ohm (0...9999)
- **DEF** = 0

6.1.2g Compensation of 2-wire conduct


RTD OHM

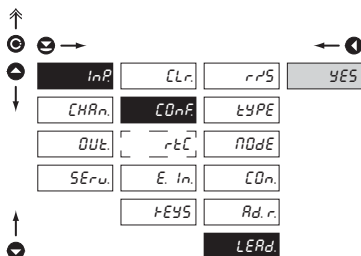

LEAd. Compensation of 2-wire conduct

- for measurement accuracy it is necessary to perform compensation of conduct always in case of 2-wire connection
- prior confirmation of the displayed prompt „YES“ it is necessary to substitute the sensor at the end of the conduct by a short-circuit
- **DEF** = 0

6.1.3 Setting the real time clock

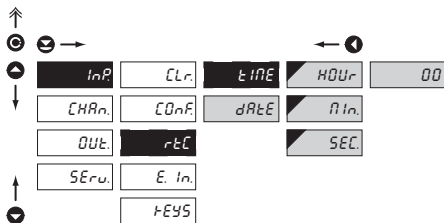

rEtC Setting the real time clock (RTC)


tIME Time setting

- format 23.59.59

dAtE Date setting

- format DD.MM.YY

6.1.4a External input function selection

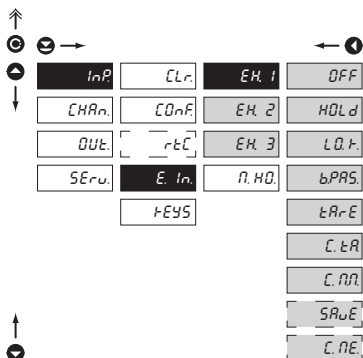

E. In. External input function selection

OFF Input is off

HOLd Activation of HOLD

LD.F. Locking keys on the instrument

b.PRS. Activation of locking access into programming menu LIGHT/PROFI

tArE Tare activation

C.tR Tare resetting

CL.NN Resetting min/max value

SRuE Activation of measured data record in instrument memory (not in standard equipment)

C.tR Clearing memory


- clearing memory with data measured in modes "FAST" or "RTC"

- **DEF** EXT. 1 > HOLD
- **DEF** EXT. 2 > LOCK K.
- **DEF** EXT. 3 > TARE

*

Setting procedure is identical for EXT. 2 and EXT. 3


6.1.4b Selection of function "HOLD"

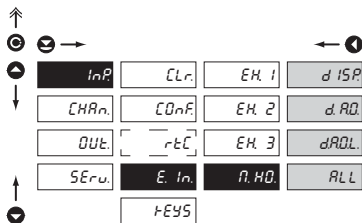

n.HO Selection of function "HOLD"

- dISP** "HOLD" locks only the value displayed
- dRD** "HOLD" locks the value displayed and on AO
- dRDl** "HOLD" locks the value displayed, on AO and limit evaluation
- ALL** "HOLD" locks the entire instrument

6.1.5a Optional accessory functions of the keys

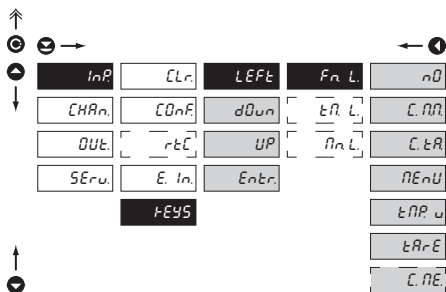

FN.L Assigning further functions to instr. keys

- „FN. L.“ > executive functions
- „TM. L.“ > temporary projection of selected values
- „MN. L.“ > direct access into menu on selected item

- nD** Key has no further function
- C.nN** Resetting min/max value
- C.tR** Tare resetting
- nEnU** Direct access into menu on selected item
- after confirmation of this selection the "MN. L." item is displayed on superior menu level, where required selection is performed
- tNR.u** Temporary projection of selected values
- after confirmation of this selection the item "TM. L." is displayed on superior menu level, where required selection is performed
- tRE** Tare function activation
- C.nE** Clearing memory
- clearing memory with data measured in modes "FAST" or "RTC"




Preset values of the control keys **DEF**:

LEFT	Show Tare
UP	Show Max. value
DOWN	Show Min. value
ENTER	w/o function



Setting is identical for LEFT, DOWN, UP and ENTER

6.1.5b Optional accessory functions of the keys - Temporary projection

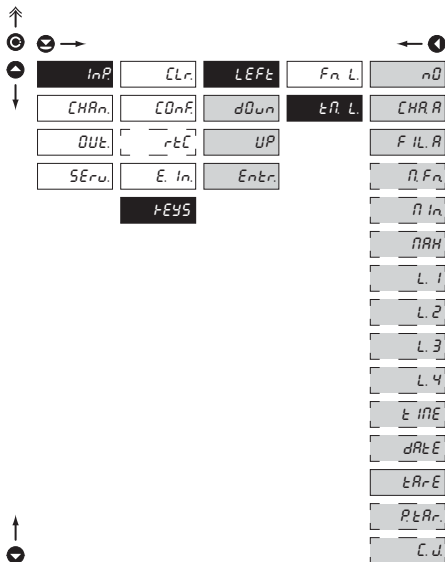


LN L Temporary projection of selected item

- "Temporary" projection of selected value is displayed for the time of keystroke
- "Temporary" projection may be switched to permanent by pressing **☉** + "Selected key", this holds until the stroke of any key

RD	Temporary projection is off
CHRR	Temporary projection of "Channel A" value
FIL R	Temporary projection of "Channel A" value after processing digital filters
n/n	Temporary projection of "Mathematic functions" value
n/n	Temporary projection of "Min. value"
n/n	Temporary projection of "Max. value"
L. 1	Temporary projection of "Limit 1" value
L. 2	Temporary projection of "Limit 2" value
L. 3	Temporary projection of "Limit 3" value
L. 4	Temporary projection of "Limit 4" value
t/nE	Temporary projection of "TIME" value
dAtE	Temporary projection of "DATE" value
tArE	Temporary projection of "TARE" value
P.tAr.	Temporary projection of "P. TARE" value
C. J.	Temporary projection of "CJC" value


Setting is identical for LEFT, DOWN, UP and ENTER

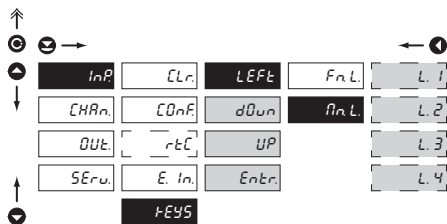6.1.5c Optional accessory functions of the keys - Direct access to item

Fn.L. Assigning access to selected menu item

- L.1** Direct access to item "LIM 1"
- L.2** Direct access to item "LIM 2"
- L.3** Direct access to item "LIM 3"
- L.4** Direct access to item "LIM 4"

!
Setting is identical for **LEFT**, **DOWN**, **UP** and **ENTER**

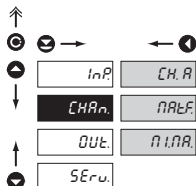6.2 Setting "PROFI" - CHANNELS




The primary instrument parameters are set in this menu

- CH.A** Setting parameters of measuring "Channel"
- NAR.F** Setting parameters of mathematic functions
- MIN.A** Selection of access and evaluation of Min/max value

6.2.1 a Display projection

DC PM DU OHM

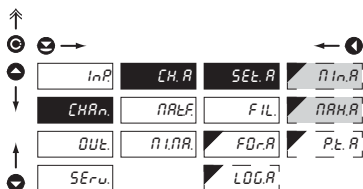


SET.A Setting display projection

- MIN.A** Setting display projection for minimum value of input signal
 - range of the setting is -999...9999
 - **DEF** = 0

- MAX.A** Setting display projection for maximum value of input signal
 - range of the setting is -999...9999
 - **DEF** = 100

6.2.1 b Setting fixed tare


DC PM DU OHM

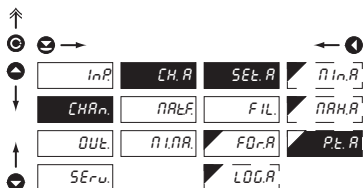

P.T.A Setting "Fixed tare" value

- setting is designed for the event when it is necessary to firmly shift the beginning of the range by known size
- when setting (P. T. A > 0) display shows "T" symbol
- range of the setting is 0...9999
- **DEF** = 0

6.2.1c Digital filters

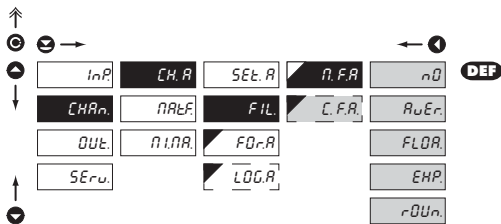

DEF Selection of digital filters

- at times it is useful for better user projection of data on display to modify it mathematically and properly, wherefore the following filters may be used:

nD Filters are off

RuEr. Measured data average

- arithmetic average from given number („C.F.A.“) of measured values
- range 2...100

FLDR. Selection of floating filter

- floating arithmetic average from given number („C.F.A.“) of measured data and updates with each measured value
- range 2...30

EHP. Selection of exponential filter

- integration filter of first prvnho grade with time constant („C.F.A.“) measurement
- range 2...100


rDU.n. Measured value rounding

- is entered by any number, which determines the projection step (e.g: „C.F.A.“=2,5 > display 0, 2,5, 5,...)

C.F.A. Setting constants

- this menu item is always displayed after selection of particular type of filter
- **DEF** = 2

6.2.1d Projection format - positioning of decimal point

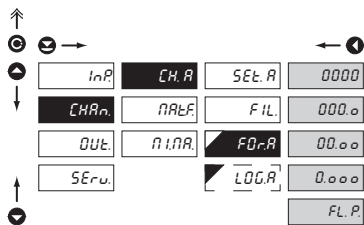
FDR.A Selection of decimal point

- the instrument allows for classic projection of a number with positioning of the DP as well as projection with floating DP, allowing to display a number in its most exact form „FL.P.“

0000 Setting DP - XXXXX.

DEF > T/C

000.0 Setting DP - XXXX.x


DEF

00.00 Setting DP - XXXX.xx

0.000 Setting DP - XXX.xxx

FL.P. Floating DP

6.2.1e Selection of storing data into instrument memory

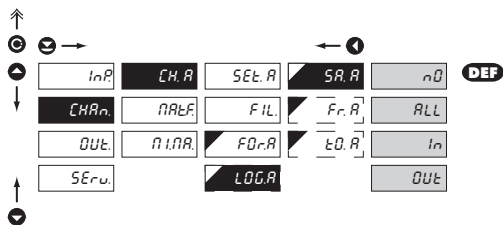
SR.A Selection of storing data into instrument memory

- by selection under this item you give permission to log the value into instrument memory
- other setting under item "OUT. > MEM." (not in standard equipment)

nD Measured data is not stored

ALL Measured data is stored in memory

In Only data measured within the set interval is stored in memory

Out Only data measured outside the set interval is stored in memory


Fr.A Setting the initial interval value (from)

- setting range: -999...9999

tD.A Setting the final interval value (to)

- setting range: -999...9999

6.2.2a Mathematic functions

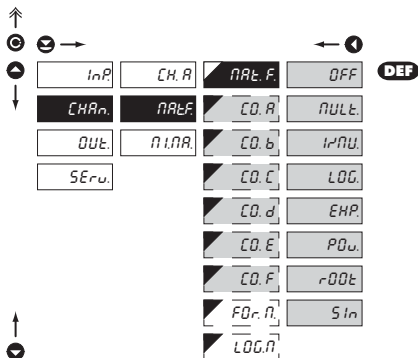

PAR.F. Selection of mathematic functions

OFF Mathematic functions are off

NUL.E Polynomial

$$Ax^2 + Bx^1 + Cx^0 + Dx^3 + Ex + F$$

1/PNU $1/x$

$$\frac{A}{x^2} + \frac{B}{x^1} + \frac{C}{x^0} + \frac{D}{x^2} + \frac{E}{x} + F$$

LOG. Logarithm

$$A \times \ln\left(\frac{Bx + C}{Dx + E}\right) + F$$

EHP. Exponential

$$A \times e^{\left(\frac{Bx + C}{Dx + E}\right)} + F$$

PD.u Power

$$A \times (Bx + C)^{(Dx + E)} + F$$

rDDt Root

$$A \times \sqrt{\frac{Bx + C}{Dx + E}} + F$$


Sin Sin x

$$A \sin^5 x + B \sin^4 x + C \sin^3 x + D \sin^2 x + E \sin x + F$$

LOG.- Setting constants for calculation of mat. functions

- this menu is displayed only after selection of given mathematic function

6.2.3 Selection of evaluation of min/max value

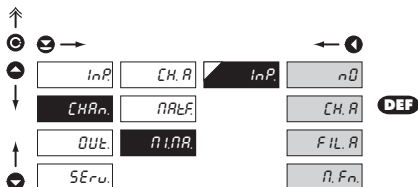

InP. Selection of evaluation of min/max value

- selection of value from which the min/max value will be calculated


nD Evaluation of min/max value is off

CH.A From "Channel A"

FIL.A From "Channel A" after digital filters processing

n.F.n. From "Mathematic functions"


6.3 Setting „PROFI“ - OUTPUTS

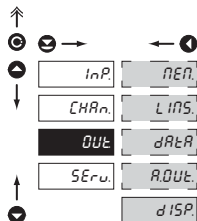

In this menu it is possible to set parameters of the instrument output signals

- nEn Setting data logging into memory
- LInS Setting type and parameters of limits
- dARr Setting type and parameters of data output
- RDUt Setting type and parameters of analog output
- dISP Setting display projection and brightness


6.3.1a Selection of mode of data logging into instrument memory

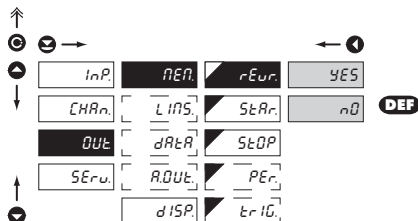

rEn Selection of the mode of data logging

- selection of the mode in the event of full instrument memory

- n0 Rewriting values prohibited
- yES Rewriting values permitted, the oldest get rewritten by the latest

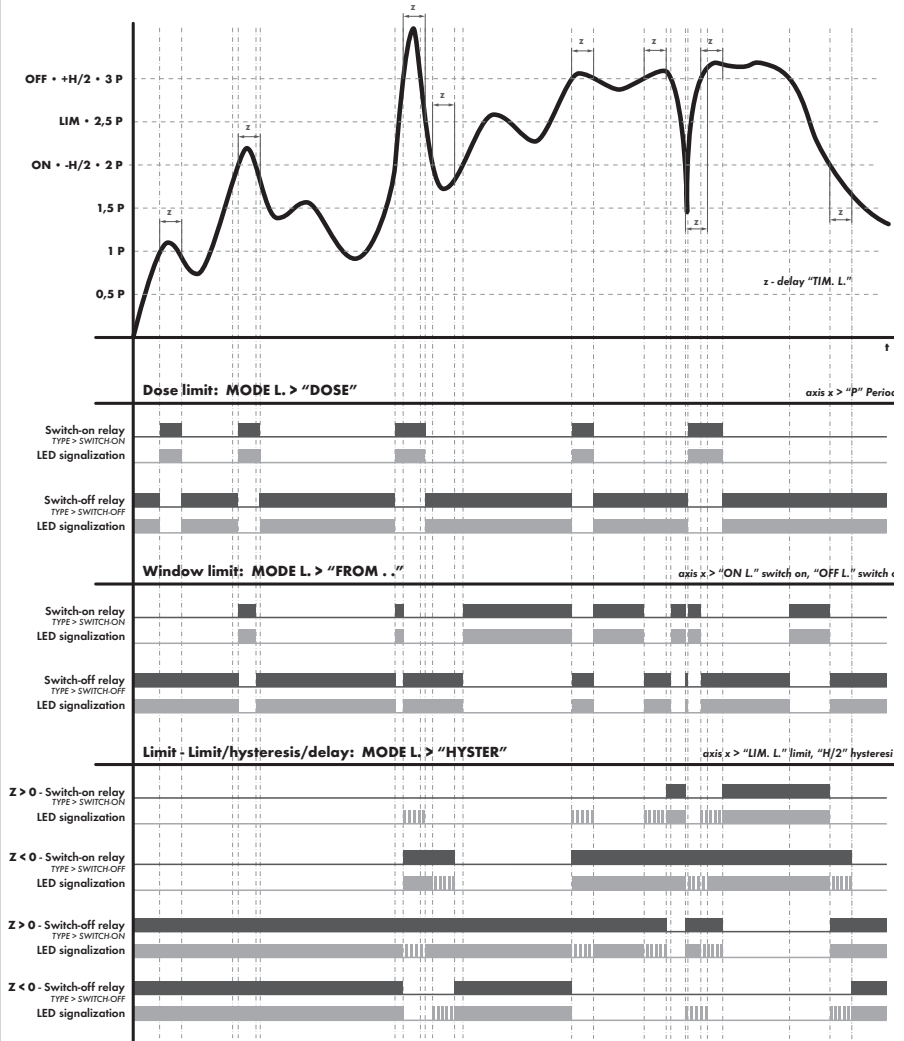

6.3.2a Selection of input for limits evaluation

InP	NER	L.1	In.L.1	nD
CHAn	LINS	L.2	NO.L.1	CH.R
OUt	dREr	L.3	ty.L.1	FiL.R
SErv	ROUt	L.4	L.L.1	n.Fn
	dISP		H.L.1	nIn
			On.L.1	RAH
			OF.L.1	
			PE.L.1	
			t.L.1	

Setting is identical for LIM 2, LIM 3 and LIM 4

In.L.1 Selection evaluation of limits

- selection of value from which the limit will be evaluated

- nD** Limit evaluation is off
- CH.R** Limit evaluation from "Channel A"
- FiL.R** Limit evaluation from "Channel A" after digital filters processing
- n.Fn** Limit evaluation from "Mathematic functions"
- nIn** Limit evaluation from "Min.value"
- RAH** Limit evaluation from "Max.value"

6.3.2b Selection of type of limit


InP	NER	L.1	In.L.1	HYSL
CHAn	LINS	L.2	NO.L.1	Fr.tD
OUt	dREr	L.3	ty.L.1	dOSE
SErv	ROUt	L.4	L.L.1	
	dISP		H.L.1	
			On.L.1	
			OF.L.1	
			PE.L.1	
			t.L.1	

Setting is identical for LIM 2, LIM 3 and LIM 4

NO.L.1 Selection the type of limit

- HYSLr** Limit is in mode "Limit, hysteresis, delay"
 - for this mode the parameters of "L. L." are set, at which the limit will shall react, "H. L." the hysteresis range around the limit (LIM ±1/2 HYS) and time "T. L." determining the delay of relay switch-on
- Fr.tD** Frame limit
 - for this mode the parameters are set for interval "ON. L." the relay switch-on and "OF. L." the relay switch-off
- dOSE** Dose limit (periodic)
 - for this mode the parameters are set for "PE. L." determining the limit value as well as its multiples at which the output is active and "T. L." indicating the time during which is the output active

6.3.2c Selection of type of output

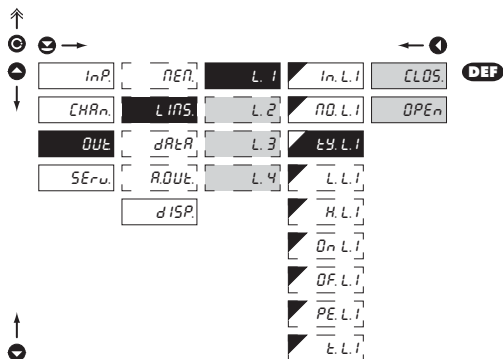

BY L.1 Selection of type of output

CLOS. Output switches on when condition is met

OPEN Output switches off when condition is met

Setting is identical for LIM 2, LIM 3 and LIM 4

6.3.2d Setting values for limits evaluation

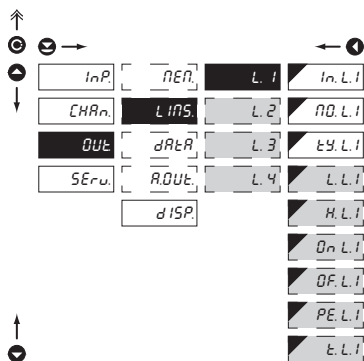
L.L.1 Setting limit for switch-on

- for type "HYSTER"

H.L.1 Setting hysteresis

- for type "HYSTER"
- indicates the range around the limit (in both directions, LIM. $\pm 1/2$ HYS.)

On.L.1 Setting the outset of the interval of limit switch-on

- for type "FROM"

OF.L.1 Setting the end of the interval of limit switch-on

- for type "FROM"

PE.L.1 Setting the period of limit switch-on

- for type "DOSE"

t.L.1 Setting the time switch-on of the limit

- for type "HYSTER" and "DOSE"
- setting within the range: $\pm 0 \dots 99,9$ s
- positive time > relay switches on after crossing the limit (L.L1) and the set time (T.L1)
- negative time > relay switches off after crossing the limit (L.L1) and the set negative time (T.L1)

Setting is identical for LIM 2, LIM 3 and LIM 4

6.3.3a Selection of data output baud rate

Option	Baud Rate
0.6	Rate - 600 Baud
1.2	Rate - 1 200 Baud
24	Rate - 2 400 Baud
4.8	Rate - 4 800 Baud
9.6	Rate - 9 600 Baud
19.2	Rate - 19 200 Baud
384	Rate - 38 400 Baud
57.6	Rate - 57 600 Baud
115.2	Rate - 115 200 Baud
2304	Rate - 230 400 Baud

bAud	Selection of data output baud rate
0.6	Rate - 600 Baud
1.2	Rate - 1 200 Baud
24	Rate - 2 400 Baud
4.8	Rate - 4 800 Baud
9.6	Rate - 9 600 Baud
19.2	Rate - 19 200 Baud
384	Rate - 38 400 Baud
57.6	Rate - 57 600 Baud
115.2	Rate - 115 200 Baud
2304	Rate - 230 400 Baud


6.3.3b Setting instrument address

Option	Setting instrument address
00	Setting instrument address - MODBUS

Adr.	Setting instrument address
00	Setting instrument address - MODBUS
1...247	Setting instrument address - PROFIBUS

- setting in range 0...31
- **DEF** = 00
- setting in range 1...247
- **DEF** = 1
- setting in range 1...127
- **DEF** = 1


6.3.3c Selection of data output protocol

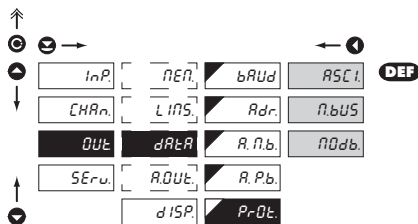
PrOt Selection of the type of analog output

- RSCl** Data protocol ASCII
- n.bUS** Data protocol DIN MessBus
- nOdb** Data protocol MODBUS-RTU

- option is available only for RS 485


6.3.4a Selection of input for analog output

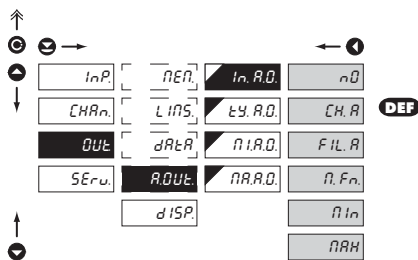
In.A.O. Selection evaluation analog output

- selection of value from which the analog output will be evaluated

- n0** AO evaluation is off
- CH.A** AO evaluation from "Channel A"
- FiL.A** AO evaluation from "Channel A" after digital filters processing
- n.Fn** AO evaluation from "Math.functions"
- nIn** AO evaluation from "Min.value"
- nRH** AO evaluation from "Max.value"

6.3.4b Selection of the type of analog output

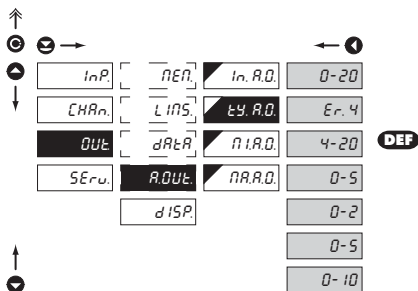

tY.A.O. Selection of the type of analog output

0-20 Type - 0...20 mA

Er.4 Type - 4...20 mA

- with indication of error statement (< 3,0 mA)

4-20 Type - 4...20 mA


0-5 Type - 0...5 mA

0-2 Type - 0...2 V

0-5 Type - 0...5 V

0-10 Type - 0...10 V

6.3.4c Setting the analog output range

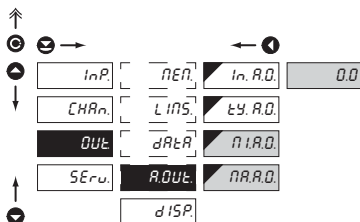

RDUt Setting the analog output range

- analog output is isolated and its value corresponds with displayed data. It is fully programmable, i.e. it allows to assign the AO limit points to two arbitrary points of the entire measuring range

nI.A.O. Assigning the display value to the beginning of the AO range

- range of the setting is -999...9999


- **DEF** = 0

nR.A.O. Assigning the display value to the end of the AO range

- range of the setting is -999...9999

- **DEF** = 100

6.3.5a Selection of input for display projection

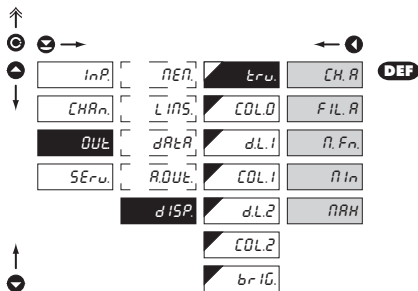


tRu Selection display projection

- selection of value which will be shown on the instrument display

- CH.A** Projection of values from "Channel A"
- FIL.A** Projection of values from "Channel A" after digital filters processing
- n.Fn** Projection of values from "Math.functions"
- nIn** Projection of values from "Min. value"
- NAH** Projection of values from "Max. value"

6.3.5b Selection of display color

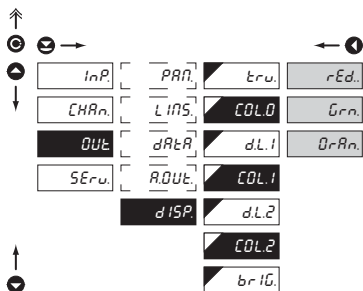


COL0 Selection of display color

- selection of color is governed by setting under items "d.L1." and "d.L2."

- rEd** Red color
- Grn** Green color
- OrAn** Orange color

- "COL0." **DEF** = Green
- "COL1." **DEF** = Orange
- "COL2." **DEF** = Red

6.3.5c Selection of display color change

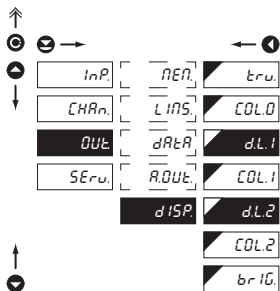


d.L. Selection of display color change

- under items "d.L.1" and "d.L.2" the limit is set at which the display color changes

- "d.L.1." **DEF** = 9999
- "d.L.2." **DEF** = 9999

6.3.5d Selection of display brightness

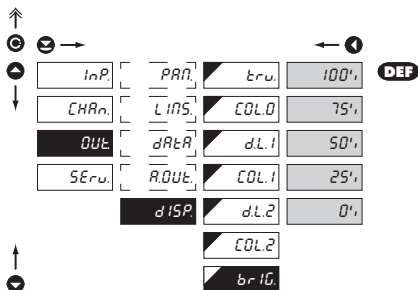


brIG Selection of display brightness

- by selecting display brightness we may appropriately react to light conditions in place of instrument location

- Display is off
- after keystroke display turns on for 10 s
- Display brightness - 25%
- Display brightness - 50%
- Display brightness - 75%
- Display brightness - 100%


6.4 Setting "PROFI" - SERVIS

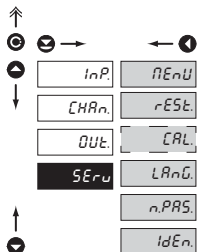

The instrument service functions are set in this menu

nEnU	Selection of menu type LIGHT/PROFI
rESt	Restore instrument manufacture setting and calibration
CAL	Input range calibration for „DU“ version
LANG	Language version of instrument menu
nPAS	Setting new access password
IdEn	Instrument identification

6.4.1 Selection of type of programming menu

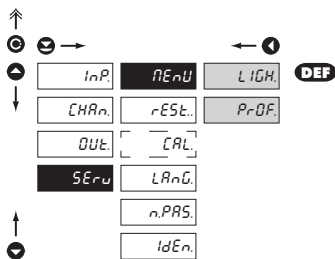

nEnU Selection of menu type - LIGHT/PROFI

- enables setting the menu complexity according to user needs and skills

LIGHT Active LIGHT menu

- simple programming menu, contains only items necessary for configuration and instrument setting
- linear menu > items one after another



PROFI Active PROFI menu

- complete programming menu for expert users
- tree menu



Change of setting is valid upon next access into menu

6.4.2 Restoration of manufacture setting

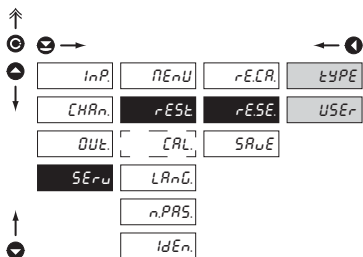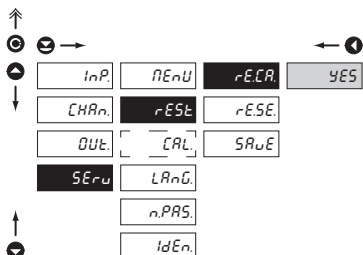

rE.CA. Restoration of manufacture setting

- in the event of error setting or calibration, manufacture setting may be restored.

rE.CA. Restoration of manufacture calibration of the instrument

- prior executing the changes you will be asked to confirm your selection „YES“

rESE. Restoration of instrument manufacture setting

tYPE Restoration of instrument manufacture setting

- generating the manufacture setting for currently selected type of instrument (items marked DEF)

USEr Restoration of instrument user setting

- generating the instrument user setting, i.e. setting stored under SERV./REST./SAVE

SRAuE Save instrument user setting

- storing the user setting allows the operator to restore it in future if needed


Jobs performed	Restore	
	Calibration	Setting
Cancels USER menu rights	✓	✓
Deletes table of items order in USER - LIGHT menu	✓	✓
Adds items from manufacture to LIGHT menu	✓	✓
Deletes data stored in FLASH	✓	✓
Cancels or linearization tables	✓	✓
Clears tare	✓	✓
Clears conduct resistances	✓	✓
Restore manufacture calibration	✓	✗
Restore manufacture setting	✗	✓



After restoration the instrument switches off for couple seconds


6.4.3 Calibration - Input range

DU

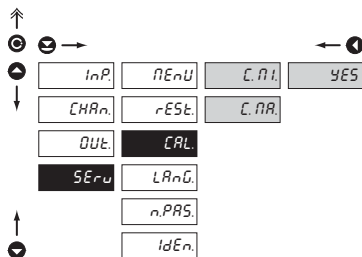**CAL.** Input range calibration


- when "C. MI." is displayed, move the potentiometer traveller to the required minimum position and confirm by „Enter“, calibration is confirmed by "YES"
- when "C. MA." is displayed, move the potentiometer traveller to required maximum position and confirm by „Enter“, calibration is confirmed by „YES"

6.4.4 Selection of instrument menu language version

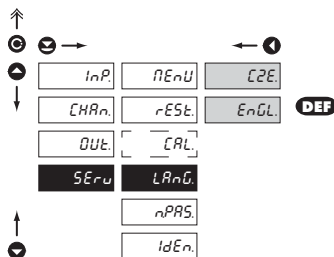**LAnG.** Selection of instrument menu language version


- | | |
|------|-------------------------------|
| CZE. | Instrument menu is in Czech |
| ENG. | Instrument menu is in English |

6.4.5 Setting new access password

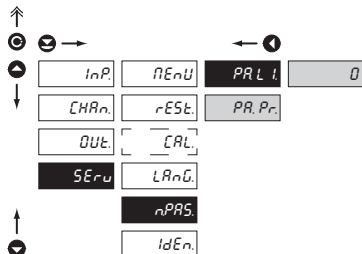**nPAS.** Setting new password for access to LIGHT and PROFI menu

- this option allows to change the numeric code, which blocks the access into LIGHT and PROFI Menu.
- numeric code range: 0...9999
- universal passwords in the event of loss:
LIGHT Menu > „8177“
PROFI Menu > „7915“

6.4.6 Instrument identification

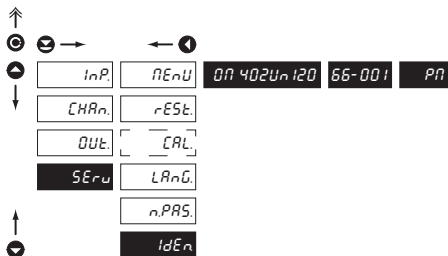


IdEn. Projection of instrument SW version

- display shows type identification of the instrument, SW number, SW version and current input setting (Mode)
- if the SW version reads a letter on first position, it is a customer SW

IDEN.	pos	Description
	1.	type of instrument
	2.	SW: number - version
	3.	the input type

7.0 Setting items into "USER" menu

- **USER** menu is designed for users who need to change only several items of the setting without the option to change the primary instrument setting (e.g. repeated change of limit setting)
- there are no items from manufacture permitted in **USER** menu
- on items indicated by inverse triangle  item
- setting may be performed in **LIGHT** or **PROFI** menu, with the **USER** menu then overtaking the given menu structure




- For user operation
- Menu items are set by the user (Profi/Light) as per request
- Access is not password protected

Setting

flashing legend - current setting is displayed



 n0 item will not be displayed in USER menu

 YES item will be displayed in USER menu with editing option

 SH0u item will be solely displayed in USER menu

Setting sequence of items in "USER" menu

In compiling USER menu from active LIGHT menu the items (max. 10) may be assigned a sequence, in which they will be projected in the menu

setting projection sequence



Example:

Into USER menu were selected these items


(keys +) > CL. TA., L. 1, L. 2, L. 3, for which we have preset this sequence (keys +):

CL. TA.	5
L. 1	0 (sequence not determined)
L. 2	2
L. 3	1

Upon entering USER menu

(key) items will be projected in the following sequence: L. 3 > L. 2 > CL.TA. > L. 1

Instrument with input for temperature measurement with thermocouple allows to set two types of measurement of cold junction.

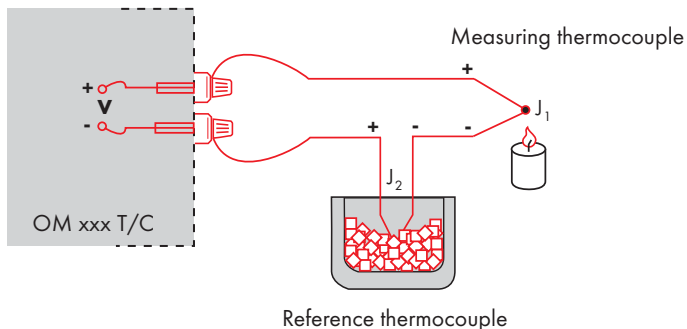

WITH REFERENCE THERMOCOUPLE

- a reference thermocouple may be located in the same place as the measuring instrument or in place with stable temperature/compensation box
- when measuring with reference thermocouple set CJn in the instrument menu to InE2 or EHt2
- when using a thermostat (a compensation box or environment with constant temperature) set in the instrument menu CJt its temperature (applies for setting CJn to EHt2)
- if the reference thermocouple is located in the same environment as the measuring instrument then set in the instrument menu CJn to InE2t . Based on this selection the measurement of the ambient temperature is performed by a sensor located in the instrument terminal board.

WITHOUT REFERENCE THERMOCOUPLE

- inaccuracy originating from the creation of dissimilar thermocouples on the transition point terminal/conductor of the thermocouple is not compensated for in the instrument
- when measuring without reference thermocouple set CJn in the instrument menu to InE1 or EHt1
- when measuring temperature without reference thermocouple the error in measured data may be as much as 10°C (applies for setting CJn to EHt1)

The instruments communicate via serial line RS232 or RS485. For communication they use the ASCII protocol. Communication runs in the following format:

ASCII: 8 bit, no parity, one stop bit
 DIN MessBus: 7 bit, even parity, one stop bit

The transfer rate is adjustable in the instrument menu. The instrument address is set in the instrument menu in the range of 0 ÷ 31. The manufacture setting always presets the ASCII protocol, rate of 9600 Baud, address 00. The type of line used - RS232 / RS485 - is determined by an output board automatically identified by the instrument.

The commands are described in specifications you can find at [na www.orbit.merret.cz/rs](http://na.www.orbit.merret.cz/rs) or in the OM Link program.

DETAILED DESCRIPTION OF COMMUNICATION VIA SERIAL LINE

Event	Type	Protocol	Transmitted data																		
Data solicitation (PC)	232	ASCII	#	A	A	<CR>															
		MessBus	No - data is transmitted permanently																		
	485	ASCII	#	A	A	<CR>															
		MessBus	<SADR>	<ENQ>																	
Data transmission (instrument)	232	ASCII	>	D	(D)	(D)	(D)	(D)	(D)	(D)	(D)	(D)	(D)	(D)	(D)	(D)	(D)	(D)	<CR>		
		MessBus	<SADR>	D	(D)	(D)	(D)	(D)	(D)	(D)	(D)	(D)	(D)	(D)	(D)	(D)	(D)	(D)	(D)	<ETX>	<BCC>
	485	ASCII	>	D	(D)	(D)	(D)	(D)	(D)	(D)	(D)	(D)	(D)	(D)	(D)	(D)	(D)	(D)	<CR>		
		MessBus	<SADR>	D	(D)	(D)	(D)	(D)	(D)	(D)	(D)	(D)	(D)	(D)	(D)	(D)	(D)	(D)	<ETX>	<BCC>	
Confirmation of data acceptance (PC) - OK	485	MessBus	<DLE>	1																	
Confirmation of data acceptance (PC) - Bad			<NAK>																		
Sending address (PC) prior command			<EADR>	<ENQ>																	
Confirmation of address (instrument)			<SADR>	<ENQ>																	
Command transmission (PC)	232	ASCII	#	A	A	N	P	(D)	(D)	(D)	(D)	(D)	(D)	(D)	(D)	(D)	(D)	<CR>			
		MessBus	<STX>	\$	N	P	(D)	(D)	(D)	(D)	(D)	(D)	(D)	(D)	(D)	(D)	(D)	<ETX>	<BCC>		
	485	ASCII	#	A	A	N	P	(D)	(D)	(D)	(D)	(D)	(D)	(D)	(D)	(D)	(D)	<CR>			
		MessBus	<SADR>	\$	N	P	(D)	(D)	(D)	(D)	(D)	(D)	(D)	(D)	(D)	(D)	(D)	<ETX>	<BCC>		
Command confirmation (instrument)	232	ASCII	OK	!	A	A	<CR>														
			Bad	?	A	A	<CR>														
		MessBus	No - data is transmitted permanently																		
	485	ASCII	OK	!	A	A	<CR>														
			Bad	?	A	A	<CR>														
		MessBus	OK	<DLE>	1																
			Bad	<NAK>																	
Command confirmation (inst.) - OK	485	MessBus	!	A	A	<CR>															
?			A	A	<CR>																
Instrument identification			#	A	A	1Y	<CR>														
HW identification			#	A	A	1Z	<CR>														
One-time transmission			#	A	A	7X	<CR>														
Repeated transmission			#	A	A	8X	<CR>														

LEGEND

#	35	23 _H	Command beginning
A	A	0...31	Two characters of instrument address (sent in ASCII - tens and units, e.g. "01", "99" universal
<CR>	13	0D _H	Carriage return
<SP>	32	20 _H	Space
N, P			Number and command - command code
D			Data - usually characters "0"... "9", "-", ".", ";"; (D) - dp. and (-) may prolong data
R	30 _H ...3F _H		Relay and tare status
!	33	21 _H	Positive confirmation of command (ok)
?	63	3F _H	Negative confirmation of command (point)
>	62	3E _H	Beginning of transmitted data
<STX>	2	02 _H	Beginning of text
<ETX>	3	03 _H	End of text
<SADR>	address +60 _H		Prompt to send from address
<EADR>	address +40 _H		Prompt to accept command at address
<ENQ>	5	05 _H	Terminate address
<DLE>1	16 49	10 _H 31 _H	Confirm correct statement
<NAK>	21	15 _H	Confirm error statement
<BCC>			Check sum -XOR

RELAY, TARE

Sign	Relay 1	Relay 2	Tare	Change relay 3/4
P	0	0	0	0
Q	1	0	0	0
R	0	1	0	0
S	1	1	0	0
T	0	0	1	0
U	1	0	1	0
V	0	1	1	0
W	1	1	1	0
p	0	0	0	1
q	1	0	0	1
r	0	1	0	1
s	1	1	0	1
t	0	0	1	1
u	1	0	1	1
v	0	1	1	1
w	1	1	1	1

Relay status is generated by command #AA6X <CR>.

The instrument immediately returns the value in the format >HH <CR>, where HH is value in HEX format and range 00_H...FF_H. The lowest bit stands for „Relay 1“, the highest for „Relay 8“

ERROR	CAUSE	ELIMINATION
<i>d.U_n</i>	Number is too small (large negative) to be displayed	change DP setting, channel constant setting
<i>d.O_u</i>	Number is too large to be displayed	change DP setting, channel constant setting
<i>t.U_n</i>	Number is outside the table range	increase table values, change input setting (channel constant setting)
<i>t.O_u</i>	Number is outside the table range	increase table values, change input setting (channel constant setting)
<i>i.U_n</i>	Input quantity is smaller than permitted input quantity range	change input signal value or input (range) setting
<i>i.O_u</i>	Input quantity is larger than permitted input quantity range	change input signal value or input (range) setting
<i>E.H_u</i>	A part of the instrument does not work properly	send the instrument for repair
<i>E.EE</i>	Data in EEPROM corrupted	perform restoration of manufacture setting, upon repeated error statement send instrument for repair
<i>E.SEE</i>	Change of a linked item in the menu, Data in EEPROM outside the range	change of contiguous items, perform restoration of manufacture setting, upon repeated error statement send instrument for repair
<i>E.CLe</i>	Memory was empty (presetting carried out)	upon repeated error statement send instrument for repair, possible failure in calibration

INPUT

range is adjustable

±60 mV	>100 MOhm
±150 mV	>100 MOhm
±300 mV	>100 MOhm
±1200 mV	>100 MOhm

DC

Input U

Input U

Input U

Input U

range is adjustable

±0,1 A	< 300 mV
±0,25 A	< 300 mV
±0,5 A	< 300 mV
±1 A	< 30 mV
±5 A	< 150 mV
±100 V	20 MOhm
±250 V	20 MOhm
±500 V	20 MOhm

DC - option "A"

Input I

Input I

Input I

Input I

Input I

Input U

Input U

Input U

range is adjustable

0/4...20 mA	< 400 mV
±2 V	1 MOhm
±5 V	1 MOhm
±10 V	1 MOhm
±40 V	1 MOhm

PM

Input I

Input U

Input U

Input U

Input U

range is adjustable

0...100 Ohm
0...1 kOhm
0...10 kOhm
0...100 kOhm
Autorange

OHM

Connection:

2, 3 or 4 wire

Pt xxxx

-200°...850°C

Pt xxxx/3910 ppm

-200°...1 100°C

Ni xxxx

-50°...250°C

Cu/4260 ppm

-50°...200°C

Cu/4280 ppm

-200°...200°C

Type Pt:

EU > 100/500/1 000 Ohm, with 3 850 ppm/°C

US > 100 Ohm, with 3 920 ppm/°C

RU > 50/100 Ohm, with 3 910 ppm/°C

Type Ni:

Ni 1 000/ Ni 10 000 with 5 000/6 180 ppm/°C

Type Cu:

Cu 50/Cu 100 with 4 260/4 280 ppm/°C

Connection:

2, 3 or 4 wire

RTD

range is adjustable in configuration menu

Type:

J (Fe-CuNi) -200°...900°C

K (NiCr-Ni) -200°...1 300°C

T (Cu-CuNi) -200°...400°C

E (NiCr-CuNi) -200°...690°C

B (PtRh30-PtRh6) 300°...1 820°C

S (PtRh10-Pt) -50°...1 760°C

R (Pt13Rh-Pt) -50°...1 740°C

N (Omegalloy) -200°...1 300°C

L (Fe-CuNi) -200°...900°C

T/C

Voltage of lin. pot.

2,5 VDC/6 mA

min. potentiometer resistance is 500 Ohm

DU

PROJECTION

Display:

999999, intensive red or green

14-ti segment LED, digit height 14 mm

Projection:

±9999 (.999...9999)

Decimal point:

adjustable - in menu

Brightness:

adjustable - in menu

INSTRUMENT ACCURACY

TC:

50 ppm/°C

Accuracy:

±0,1 % of range + 1 digit

±0,15 % of range + 1 digit

Resolution:

0,01°/0,1°/1°

Rate:

0,1...40 measurements/s**

Overload capacity:

10x (t < 100 ms) not for 400 V and 5 A,

2x (long-term)

Linearisation:

by linear interpolation in 50 points

- solely via OM Link

Digital filters:

Averaging, Floating average, Exponential filter, Rounding

Comp. of conduct:

max. 40 Ohm/100 Ohm

Comp. of cold junct.:

adjustable

Functions:

Tare - display resetting

Hold - stop measuring (at contact)

Lock - control key locking

MM - min/max value

Mathematic functions

OM Link:

company communication interface for setting, operation and update of instrument SW

Watch-dog:

reset after 400 ms

Calibration:

at 25°C and 40 % of r.h.

RTD, T/C
RTDRTD
T/C

COMPARATOR

Type:

digital, adjustable in menu

Mode:

Hysteresis, From, Dosing

Limita:

.999...9999

Hysteresis:

0...999999

Delay:

0...99,9 s

Outputs:

2x relays with switch-on contact (Form A)

(230 VAC/30 VDC, 3 A)*

2x relays with switch-off contact (Form C)

(230 VAC/50 VDC, 3 A)*

2x SSR (250 VAC/ 1 A)*

2x/4x open collector (30 VDC/100 mA)

2x bistabil relays (250 VAC/250 VDC, 3 A/0,3 A)*

Relay:

1/8 HP 277 VAC, 1/10 HP 125 V, Pilot Duty D300

* values apply for resistance load

DATA OUTPUTS

Protocols: ASCII, DIN MessBus, MODBUS, PROBUS
 Data format: 8 bit + no parity + 1 stop bit (ASCII)
 7 bit + even parity + 1 stop bit (MessBus)
 Rate: 600...230 400 Baud
 9 600 Baud...12 Mbaud (PROFIBUS)
 RS 232: isolated, two-way communication
 RS 485: isolated, two-way communication,
 addressing (max. 31 instruments)
 PROFIBUS Data protocol SIEMENS

ANALOGO OUTPUTS

Type: isolated, programmable with resolution of max.10 000 points, analog output corresponds with displayed data, type and range are adjustable
 Non-linearity: 0,2 % of range
 TC: 50 ppm/°C
 Rate: response to change of value < 150 ms
 Voltage: 0...2 V/5 V/10 V
 Current: 0...5/20 mA/4...20 mA
 - compensation of conduct to 500 Ohm/12 V or 1 000 Ohm/24 V

MEASURED DATA RECORD

Type RTC: time-controlled logging of measured data into instrument memory, allows to log up to 250 000 values
 Type FAST: fast data logging into instrument memory, allows to log up to 8 000 values at a rate of 40 records/s
 Transmission: via data output RS 232/485 or via OM Link

EXCITATION

Adjustable: 5...24 VDC/max. 1,2 W, isolated

POWER SUPPLY

Options: 10...30 V AC/DC, 10 VA, isolated,
 - fuse inside (T 4000 mA)
 80...250 V AC/DC, 10 VA, isolated
 - fuse inside (T 6300 mA)

MECHANIC PROPERTIES

Material: Noryl GFN2 SE1, incomcombustible UL 94 V-1
 Dimensions: 96 x 48 x 120 mm
 Panel cut-out: 90,5 x 45 mm

OPERATING CONDITIONS

Connection: connector terminal board, conductor cross-section <1,5 mm² / <2,5 mm²
 Stabilisation period: within 15 minutes after switch-on
 Working temp.: 0°...60°C
 Storage temp.: -10°...85°C
 Cover: IP65 (front panel only)
 Construction: safety class I
 Dielectric strength: 4 kVAC after 1 min between supply and input
 4 kVAC after 1 min between supply and data/analog output
 4 kVAC after 1 min between supply and relay output
 2,5 kVAC after 1 min between supply and data/analog output
 Overvoltage cat.: EN 61010-1, A2
 Insulation resistance: for pollution degree II, measurement category III
 instrum.power supply > 670 V (PI), 300 V (DI)
 Input/output > 300 V (PI), 150 (DI)
 EN 61000-3-2+A12; EN 61000-4-2, 3, 4, 5, 8, 11;
 EN 550222, A1, A2
 Seismic resistance: IEC 980: 1993, cl. 6


**Table of rate of measurement in relation to number of inputs

Channels/Rate	40	20	10	5	2	1	0,5	0,2	0,1
No. of channels: 1 (Type: DC, PM, DU)	40,00	20,00	10,00	5,00	2,00	1,00	0,50	0,20	0,10
No. of channels: 2	5,00	2,50	1,25	1,00	0,62	0,38	0,22	0,09	0,05
No. of channels: 3	3,33	1,66	0,83	0,66	0,42	0,26	0,14	0,06	0,03
No. of channels: 4	2,50	1,25	0,62	0,50	0,31	0,19	0,11	0,05	0,02
No. of channels: 1 (Type: OHM, RTD, T/C)	5,00	2,50	1,25	1,00	0,62	0,38	0,22	0,09	0,05
No. of channels: 2	3,33	1,066	0,83	0,66	0,42	0,26	0,14	0,06	0,03
No. of channels: 3	2,50	1,25	0,62	0,50	0,31	0,19	0,11	0,05	0,02
No. of channels: 4	2,00	1,00	0,50	0,40	0,25	0,15	0,08	0,04	0,02


Front view



Panel cut

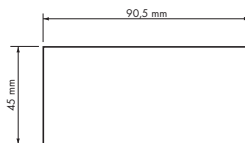



Side view

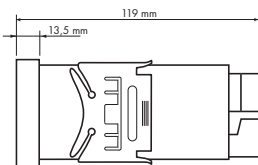

Panel thickness: 0,5...20 mm

Instrument installation

1. insert the instrument into the panel cut-out
2. fit both travellers on the box
3. press the travellers close to the panel

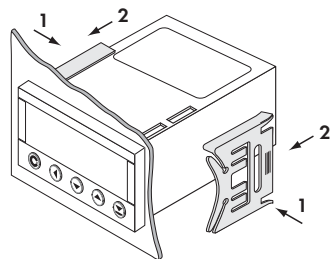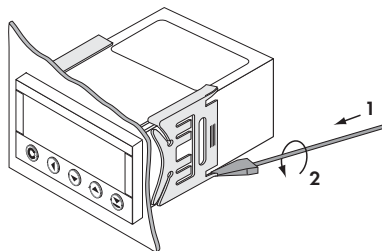

Instrument disassembly

1. slide a screw driver under the traveller wing
2. turn the screw driver and remove the traveller
3. take the instrument out of the panel

Product **OM 402UNI A**
 Type
 Manufacturing No.
 Date of sale

GUARANTEE

A guarantee period of 60 months from the date of sale to the user applies to this instrument.
 Defects occurring during this period due to manufacture error or due to material faults shall be eliminated free of charge.

For quality, function and construction of the instrument the guarantee shall apply provided that the instrument was connected and used in compliance with the instructions for use.

The guarantee shall not apply to defects caused by:

- mechanic damage
- transportation
- intervention of unqualified person incl. the user
- unavoidable event
- other unprofessional interventions

The manufacturer performs guarantee and post.guarantee repairs unless provided for otherwise.

Y E A R S

Stamp, signature

DECLARATION OF CONFORMITY

Company: **ORBIT MERRET, spol. s r.o.**
Klánská 81/141, 142 00 Prague 4, Czech Republic, IDNo: 00551309

Manufactured: **ORBIT MERRET, spol. s r.o.**
Vodňanská 675/30, 198 00 Prague 9, Czech Republic

declares at its explicit responsibility that the product presented hereunder meets all technical requirements, is safe for use when utilised under the terms and conditions determined by ORBIT MERRET, spol.s r.o. and that our company has taken all measures to ensure conformity of all products of the types referred-to hereunder, which are being brought out to the market, with technical documentation and requirements of the appurtenant Czech statutory orders.

Product: 4-digit programmable panel instrument

Type: **OM 402**

Version: UNI, PWR

It has been designed and manufactured in line with requirements of:

Statutory order no. 17/2003 Coll., on low-voltage electrical equipment (directive no. 73/23/EHS)

Statutory order no. 18/2003 Coll., on electromagnetic compatibility (directive no. 89/336/EHS)

The product qualities are in conformity with harmonized standard:

El. safety:	EN 61010-1
EMC:	EN 50131-1, chapter 14 and chapter 15
	EN 50130-4, chapter 7
	EN 50130-4, chapter 8
	EN 50130-4, chapter 9
	EN 50130-4, chapter 10
	EN 50130-4, chapter 11
	EN 50130-4, chapter 12
	EN 50130-4, chapter 13
	EN 50130-5, chapter 20
	prEN 50131-2-1, par. 9.3.1
	EN 61000-4-8
	EN 61000-4-9
	EN 61000-3-2 ed. 2:2001
	EN 61000-3-3: 1997, Cor. 1:1998, Z1:2002
	EN 55022, chapter 5 and chapter 6

The product is furnished with CE label issued in 2006.

As documentation serve the protocols of authorized and accredited organizations:

MO ČR, Agency for development of informatics, testing lab no.1558, accredited ČIA, in compliance with EN ISO/EIC 17025

Place and date of issue: Prague, 18. March 2006

Miroslav Hackl v.r.
Company representative

Assessment of conformity pursuant to §22 of Act no. 22/1997 Coll. and changes as amended by Act no.71/2000 Coll. and 205/2002 Coll