



# OM 402UNI

---

## 4 DIGIT PROGRAMMABLE UNIVERSAL INSTRUMENT

DC VOLTMETER / AMMETER  
PROCESS MONITOR  
OHMMETER  
THERMOMETER FOR PT 100 / 500 / 1 000  
THERMOMETER FOR NI 1 000  
THERMOMETER FOR THERMOCOUPLES  
DISPLAYS FOR LIN. POTENTIOMETERS



## SAFETY INSTRUCTIONS

Please, read the enclosed safety instructions carefully and observe them!  
These instruments should be safeguarded by isolated or common fuses (breakers)!  
For safety information the EN 61 010-1 + A2 standard must be observed.  
This instrument is not explosion-safe!

## TECHNICAL DATA

Measuring instruments of the OM 402 series conform to the European regulation 89/336/EWG and the Ordinance 168/1997 Coll.

The instruments are up to the following European standards:  
EN 55 022, class B  
EN 61000-4-2, -4, -5, -6, -8, -9, -10, -11

The instruments are applicable for unlimited use in agricultural and industrial areas.

## CONNECTION

Supply of energy from the main line has to be isolated from the measuring leads.



### ORBIT MERRET, spol. s r.o.

Vodnanska 675/30  
198 00 Prague 9  
Czech Republic

Tel: +420 - 281 040 200  
Fax: +420 - 281 040 299  
e-mail: orbit@merret.cz  
www.orbit.merret.cz



1.	Contents	3
2.	Instrument description	4
3.	Instrument connection	6
4.	Instrument setting	8
	Symbols used in the instructions	10
	Setting the DP and the (-) sign	10
	Control keys function	11
	Setting/permitting items into "USER" menu	11
5.	Setting "LIGHT" menu	12
5.0	Description "LIGHT" menu	12
	Setting input - Type "DC"	16
	Setting input - Type "PM"	18
	Setting input - Type "DU"	20
	Setting input - Type "OHM"	22
	Setting input - Type "RTD - Pt"	24
	Setting input - Type "RTD - Cu"	26
	Setting input - Type "RTD - Ni"	28
	Setting input - Type "T/C"	30
	Setting Limits	32
	Setting analog output	34
	Selection of programming menu „LIGHT"/„PROFI"	36
	Restoration of manufacture setting	36
	Calibration - input range (DU)	37
	Selection of instrument menu language version	38
	Setting new access password	38
	Instrument identification	39
6.	Setting "PROFI" menu	40
6.0	Description of "PROFI" menu	40
6.1	"PROFI" menu - INPUT	
6.1.1	Resetting internal values	42
6.1.2	Setting measuring type, range, mode, rate,	45
6.1.3	Setting the Real Time	49
6.1.4	External input function selection	49
6.1.5	Optional accessory functions of the keys	50
6.2	"PROFI" menu - CHANNEL	
6.2.1	Setting measuring parameters (projection, filters, decimal point, description)	54
6.2.2	Setting mathematic functions	58
6.2.3	Selection of evaluation of min/max. value	60
6.3	"PROFI" menu - OUTPUT	
6.3.1	Setting data logging	62
6.3.2	Setting Limits	64
6.3.3	Setting data output	66
6.3.4	Setting analog output	67
6.3.5	Selection of display projection	69
6.4	"PROFI" menu - SERVICE	
6.4.1	Selection of programming menu „LIGHT"/„PROFI"	70
6.4.2	Restoration manufacture setting	71
6.4.3	Calibration - input range (DU)	72
6.4.4	Selection of instrument menu language version	72
6.4.5	Setting new access password	72
6.4.6	Instrument identification	73
7.	Setting items into "USER" menu	74
7.0	Configuration "USER" menu	74
8.	Method of measuring of the cold junction	76
9.	Data protocol	77
10.	Error statements	78
11.	Table of symbols	79
12.	Technical data	80
13.	Instrument dimensions and instalation	82
14.	Certificate of guarantee	83
	Declaration of conformity	88

## 2.1

## Description

The OM 402 model series are 4 digit panel programmable instruments designed for maximum efficiency and user comfort while maintaining their favourable price. Two models are available: UNI and PWR.

Type OM 402UNI is a multifunction instrument with the option of configuration for 7 various input options, easily configurable in the instrument menu. By further options of input modules it is feasible to measure larger ranges of DC voltage and current or increase the number of inputs up to 4 (applies for PM).

The instrument is based on an 8-bit microcontroller with a multichannel 24-bit sigma-delta converter, which secures high accuracy, stability and easy operation of the instrument.

### The OM 402 is a multifunction instrument available in following types and ranges

#### type UNI

<b>DC:</b>	0...60/150/300/1200 mV
<b>PM:</b>	0...5 mA/0...20 mA/4...20 mA/±2 V/±5 V/±10 V/±40 V
<b>OHM:</b>	0...100 Ω/0...1 kΩ/0...10 kΩ/0...100 kΩ
<b>RTD-Pt:</b>	Pt 50/100/Pt 500/Pt 1 000
<b>RTD-Cu:</b>	Cu 50/Cu 100
<b>RTD-Ni:</b>	Ni 1 000/Ni 10 000
<b>T/C:</b>	J/K/T/E/B/S/R/N
<b>DU:</b>	Linear potentiometer (min. 500 Ω)

#### type UNI, option A

<b>DC:</b>	0...1 A/0...5 A/120 V/±250 V/±500 V
------------	-------------------------------------

#### type UNI, option B (expansion by 3 more inputs)

<b>PM:</b>	3x 0...5 mA/0...20 mA/4...20 mA/±2 V/±5 V/±10 V/±40 V
------------	---

### PROGRAMMABLE PROJECTION

Selection:	of type of input and measuring range
Measuring range:	adjustable as fixed or with automatic change
Setting:	manual, optional projection on the display may be set in the menu for both limit values of the input signal, e.g. input 0...20 mA > 0...850,0
Projection:	-9999...9999 (-99999...999999)

### COMPENSATION

of conduct:	in the menu it is possible to perform compensation for 2-wire connection
of conduct in probe:	internal connection (conduct resistance in measuring head)
of CJC (T/C):	manual or automatic, in the menu it is possible to perform selection of the type of thermocouple and compensation of cold junctions, which is adjustable or automatic (temperature at the brackets)

### LINEARIZATION

Linearization:*	by linear interpolation in 50 points (solely via OM Link)
-----------------	---

### DIGITAL FILTERS

Exponen.average:	from 2...100 measurements
Rounding:	setting the projection step for display

### MATHEMATIC FUCTIONS

Min/max. value:	registration of min./max. value reached during measurement
Tare:	designed to reset display upon non-zero input signal
Peak value:	the display shows only max. or min. value
Mat. operations:	polynome, 1/x, logarithm, exponential, power, root, sin x

**EXTERNAL CONTROL**

Lock:	control keys blocking
Hold:	display/instrument blocking
Tare:	tare activation/resetting tare to zero
Resetting MM:	resetting min/max value
Memory:	data storage into instrument memory

**2.2 Operation**

The instrument is set and controlled by five control keys located on the front panel. All programmable settings of the instrument are performed in three adjusting modes:

<b>LIGHT</b>	<b>Simple programming menu</b> - contains solely items necessary for instrument setting and is protected by optional number code
<b>PROFI</b>	<b>Complete programming menu</b> - contains complete instrument menu and is protected by optional number code
<b>USER</b>	<b>User programming menu</b> - may contain arbitrary items selected from the programming menu (LIGHT/PROFI), which determine the right (see or change) - access without password

All programmable parameters are stored in the EEPROM memory (they hold even after the instrument is switched off).



Complete instrument operation and setting may be performed via OM Link communication interface, which is a standard equipment of all instruments.

The operation program is freely accessible ([www.orbit.merret.cz](http://www.orbit.merret.cz)) and the only requirement is the purchase of OML cable to connect the instrument to PC. It is manufactured in version RS 232 and USB and is compatible with all ORBIT MERRET instruments. Another option for connection is with the aid of data output RS 232 or RS 485 (without the need of the OML cable).

The program OM LINK in „Basic“ version will enable you to connect one instrument with the option of visualization and archiving in PC. The OM Link „Standard“ version has no limitation of the number of instruments connected.

**2.3 Options**

**Excitation** is suitable for supplying power to sensors and transmitters. It has a galvanic separation.

**Comparators** are assigned to monitor one, two, three or four limit values with relay output. The user may select limits regime: LIMIT/DOSING/FROM-TO. The limits have adjustable hysteresis within the full range of the display as well as selectable delay of the switch-on in the range of 0...99,9 s. Reaching the preset limits is signalled by LED and simultaneously by the switch-on of the relevant relay.

**Data outputs** are for their rate and accuracy suitable for transmission of the measured data for further projection or directly into the control systems. We offer an isolated RS232 and RS485 with the ASCII or DIN MessBus protocol.

**Analog outputs** will find their place in applications where further evaluating or processing of measured data is required in external devices. We offer universal analog output with the option of selection of the type of output - voltage/current. The value of analog output corresponds with the displayed data and its type and range are selectable in Menu.

**Measured data record** is an internal time control of data collection. It is suitable where it is necessary to register measured values. Two modes may be used. FAST is designed for fast storage (40 records/s) of all measured values up to 8 000 records. Second mode is RTC, where data record is governed by Real Time with data storage in a selected time segment and cycle. Up to 250 000 values may be stored in the instrument memory. Data transmission into PC via serial interface RS232/485 and OM Link.

The instrument supply leads should not be in proximity of the incoming low-potential signals.

Contactors, motors with larger input power should not be in proximity of the instrument.

The leads into the instrument input (measured quantity) should be in sufficient distance from all power leads and appliances. Provided this cannot be secured it is necessary to use shielded leads with connection to ground (bracket E).

The instruments are tested in compliance with standards for use in industrial area, yet we recommend to abide by the above mentioned principles.

### MEASURING RANGES


Type	Input I	Input U
DC	0...60/150/300/1 200 mV	
PM	0...5/20 mA/4...20 mA	$\pm 2/\pm 5/\pm 10/\pm 40$ V
OHM	0...0,1/1/10/100 k $\Omega$ /Autorange	
RTD-Pt	Pt 100/Pt 500/ Pt 1 000	
RTD-Cu	Cu 50/100	
RTD-Ni	Ni 1 000/10 000	
T/C	J/K/T/E/B/S/R/N	
DU	Linear potentiometer (min. 500 $\Omega$ )	

### OPTION "A"

Type	Input I	Input U
DC	$\pm 0,1$ A/ $\pm 0,25$ A/ $\pm 0,5$ A to GND (C) $\pm 2$ A/ $\pm 5$ A to GND (B)	$\pm 100$ V/ $\pm 250$ V/ $\pm 500$ V to GND (C)

### OPTION "B"

Type	Input 2, 3, 4/I	Input 2, 3, 4/U
PM	0...5/20 mA/4...20 mA	$\pm 2/\pm 5/\pm 10/\pm 40$ V

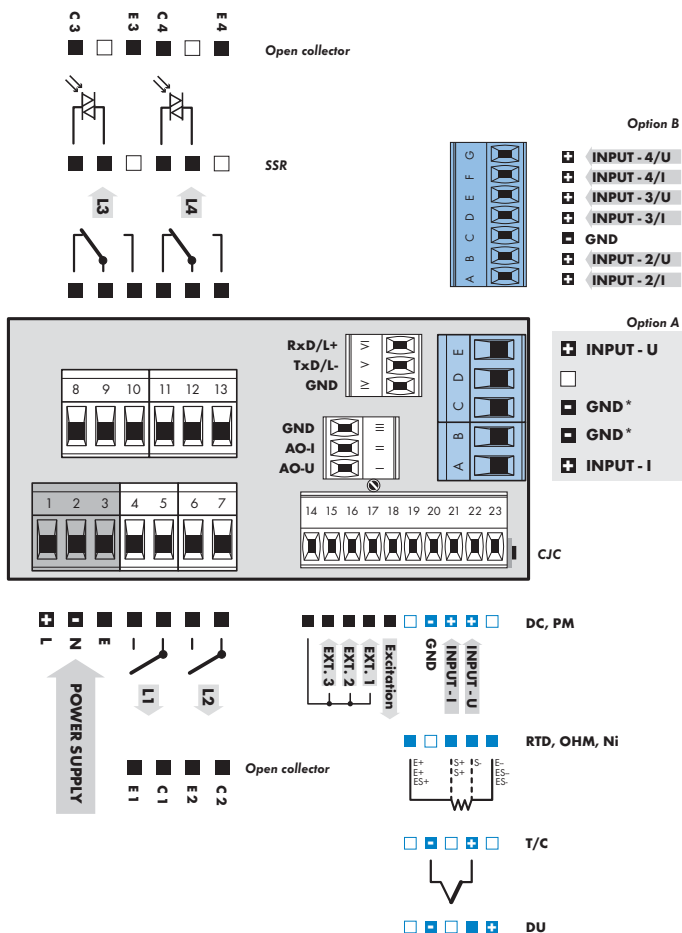

**!**  
Excitation has the minus pole common with the input - the bracket no. 20 - GND and you may set its value by trimmer above the bracket no. 17

PROFI

Setting

*profi*

- ▶ For expert users
- ▶ Complete instrument menu
- ▶ Access is password protected
- ▶ Possibility to arrange items of the „User“ menu
- ▶ Tree menu structure

LIGHT

Setting

*light*

- ▶ For trained users
- ▶ Only items necessary for instrument setting
- ▶ Access is password protected
- ▶ Possibility to arrange items of the „User“ menu
- ▶ Linear menu structure

USER

Setting

*profi light**user*

- ▶ For user operation
- ▶ Menu items are set by the user (Profi/Light) as per request
- ▶ Access is not password protected
- ▶ Optional menu structure either tree (PROFI) or linear (LIGHT)



## 4.1 Setting

The instrument is set and controlled by five control keys located on the front panel. All programmable settings of the instrument are performed in three adjusting modes:

- LIGHT**      **Simple programming menu**  
 - contains solely items necessary for instrument setting and is protected by optional number code
- PROFI**      **Complete programming menu**  
 - contains complete instrument menu and is protected by optional number code
- USER**      **User programming menu**  
 - may contain arbitrary items selected from the programming menu (LIGHT/PROFI), which determine the right (see or change)  
 - access without password


All programmable parameters are stored in the EEPROM memory (they hold even after the instrument is switched off).

Complete instrument operation and setting may be performed via OM Link communication interface, which is a standard equipment of all instruments.


The operation program is freely accessible ([www.orbit.merret.cz](http://www.orbit.merret.cz)) and the only requirement is the purchase of OML cable to connect the instrument to PC. It is manufactured in version RS 232 and USB and is compatible with all ORBIT MERRET instruments.

Another option for connection is with the aid of data output RS 232 or RS 485 (without the need of the OML cable).

## Scheme of processing the measured signal

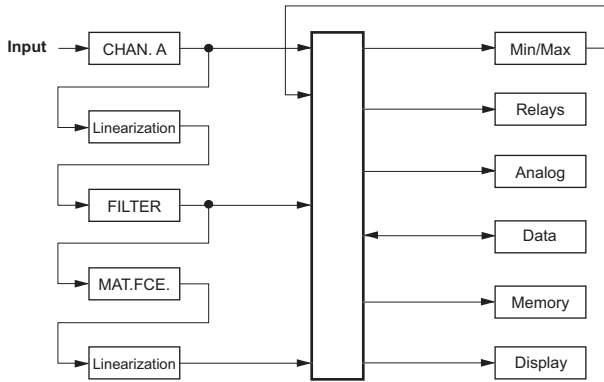

Setting and controlling the instrument is performed by means of 5 control keys located on the front panel. With the aid of these keys it is possible to browse through the operation menu and to select and set required values.

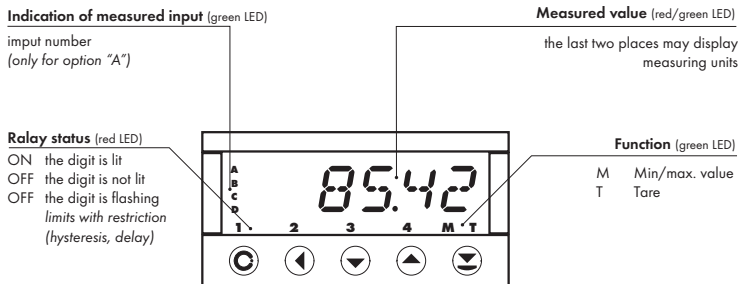

### Symbols used in the instructions

**DC** **PM**  
**DU** **OHM** **RTD** **T/C** Indicates the setting for given type of instrument

**DEF** values preset from manufacture

symbol indicates a flashing light (symbol)

inverted triangle indicates the item that can be placed in USER menu

broken line indicates a dynamic item, i.e. it is displayed only in particular selection/version

after pressing the key the set value will not be stored

after pressing the key the set value will be stored

**30** continues on page 30

### Setting the decimal point and the minus sign

#### DECIMAL POINT

Its selection in the menu, upon modification of the number to be adjusted it is performed by the control key with transition beyond the highest decade, when the decimal point starts flashing. Positioning is performed by / .

#### THE MINUS SIGN

Setting the minus sign is performed by the key on higher decade. When editing the item subtraction must be made from the current number (e.g.: 013 > , on class 100 > -87)

## Control keys functions

Key	Measurement	Menu	Setting numbers/selection
	access into USER menu	exit menu	quit editing
	programmable key function	back to previous level	move to higher decade
	programmable key function	move to previous item	move down
	programmable key function	move to next item	move up
	programmable key function	confirm selection	confirm setting/selection
			numeric value is set to zero
	access into LIGHT/PROFI menu		
	direct access into PROF1 menu		
		configuration of an item for "USER" menu	
		determine the sequence of items in "USER - LIGHT" menu	

## Setting items into „USER“ menu

- in LIGHT or PROF1 menu
- no items permitted in USER menu from manufacture
- on items marked by inverted triangle

**user**

Legend is flashing - current setting is displayed



- NO item will not be displayed in USER menu
- YES item will be displayed in USER menu with the option of setting
- SHOW item will be solely displayed in USER menu

## 5.0

## Setting "LIGHT"

## LIGHT

## Simple programming menu

- contains only items necessary for instrument setting and is protected by optional number code

SETTING LIGHT



- For capable users
- Only items necessary for instrument setting
- Access is password protected
- Possibility to arrange items of the „User“ menu
- Linear menu structure

## Preset from manufacture

Password	"0"
Menu	LIGHT
USER menu	off
Setting the items	<b>DEF</b>

1428



PASSW

0

Access password

**!**  
Upon delay exceeding 60 s the programming mode is automatically discontinued and the instrument itself restores the measuring mode

T:PE

±C

MO: E

60 mV

Selecting input and range

RTD OHM

CONNECT

2-WIRE

FORM: A

00000.0

Selecting projection and connection

TC

CONNECT

EXT. ITC

CJ:TEM

23

FORM: A

00000.0

DC

PM

OHM

DU

MIN: A

0

MA: A

100

FORM: A

0000.00

LIM: L1

20

LIM: L2

40

Option - comparator

LIM: L3

60

LIM: L4

80

Option - Analog output

T: P: A: O:

I 20

MIN: A: O:

0

MA: A: O:

100

Menu type

MENU

LIGHT

Return to manufacture calibration

CALIB

YES

Return to manufacture setting

SETTIN

YES

Calibration - only for "DU"

DU

C: MIN

YES

C: MA: :

YES

Language selection

LANG

ENGL

New password

N: PASS

0

Identification

I: ENT

YES

011 402...

1428

Return to measuring mode

1428



PASSW.

0

Entering access password  
for access into the menu

**PASSW.** Access into instrument menu  
PAS = 0

DC PM DU OHM RTD T/C

- access into menu is unrestricted, after releasing keys you automatically move to first item of the menu

**PAS > 0**  
- access into menu is protected by number code

Set "Password" = 42 Example

0 2 02 20 22  
32 42 T:PE

T:PE

↑C Pnt OHM RTD-Pt RTD-Ni TC  
↑U RTD-Cu

⊗ ⊞

**T:PE** Selection of the type of instrument

- primary selection of the type of instrument  
- performs default setting **DEF** of values from manufacture, incl. calibration

Menu	Type of instrument
DC	DC voltmeter
PM	Process monitor
OHM	Ohmmeter
RTD-Pt	Thermometer for sensors Pt
RTD-Ni	Thermometer for sensors Ni
TC	Thermometer for thermocouples
DU	Display for lin. potentiometer
RTD-Cu	Thermometer for sensors Cu

Type "PM" Example

↑C Pnt DEF

Type „DC“	16
Type "PM"	18
Type "DU"	20
Type "OHM"	22
Type "RTD-Pt"	24
Type "RTD-Cu"	26
Type "RTD-Ni"	28
Type "T/C"	30





**110: E** Selection of the instrument measuring range

**DEF** = 60 mV

**DEF** = 500 V\*

\* only for option "A"

MODE	Menu	Measuring range
MODE	60 mV	±60 mV
	150 mV	±150 mV
	300 mV	±300 mV
	1200mV	±1,2 V
MODE-A	100 V	±100 V
	250 V	±250 V
	500 V	±500 V
	0.10 A	±0,1 A
	0.25 A	±0,25 A
	0.50 A	±0,5 A
	1.00 A	±1 A
	5.00 A	±5 A

Range ±150 mV Example

60 mV | 150 mV | 110: E



**110: R** Setting display projection for minimum value of input signal

- position of the DP does not affect display projection
- the DP is automatically shifted after the value is confirmed

- range of the setting is -99999...999999

**DEF** = 0

Projection for 0 mV > MIN A = 0 Example

0 | 110: R





**MAX: R** Setting display projection for maximum value of input signal


- position of the DP does not affect display projection
- the DP is automatically shifted after the value is confirmed

- range of the setting is -99999...999999

**DEF** = 100

Projection for 150 mV > MAXA = 3500 Example

100	100	100	200	300	400
500	500	500	500	500	FORN.R

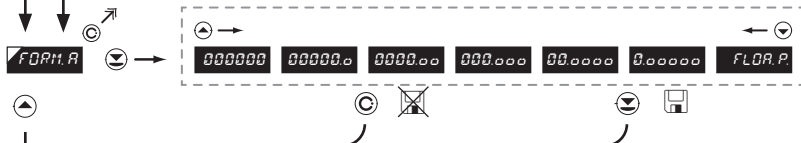

**FORN.R** Setting projection of the decimal point


**DEF** = 0000.00

- positioning of the DP is set here in the measuring mode

Projection of DP on display > 00000.0 Example

0000.00	0000.00	1234
---------	---------	------

\*subsequent item on the menu depends on instrument equipment

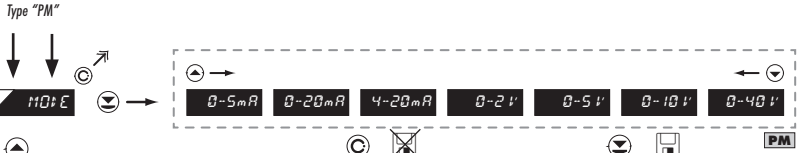

**110: E** Selection of the instrument measuring range

**DEF** = 4 - 20 mA

MODE	Menu	Range
	0-5mA	0...5 mA
	0-20mA	0...20 mA
	4-20mA	4...20 mA
	0.2 V	±2 V
	0.5 V	±5 V
	0-10 V	±10 V
	0-40 V	±40 V

Range 0...20 mA Example

4-20 mA 0-20 mA MIN A

**MIN A** Setting for minimum input signal

**0**

Setting display projection for minimum value of input signal

- position of the DP does not affect display projection
- the DP is automatically shifted after the value is confirmed

- range of the setting is -99999...999999

**DEF** = 0

Projection for 0 mA > MIN A = -25 Example




**MAX: R** Setting display projection for maximum value of input signal

- position of the DP does not affect display projection
- the DP is automatically shifted after the value is confirmed

DEF = 100

Projection for 20 mA > MAX A = 2500 Example

100	100	100	200	300	400
500	500	500	500	FORM: R	

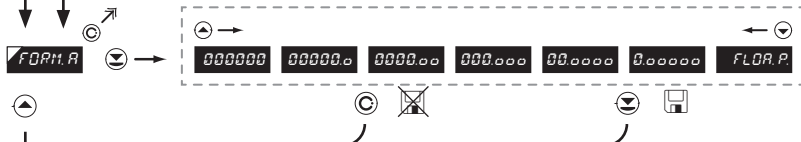

**FORM: R** Setting projection of the decimal point

- positioning of the DP is set here in the measuring mode

DEF = 0000.00

Projection of DP on display > 00000.0 Example

0000.00	00000.0	HELD
---------	---------	------

\* subsequent item on the menu depends on instrument equipment

Type "DU"




**MIN A** Setting display projection for minimum value of input signal

- position of the DP does not affect display projection
- the DP is automatically shifted after the value is confirmed

- range of the setting is -99999...999999

**DEF** = 0

Projection for the beginning > MIN A = 0 Example

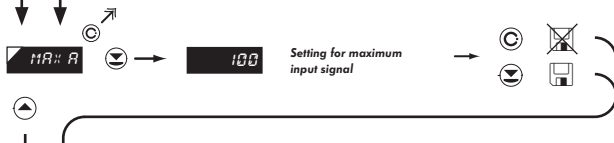


**MAX A** Setting display projection for maximum value of input signal

- position of the DP does not affect display projection
- the DP is automatically shifted after the value is confirmed

- range of the setting is -99999...999999

**DEF** = 100

Projection for the end > MAX A = 5000 Example

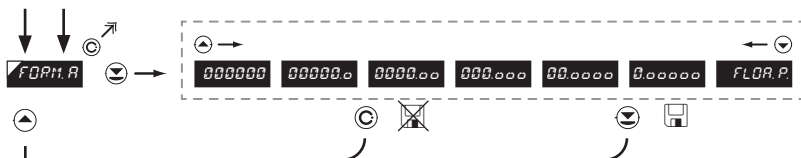

**FORM.A** Setting projection of the decimal point      **DEF** = 0000.00

- positioning of the DP is set here in the measuring mode

---

**Projection of DP on display > 0000.00** Example

0000.00    **MENU**    \* subsequent item on the menu depends on instrument equipment




32

Calibration of the beginning and the end of range of linear potentiometer is on page 37







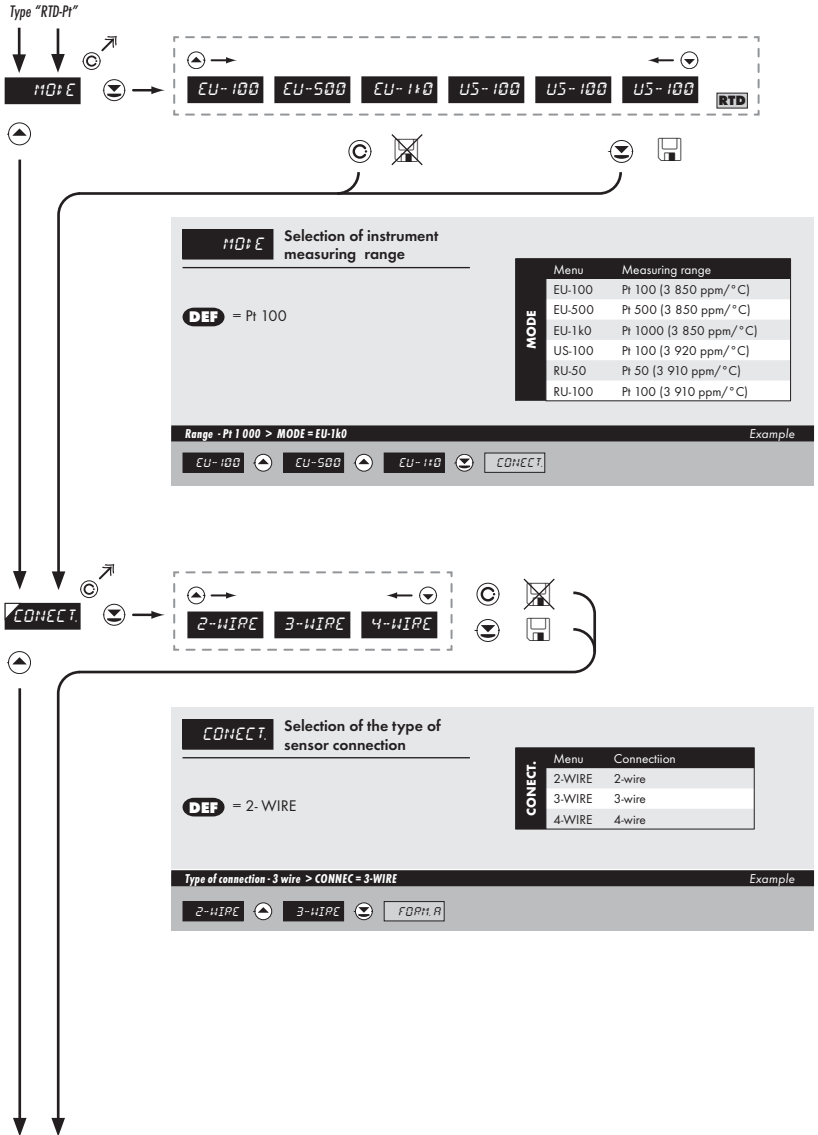





**FORM.R** Setting projection of the decimal point      **DEF** = 00000.0

- positioning of the DP is set here in the measuring mode

---

**Projection of DP on display > 000000** *Example*

00000.0    000000    MENU    \* subsequent item on the menu depends on instrument equipment



32



**110: E** Selection of instrument measuring range

**DEF** = Cu 50/4 280 ppm

MODE	Menu	Measuring range
	428-50	Cu 50 (4 280 ppm/°C)
	428-0.1	Cu 100 (4 280 ppm/°C)
	426-50	Cu 50 (4 260 ppm/°C)
	426-0.1	Cu 100 (4 260 ppm/°C)

Range - Cu 50/4 260 ppm > MODE = 426-50 Example

428-50 ◀ 428-0.1 ▶ 426-50 ◻ CONNECT



**CONNECT** Selection of the type of sensor connection

**DEF** = 2-WIRE

CONNECT	Menu	Connection
	2-WIRE	2-wire
	3-WIRE	3-wire
	4-WIRE	4-wire

Type of connection - 3 wire > CONNEC = 3-WIRE Example

2-WIRE ◀ 3-WIRE ▶ 4-WIRE ◻ FORM R




**FORM.R** Setting projection of the decimal point **DEF** = 00000.0

- positioning of the DP is set here in the measuring mode

**Projection of DP on display > 000000** *Example*

00000.0    000000    MENU \* subsequent item on the menu depends on instrument equipment



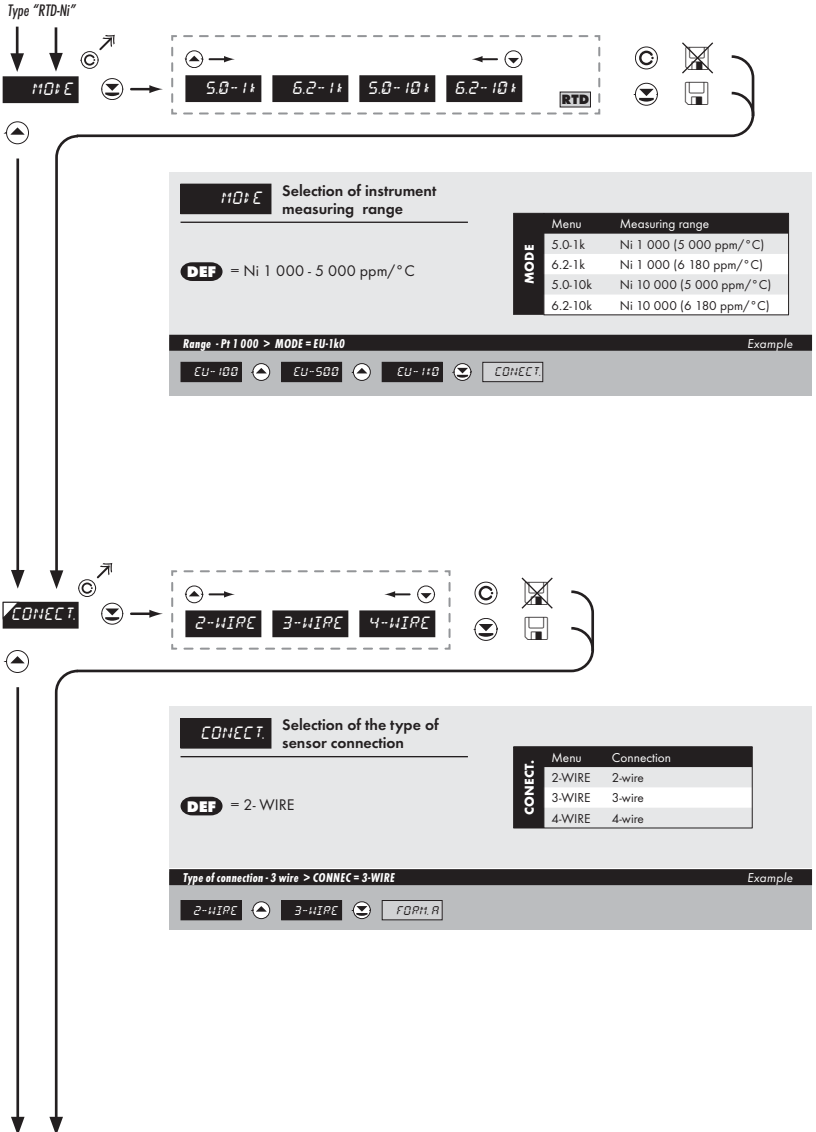



**FORt.R** Setting projection of the decimal point **DEF** = 00000.0

- positioning of the DP is set here in the measuring mode

---

**Projection of DP on display > 000000** *Example*

00000.0    000000    MENU \*subsequent item on the menu depends on instrument equipment

32

RTD-Ni RTD-Ni RTD-Ni RTD-Ni RTD-Ni RTD-Ni RTD-Ni RTD-Ni

Type "T/C"

The diagram shows a sequence of menu screens connected by arrows. It starts with a screen for setting the thermocouple type (DEF) and the sensor connection type (CONNECT). Each screen includes a list of options and a table of settings.

**DEF = Type "J"**


Menu	Type of thermocouple
T/C B	B
T/C E	E
T/C J	J
T/C K	K
T/C N	N
T/C R	R
T/C S	S
T/C T	T

Type of thermocouple "K" Example

**CONNECT = EXT. 1TC**

Menu	Connection	Ref. T/C
INT.1TC	measuring C.J. at instrument brackets	×
INT.2TC	measuring C. J. at instrument brackets with anti-series connected ref. TC	✓
EXT.1TC	the entire measuring set is working under invaried and constant temperature	×
EXT.2TC	when using compensation box	✓

Type of connection > CONNECT. = EXT. 2TC Example

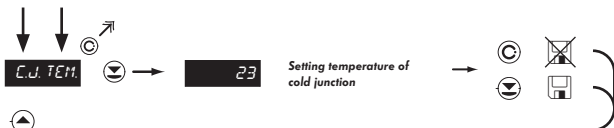

**C.J. TEM** Setting temperature of cold junction **DEF = 23**

- range 0...99 °C with compensation box

Setting temperature of cold junction > C.J. TEM. = 35 Example

23 24 25 25 35 FORM.A



**FORM.A** Setting projection of the decimal point **DEF = 00000.0**


- positioning of the DP is set here in the measuring mode

Projection of DP on display > 000000 Example

00000.0 000000 MENU \* subsequent item on the menu depends on instrument equipment

**!**  
For thermocouple type "B" the items **CONNECT.** and **C.J. TEM.** are not available

**!**  
Method and procedure of setting the cold junctions is described in separate chapter on page 76

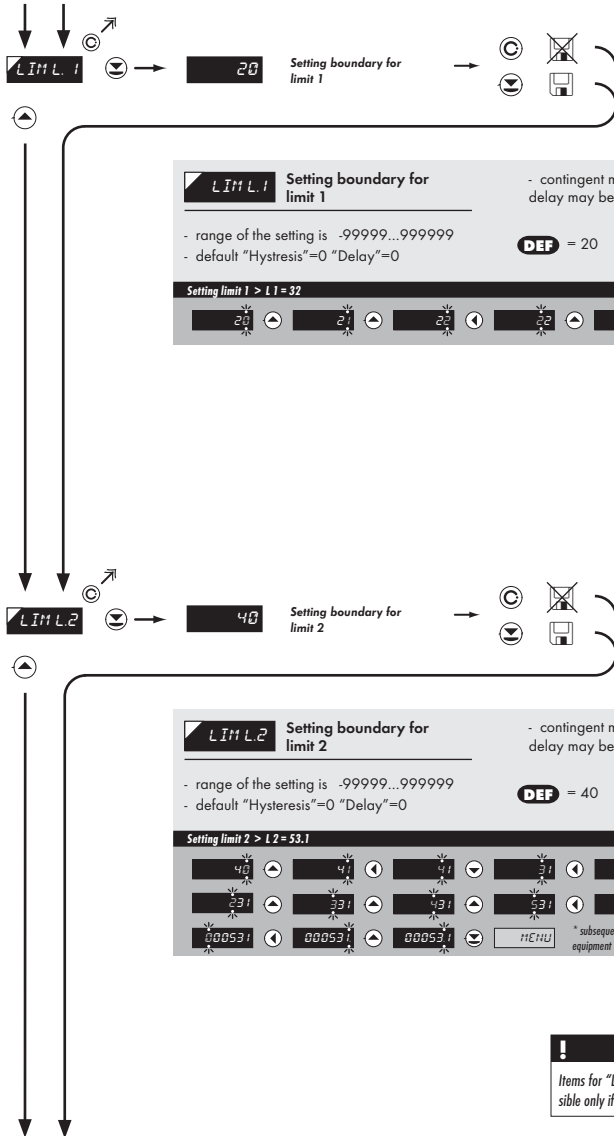

**!** Items for "Limits" and "Analog output" are accessible only if incorporated in the instrument.





**LIM L3** Setting boundary for limit 3

- range of the setting is -99999...999999
- default "Hysteresis"=0 "Delay"=0

**DEF** = 60

---

**Setting limit 3 > L3 = 85** Example

60	61	62	63	64	65
65	65	65	11E+11U		

\* subsequent item on the menu depends on instrument equipment



**LIM L4** Setting boundary for limit 4

- range of the setting is -99999...999999
- default "Hysteresis"=0 "Delay"=0

**DEF** = 80

---

**Setting limit 4 > L4 = 103** Example

80	81	82	83	83	83
83	803	103	11E+11U		

\* subsequent item on the menu depends on instrument equipment

↓ ↓ ↗ ↻ ↺

**TYP.A.O.** →

0-20mA   E. 4-20   4-20mA   0-5mA   0-2V   0-5V   0-10V

↻   ~~⊗~~   ↺  

↻   ↺

**TYP.A.O.** Setting the type of analog output

Menu	Range	Description
0-20mA	0...20 mA	
E. 4-20mA	4...20 mA	with indication of error statement (<3,6 mA)
4-20mA	4...20 mA	
0.5mA	0...5 mA	
0.2 V	0...2 V	
0.5 V	0...5 V	
0-10 V	0...10 V	

**DEF** = 4...20 mA

Type of analog output - 0...10 V > TYP.A.O. = 0-10 V Example

4-20mA   0-5mA   0-2V   0-5V   0-10V   **MIN.A.O.**

↻   ↺

↻   ↺

**MIN.A.O.** →

0   Assigning the display value to the beginning of the AO range

↻   ~~⊗~~   ↺  

↻   ↺

**MIN.A.O.** Assigning the display value to the beginning of the AO range **DEF** = 0

- range of the setting is -99999...99999


Display value for the beginning of the AO range > MIN.A.O. = 0 Example

**MIN.A.O.**

↻   ↺

**!**

Items for "Limits" and "Analog output" are accessible only if incorporated in the instrument.

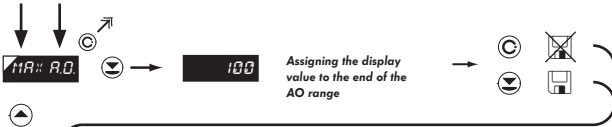


**11A:: R.O.** Assigning the display value to the end of the AO range **DEF** = 100

- range of the setting is -99999...999999

**Display value for the end of the AO range > MAX.A.O. = 120** Example

100 [Down] 100 [Up] 110 [Up] 120 [Down] MENU

Displayed only with options > **Analog output**

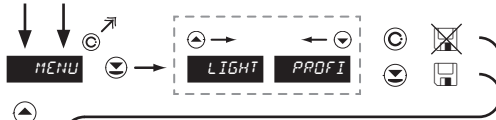

**MENU** Setting the menu type  
LIGHT/PROFI

LIGHT > menu LIGHT, a simple menu, which contains only the most essential items necessary for instrument setting  
> linear tree structure

PROFI > menu PROF, a complete menu for complete instrument setting  
> tree menu structure

**DEF** = LIGHT

Menu LIGHT > MENU = LIGHT Example

LIGHT  CALIB




**CALIB** Restoration of manufacture calibration

- in the event of error calibration it is feasible to restore manufacture calibration.

Restoration of manufacture setting > CALIB. Example

CALIB  YES  SETTING



**SETTING** Restoration of manufacture instrument setting

- in the event of error setting the manufacture setting may be restored

- restoration is performed for the currently selected type of the instrument input (select "TYPE")

- provided you stored your user setting in the "PROFI" menu, it may also be restored (select "USER")


- loading manufacture calibration and primary setting of items on the menu (DEF)

Restoration of manufacture setting > SETTING. Example

SETTING  TYPE  USER

SETTING  TYPE  LANG \* subsequent item on the menu depends on instrument type, for "DU" > "K. MIN"

Type "DC"	38
Type "PM"	38
Type "DU"	37
Type "OHM"	38
Type "RTD-Pt"	38
Type "RTD-Cu"	38
Type "RTD-Ni"	38
Type "T/C"	38

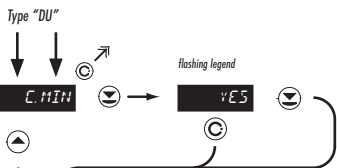


**C. MIN** Calibration of input range - the potentiometer traveller in initial position Only for type "DU"

- prior confirming the flashing "YES" sign the potentiometer traveller has to be in given idle position

**Calibration of the beginning of the range > C. MIN** Example

**YES** **C. MAX**

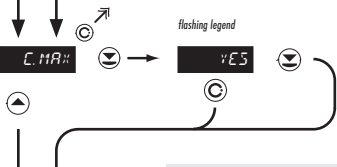


**C. MAX** Calibration of input range - the potentiometer traveller in end position Only for type "DU"

- prior confirming the flashing "YES" sign the potentiometer traveller has to be in given idle position

**Calibration of the end of the range > C. MAX** Example

**YES** **RANG**



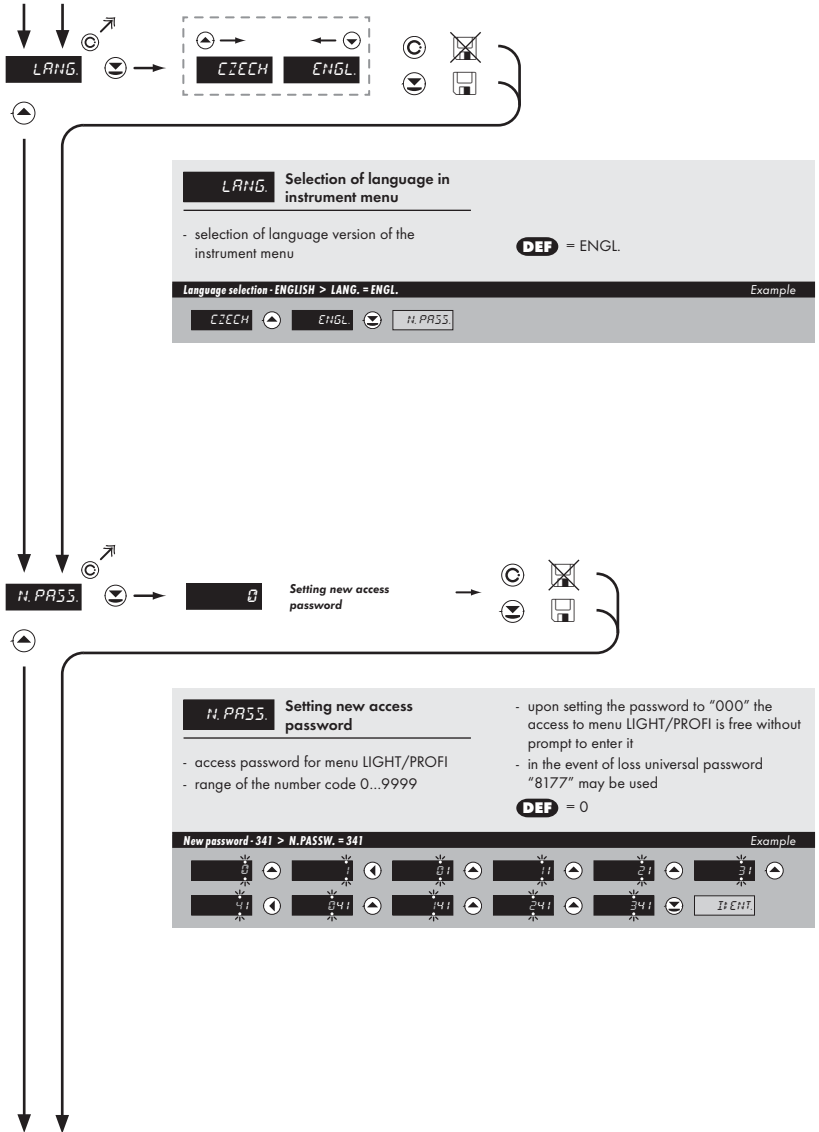



**It ENT.**

### Instrument SW version

- the display shows the type of instrument indication, SW number, SW version and current input setting (Mode)

- if SW version contains a letter in first position, then it is a customer SW
- after the identification is completed the menu is automatically exited and the instrument restores the measuring mode

1428

Return to measuring mode

## 6.0

## Setting "PROFI"

## PROFI

## Complete programming menu

- contains complete instrument menu and is protected by optional number code
- designed for expert users
- preset from manufacture is menu **LIGHT**

 SETTING  
 PROFIL  
 ▼  
 ▼  
 ▼  
 ▼  
 ▼  
 ▼  
 ▼  
 ▼


- For expert users
- Complete instrument menu
- Access is password protected
- Possibility to arrange items of the „User“ menu
- Tree menu structure

## Switching over to "PROFI" menu



- temporary switch-over to **PROFI** menu, which is suitable to edit a few items
- after quitting **PROFI** menu the instrument automatically switches to **LIGHT** menu
- access is password protected (if it was not set under item N. PASS. =0)




- access into **LIGHT** menu and transition to item „MENU“ with subsequent selection of „PROFI“ and confirmation
- after re-entering the menu the **PROFI** type is active
- access is password protected (if it was not set under item N. PASS. =0)






## 6.1 Setting "PROFI" - INPUT

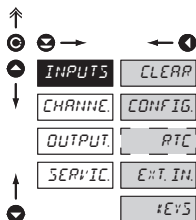

The primary instrument parameters are set in this menu

<b>CLEAR</b>	Resetting internal values
<b>CONFIG</b>	Selection of measuring range and parameters
<b>RTC</b>	Setting date and time for option with RTC
<b>EXT. IN</b>	Setting external inputs functions
<b>EVS</b>	Assigning further functions to keys on the instrument


### 6.1.1 Resetting internal values

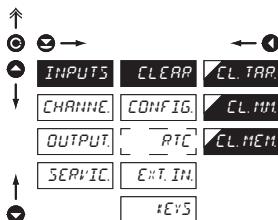

<b>CLEAR</b>	Resetting internal values
<b>CL. TAR.</b>	Tare resetting
<b>CL. MM.</b>	Resetting min/max value
<b>CL. MEM.</b>	Resetting the instrument memory

- resetting memory for the storage of minimum and maximum value achieved during measurement
- resetting memory with data measured in the "FAST" or "RTC" modes
- not in standard equipment


#### 6.1.2a Selection of measuring rate

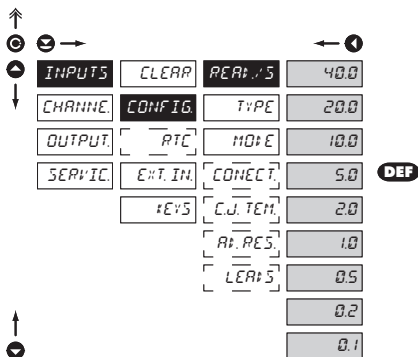

#### REAR: /S Selection of measuring rate

40.0	40,0 measurements/s
20.0	20,0 measurements/s
10.0	10,0 measurements/s
5.0	5,0 measurements/s
2.0	2,0 measurements/s
1.0	1,0 measurement/s
0.5	0,5 measurements/s
0.2	0,2 measurements/s
0.1	0,1 measurements/s


#### 6.1.2b Selection of „instrument“ type

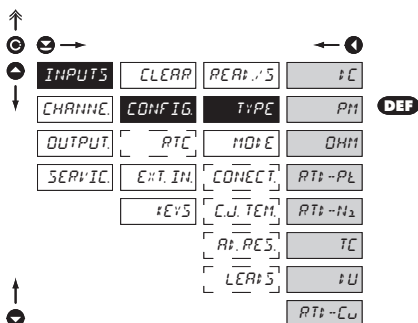


#### TYPE Selection of „instrument“ type

- selection of particular type of "instrument" is bound to relevant dynamic items

tC	DC voltmeter
Pt	Process monitor
OHM	Ohmmeter
RT-PL	Thermometer for Pt xxx
RT-N1	Thermometer for Ni xxxx
TC	Thermometer pro thermocouples
tU	Display for linear potentiometers
RT-CU	Thermometer for Cu xxx

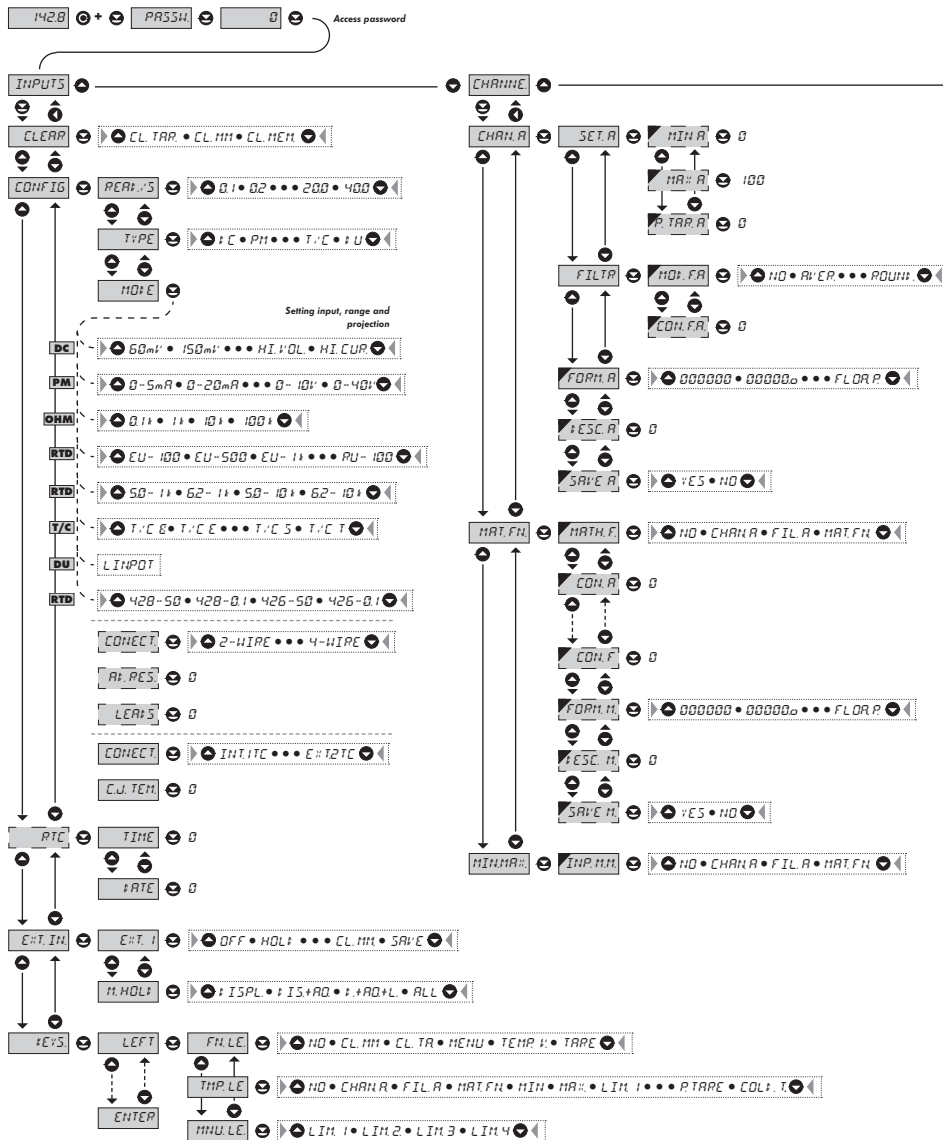

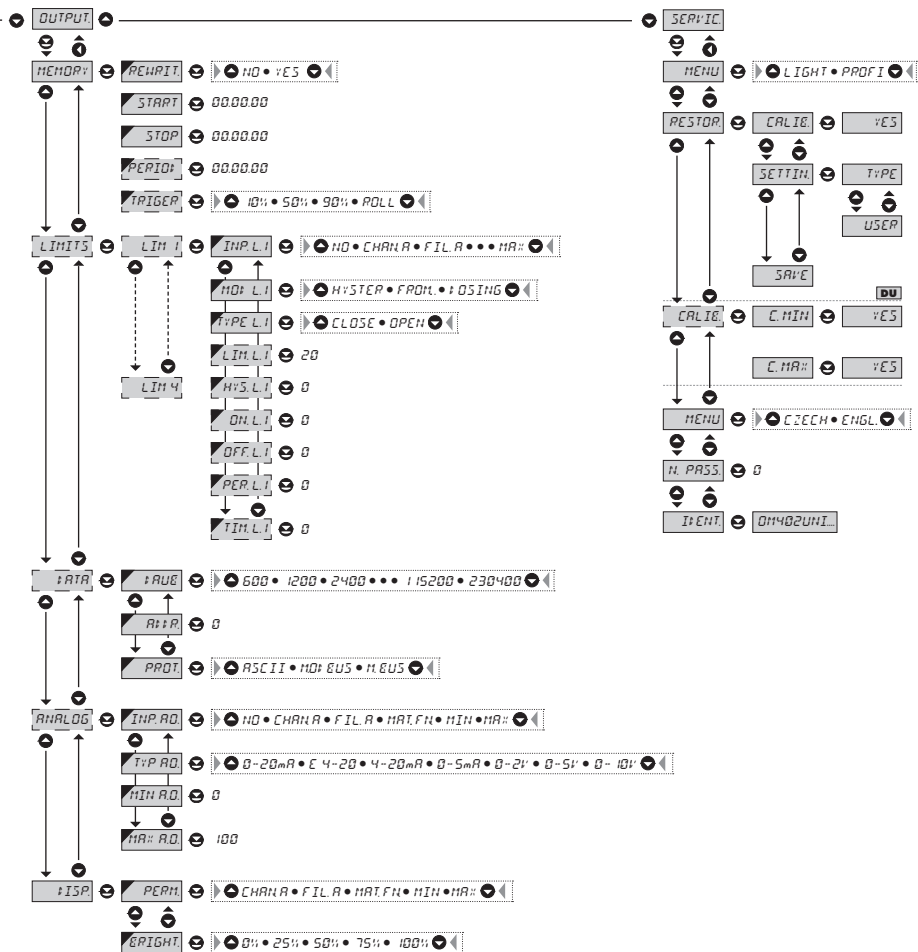

**!**  
 Upon delay exceeding 60 s the programming mode is automatically discontinued and the instrument itself restores the measuring mode

## 6.1.2c Selection of measuring range

↑

↺

↻

↓

INPUTS	CLEAR	PERMITS	60mV	100R	
CHANNEL	CONFIG	TYPE	150mV	1k	DEF
OUTPUT	PTC	MODE	300mV	10k	
SERVIC.	EXT. IN.	CONNECT	1200mV	100k	
	KEYS	CJ. TEM.		AUTO	
		REL. RES.			
		LEADS			

DC

OHM ← 1

DEF

	DC - A		PM	
	100V		0-5mA	
	250V		0-20mA	
DEF	500V		4-20mA	DEF
	0.10A		0-2V	
	0.25A		0-5V	
	0.50A		0-10V	
	1.00A		0-40V	
	5.00A			

DEF

DEF

	RTD-Pt		RTD-Cu	
DEF	EU-100		428-50	DEF
	EU-500		428-0.1	
	EU-1k0		426-50	
	US-100		426-0.1	
	RU-50			
	RU-100			

DEF

DEF

	RTD-Ni		T/C	
DEF	5.0-1k		T/C E	
	6.2-1k		T/C J	
	5.0-10k		T/C K	
	6.2-10k		T/C N	
			T/C R	
			T/C S	

DEF

DEF

	DU		T/C	
DEF	LIM.POT.		T/C T	

DEF

### Switching in the mode AUTO - "OHM"

0.1 > 1 k	0.101 k
1 k > 10 k	1.010 k
10 k > 100 k	10.10 k
100 > 10 k	9.900 k
10 k > 1 k	0.990 k
1 k > 0.1 k	0.099 k

When selecting the "AUTO" range, the items "MIN", "MAX", "P. TAR. A" will not be displayed in the "CHAN. A" setting

## MODE Selection of instrument measuring range

	Menu	Measuring range
DC	60 mV	±60 mV
	150 mV	±150 mV
	300 mV	±300 mV
	1200mV	±1.2 V
	100 V	±100 V
	250 V	±250 V
DC-A	500 V	±500 V
	0.10 A	±0,1 A
	0.25 A	±0,25 A
	0.50 A	±0,5 A
	1.00 A	±1 A
	5.00 A	±5 A
PM	Menu	Measuring range
	0.5mA	0...5 mA
	0.20mA	0...20 mA
	4.20mA	4...20 mA
	0.2 V	±2 V
	0.5 V	±5 V
OHM	Menu	Measuring range
	100 R	0...100 Ω
	1 k	0...1 kΩ
	10 k	0...10 kΩ
	100 k	0...100 kΩ
	AUTO	Automatická změna rozsahu
RTD-Pt	Menu	Measuring range
	EU-100	Pt 100 [3 850 ppm/°C]
	EU-500	Pt 500 [3 850 ppm/°C]
	EU-1k0	Pt 1000 [3 850 ppm/°C]
	US-100	Pt 100 [3 920 ppm/°C]
	RU-50	Pt 50 [3 910 ppm/°C]
RTD-Cu	Menu	Measuring range
	428-50	Cu 50 [4 280 ppm/°C]
	428-0.1	Cu 1 00 [4 280 ppm/°C]
	426-50	Cu 50 [4 260 ppm/°C]
	426-0.1	Cu 100 [4 260 ppm/°C]
	Menu	Measuring range
T/C	Menu	Type of thermocouple
	T/C B	B
	T/C E	E
	T/C J	J
	T/C K	K
	T/C N	N
T/C R	R	
T/C S	S	
T/C T	T	

#### 6.1.2.d Selection of type of sensor connection

**RTD** **OHM** **T/C**

↑  
 Ⓞ →  
 ▲  
 ↓  
 Ⓞ ←

INPUTS	CLEAR	PERV.S	2-WIRE	DEF
CHANNEL	CONFIG	TYPE	3-WIRE	
OUTPUT	PTC	MODE	4-WIRE	
SERVIC.	EXT. IN.	CONNECT		
	#EVS	RI. RES.		
		LEAFS		

↑  
 Ⓞ →  
 ▲  
 ↓  
 Ⓞ ←

INPUTS	CLEAR	PERV.S	INT. ITC	
CHANNEL	CONFIG	TYPE	INT. 2TC	
OUTPUT	PTC	MODE	EXT. ITC	DEF
SERVIC.	EXT. IN.	CONNECT	EXT. 2TC	
	#EVS	C.J. TEM.		

**CONNECT** Selection of type of sensor connection

**RTD** **OHM**

2-WIRE 2-wire connection

3-WIRE 3-wire connection

4-WIRE 4-wire connection

**T/C**

INT. ITC Measurement without reference thermocouple

- measuring cold junction at instrument brackets

INT. 2TC Measurement with reference thermocouple

- measuring cold junction at instrument brackets with anti-series connected reference thermocouple

EXT. ITC Measurement without reference thermocouple

- the entire measuring set is working under invaried and constant temperature

EXT. 2TC Measurement with reference thermocouple

- when using compensation box




Method and procedure of setting the cold junctions is described in separate chapter on page 76



For thermocouple type "B" the items CONNECT. and C.J. TEM. are not available

## 6.1.2e Setting temperature of cold junction


T/C

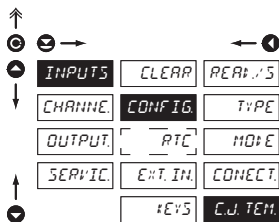**C.J.TEM** Setting temperature of cold junction

- range 0...99 °C with compensation box
- **DEF** = 23 °C

## 6.1.2f Compensation of 2-wire conduct


RTD OHM

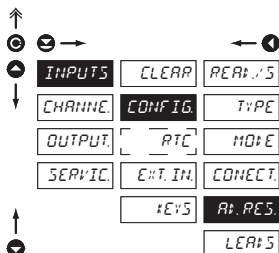**RT.RES** Offset of the beginning of the measuring range

- in cases when it is necessary to offset the beginning of the range by certain value, e.g. while using sensor in measuring head
- entered directly in Ohm (0...9999)
- **DEF** = 0

## 6.1.2g Compensation of 2-wire conduct


RTD OHM

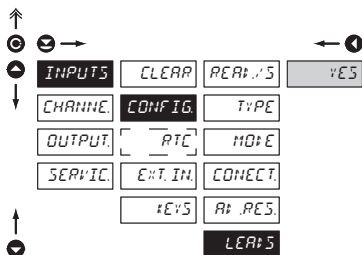**LEA:5** Compensation of 2-wire conduct

- for measurement accuracy it is necessary to perform compensation of conduct always in case of 2-wire connection
- prior confirmation of the displayed prompt „YES“ it is necessary to substitute the sensor at the end of the conduct by a short-circuit
- **DEF** = 0



#### 6.1.3 Setting the real time clock

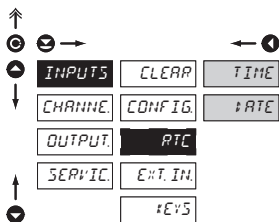

#### RTC Setting the real time clock (RTC)


**TIME** Time setting

- format 23.59.59

**DATE** Date setting

- format DD.MM.YY

#### 6.1.4a External input function selection

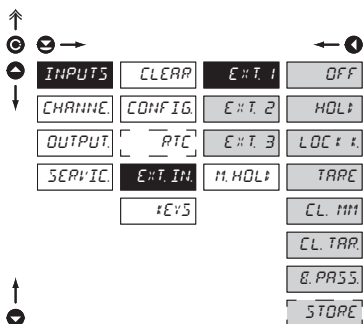

#### EXT. IN. External input function selection

**OFF** Input is off

**HOLD** Activation of HOLD

**LOCK K.** Locking keys on the instrument

**TARE** Tare activation

**CL. MIN** Resetting min/max value

**CL. TAR.** Tare resetting

**L. PASS.** Activation of locking access into programming menu LIGHT/PROFI

**STORE** Activation of measured data record in instrument memory (not in standard equipment)

- **DEF** EXT. 1 > HOLD


- **DEF** EXT. 2 > LOCK K.

- **DEF** EXT. 3 > TARE

\*


Setting procedure is identical for EXT. 2 and EXT. 3

## 6.1.4b Selection of function "HOLD"

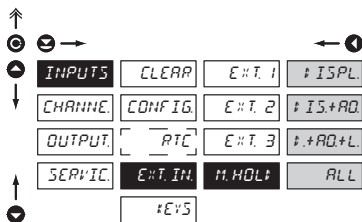**H.HOLD** Selection of function "HOLD"

- ±ISPL** "HOLD" locks only the value displayed
- ±IS+AD** "HOLD" locks the value displayed and on AO
- ±+AD+L** "HOLD" locks the value displayed, on AO and limit evaluation
- ALL** "HOLD" locks the entire instrument

## 6.1.5a Optional accessory functions of the keys

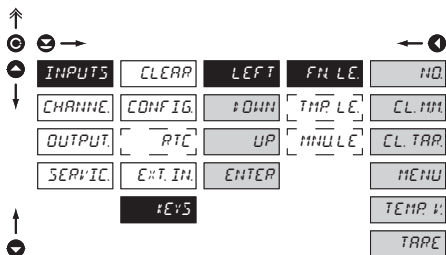**FN.LE** Assigning further functions to instrument keys

- „FN. LE.“ > executive functions
- „TMP. LE.“ > temporary projection of selected values
- „MNU. LE.“ > direct access into menu on selected item

- NO** Key has no further function
- CL.MM** Resetting min/max value
- CL.TAR** Tare resetting
- MENU** Direct access into menu on selected item
- after confirmation of this selection the "MNU. LE." item is displayed on superior menu level, where required selection is performed
- TEMP.V** Temporary projection of selected values
- after confirmation of this selection the item "TMP. LE." is displayed on superior menu level, where required selection is performed
- TARE** Tare function activation




Preset values of the control keys **DEF**:

LEFT	Show Tare
UP	Show Max. value
DOWN	Show Min. value
ENTER	w/o function



Setting is identical for LEFT, DOWN, UP and ENTER

### 6.1.5b Optional accessory functions of the keys - Temporary projection

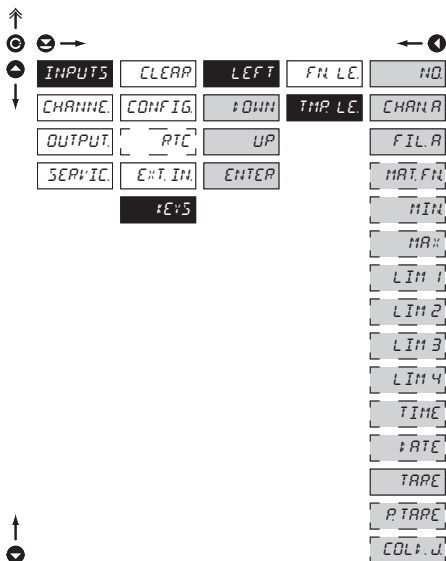


#### **TMP. LE.** Temporary projection of selected item

- "Temporary" projection of selected value is displayed for the time of keystroke
- "Temporary" projection may be switched to permanent by pressing **⊕** + "Selected key", this holds until the stroke of any key

- NO** Temporary projection is off
- CHAN A** Temporary projection of "Channel A" value
- FIL A** Temporary projection of "Channel A" value after processing digital filters
- MAT. FN.** Temporary projection of "Mathematic functions" value
- MIN** Temporary projection of "Min. value"
- MAX** Temporary projection of "Max. value"
- LIM 1** Temporary projection of "Limit 1" value
- LIM 2** Temporary projection of "Limit 2" value
- LIM 3** Temporary projection of "Limit 3" value
- LIM 4** Temporary projection of "Limit 4" value
- TIME** Temporary projection of "TIME" value
- DATE** Temporary projection of "DATE" value
- TARE** Temporary projection of "TARE" value
- P. TARE** Temporary projection of "P. TARE" value
- COL. J.** Temporary projection of "CJC" value

**!**  
Setting is identical for LEFT, DOWN, UP and ENTER

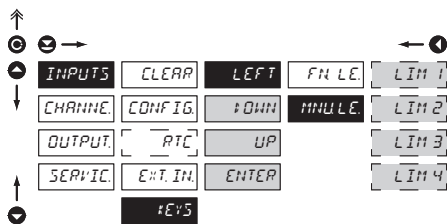
**6.1.5c Optional accessory functions of the keys - Direct access to item**

**MNU LE** Assigning access to selected menu item

- LIM 1** Direct access to item "LIM 1"
- LIM 2** Direct access to item "LIM 2"
- LIM 3** Direct access to item "LIM 3"
- LIM 4** Direct access to item "LIM 4"

**!**  
Setting is identical for LEFT, DOWN, UP and ENTER

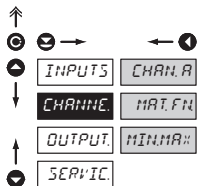

## 6.2 Setting "PROFI" - CHANNELS




The primary instrument parameters are set in this menu

- CHAN.A** Setting parameters of measuring "Channel"
- MAT.FN** Setting parameters of mathematic functions
- MIN.MA** Selection of access and evaluation of Min/max value

### 6.2.1 a Display projection

**DC PM DU OHM**

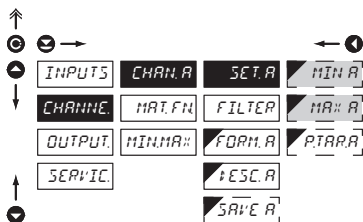

#### SET.A Setting display projection

##### MIN.A Setting display projection for minimum value of


- input signal
- range of the setting is -99999...999999
- **DEF** = 0

##### MA.A Setting display projection for maximum value of

- input signal
- range of the setting is -99999...999999
- **DEF** = 100

### 6.2.1 b Setting fixed tare

**DC PM DU OHM**

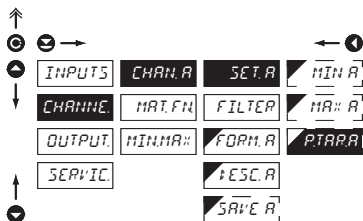

#### P.TAR.A Setting "Fixed tare" value

- setting is designed for the event when it is necessary to firmly shift the beginning of the range by known size
- when setting (P.TAR.A > 0) display shows "T" symbol
- range of the setting is 0...999999
- **DEF** = 0

#### 6.2.1c Digital filters



#### **MOD.FA.** Selection of digital filters

- at times it is useful for better user projection of data on display to modify it mathematically and properly, wherefore the following filters may be used:

**NO** Filters are off

**AVER** Measured data average

- arithmetic average from given number („CON.F.A.“) of measured values
- range 2...100

**FLOAT** Selection of floating filter

- floating arithmetic average from given number („CON.F.A.“) of measured data and updates with each measured value
- range 2...30

**EXPON** Selection of exponential filter

- integration filter of first prvního grade with time constant („CON.F.A.“) measurement
- range 2...100


**ROUND** Measured value rounding

- is entered by any number, which determines the projection step (e.g. „CON.F.A.“=2,5 > display 0, 2.5, 5,...)

**CON.F.A.** Setting constants

- this menu item is always displayed after selection of particular type of filter

- **DEF** = 2

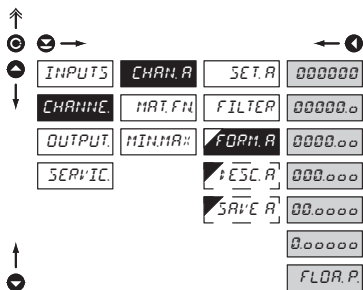**6.2.1d Projection format - positioning of decimal point**

**FORM.A Selection of decimal point**

- the instrument allows for classic projection of a number with positioning of the DP as well as projection with floating DP, allowing to display a number in its most exact form „FLOAT.P.“

000000 Setting DP - XXXXX.

00000.0 Setting DP - XXXX.x

- **DEF** > **RTD** **T/C**

0000.00 Setting DP - XXXX.xx


- **DEF** > **DC** **PM** **DU** **OHM**

000.000 Setting DP - XXX.xxx

00.0000 Setting DP - XX.xxxx

0.00000 Setting DP - X.xxxxx

FLOR.P. Floating DP

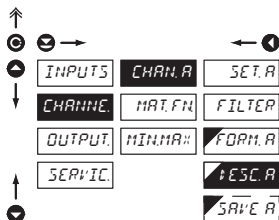
**6.2.1e Projection of description - the measuring units**

**ESC.A Setting projection of description for "Channel A"**

- projection of measured data may be extended (at the expense of the number of displayed places) by two characters for description
- description is set by shifted ASCII code, when two first places show the set description and two last characters their code in period 0...95
- description is cancelled by code 00
- **RTD** **T/C** **DEF** = °C
- **DC** **PM** **DU** **OHM** **DEF** = none

**!**  
Table of signs on page 81

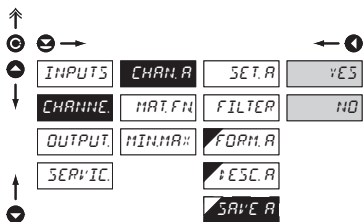

#### 6.2.1f Selection of storing data into instrument memory




#### **SAVE A** Selection of storing data into instrument memory

- by selection in this item you allow to register values into instrument memory
- another setting in item "OUTPUT. > MEMORY" (not in standard experiment)

**YES** Measured data are stored in the memory

**NO** Measured data are not stored

## 6.2.2a Mathematic functions

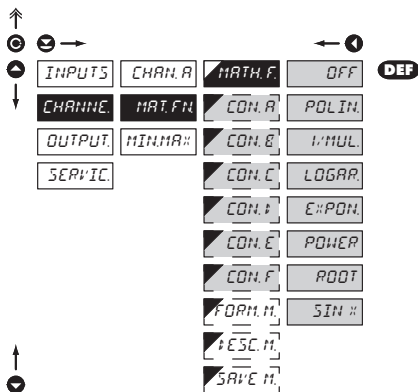
**MATH.F** Selection of mathematic functions

OFF

Mathematic functions are off

POLIN

Polynome

$$Ax^2 + Bx^1 + Cx^0 + Dx^2 + Ex + F$$

1/MUL

1/x

$$\frac{A}{x^3} + \frac{B}{x^4} + \frac{C}{x^2} + \frac{D}{x^2} + \frac{E}{x} + F$$

LOGAR

Logarithm

$$A \times \ln \left( \frac{Bx + C}{Dx + E} \right) + F$$

E:PN

Exponential

$$A \times e^{\left( \frac{Bx + C}{Dx + E} \right)} + F$$

POWER

Power

$$A \times (Bx + C)^{(Dx + E)} + F$$

ROOT

Root

$$A \times \sqrt{\frac{Bx + C}{Dx + E}} + F$$

SIN #

Sin x


$$A \sin^5 x + B \sin^4 x + C \sin^3 x + D \sin^2 x + E \sin x + F$$

CON. -

Setting constants for calculation of mat. functions

- this menu is displayed only after selection of given mathematic function

#### 6.2.2b Mathematic functions - decimal point

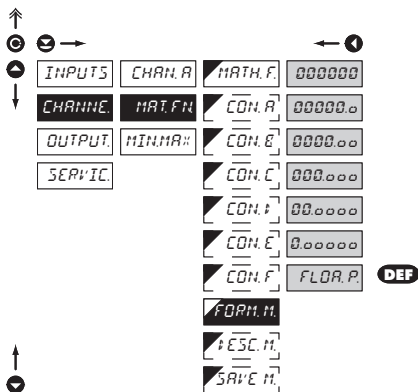

#### FORM.M. Selection of decimal point

- the instrument allows for classic projection of a number with positioning of the DP as well as projection with floating DP, allowing to display a number in its most exact form „FLOA.P.“

000000. Setting DP - XXXXXX.

00000.0 Setting DP - XXXX.X

0000.00 Setting DP - XXXX.xx

000.000 Setting DP - XXX.xxx


00.0000 Setting DP - XX.xxxx

0.00000 Setting DP - X.xxxxx

FLOA.P. Floating DP

**DEF**

#### 6.2.2c Mathematic functions - measuring units

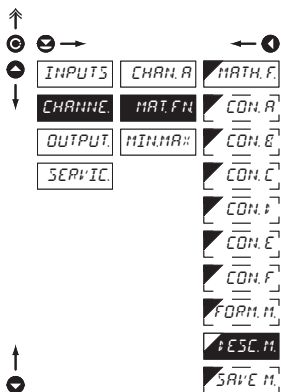

#### DESC.M. Setting projection of description for "MAT.FN"


- projection of measured data may be extended (at the expense of the number of displayed places) by two characters for description

- description is set by shifted ASCII code, when two first places show the set description and two last characters their code in period 0...95

- description is cancelled by code 00


- **DEF** = no description

! Table of signs on page 81

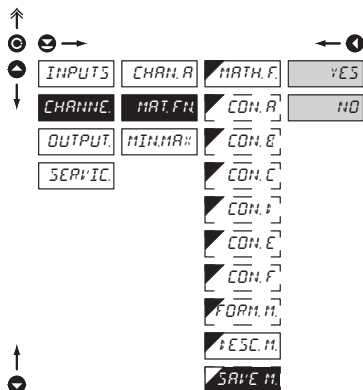**6.2.2d**    **Mathematic functions - selection of storing data into instrument memory**

**SAVE M.**    **Selection of storing data into instrument memory**

- by selection in this item you allow to register values into instrument memory
- another setting in item "OUTPUT. > MEMORY" (not in standard experiment)

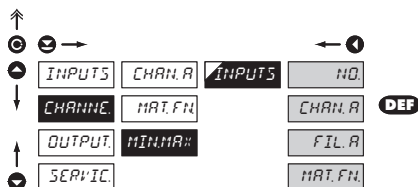YES	Measured data are stored in the memory
NO	Measured data are not stored


**6.2.3**    **Selection of evaluation of min/max value**

**INPUTS**    **Selection of evaluation of min/max value**

- selection of value from which the min/max value will be calculated

NO	Evaluation of min/max value is off
CHAN.A	From "Channel A"
FIL.A	From "Channel A" after digital filters processing
MAT.FN.	From "Mathematic functions"

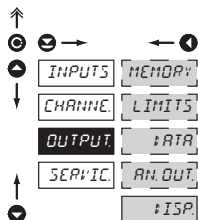


### 6.3 Setting „PROFI“ - OUTPUTS



In this menu it is possible to set parameters of the instrument output signals

- MEMORY** Setting data logging into memory
- LIMITS** Setting type and parameters of limits
- DATA** Setting type and parameters of data output
- AN. OUT.** Setting type and parameters of analog output
- DISP.** Setting display projection and brightness

#### 6.3.1a Selection of mode of data logging into instrument memory

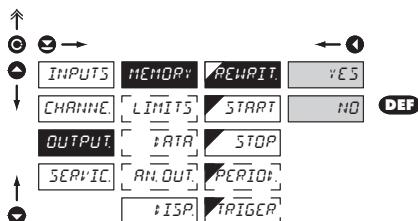


**REWRITE** Selection of the mode of data logging

- selection of the mode in the event of full instrument memory

- NO** Rewriting values prohibited
- YES** Rewriting values permitted, the oldest get rewritten by the latest

#### 6.3.1b Setting data logging into instrument memory - RTC

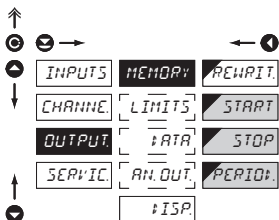

**START** Start of data logging into instrument memory

- time format HH.MM.SS

**STOP** Stop data logging into instrument memory

- time format HH.MM.SS

**PERIOD** Period of data logging into instrument memory


- determines the period in which values will be logged in an interval delimited by the time set under items START and STOP

- time format HH.MM.SS

- records are made on a daily basis in selected interval and period

- item not displayed if "STORE" is selected in menu (Input > EXT. IN.)

#### 6.3.1c Setting data logging into instrument memory - FAST

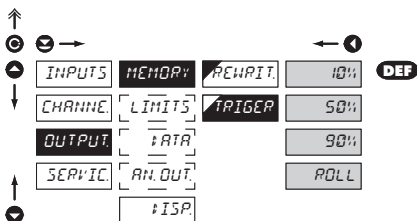

**TRIGGER** Setting logging data into inst. memory

- logging data into inst. memory is governed by the following selection, which determines how many percent of the memory is reserved for data logging prior to initiation of trigger impulses

- initiation is on ext. input or control key


**10%** Reser. of 10 % memory prior init. of data logging

**50%** Reser. of 50 % memory prior init. of data logging

**90%** Reser. of 90 % memory prior init. of data logging

**POLL** After initiation of data logging the memory is cyclically transcribed

## 6.3.2a Selection of input for limits evaluation

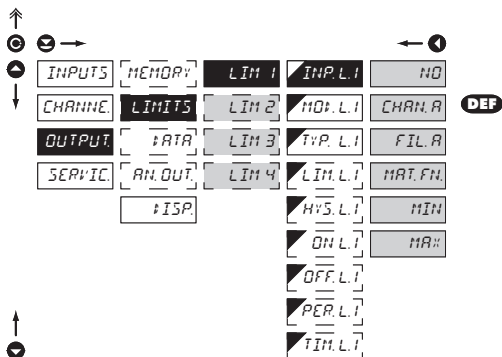


Setting is identical for LIM 2, LIM 3 and LIM 4

**INP.L.1** Selection evaluation of limits

- selection of value from which the limit will be evaluated

- NO** Limit evaluation is off
- CHAN.A** Limit evaluation from "Channel A"
- FIL.R** Limit evaluation from "Channel A" after digital filters processing
- MAT.FN** Limit evaluation from "Mathematic functions"
- MIN** Limit evaluation from "Min.value"
- MAX** Limit evaluation from "Max.value"

## 6.3.2b Selection of type of limit

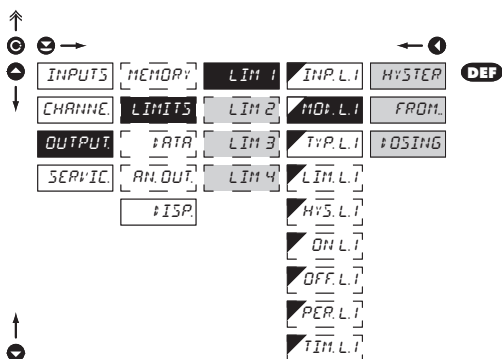


Setting is identical for LIM 2, LIM 3 and LIM 4

**HD: L.1** Selection the type of limit

- HYS.TER** Limit is in mode "Limit, hysteresis, delay"
  - for this mode the parameters of "LIM. L." are set, at which the limit will shall react, "HYS. L." the hysteresis range around the limit (LIM  $\pm 1/2$  HYS) and time "TIM. L." determining the delay of relay switch-on
- FROM** Frame limit
  - for this mode the parameters are set for interval "ON. L." the relay switch-on and "OFF. L." the relay switch-off
- #OSING** Dose limit (periodic)
  - for this mode the parameters are set for "PER. L." determining the limit value as well as its multiples at which the output is active and "TIM. L." indicating the time during which is the output active



#### 6.3.2c Selection of type of output

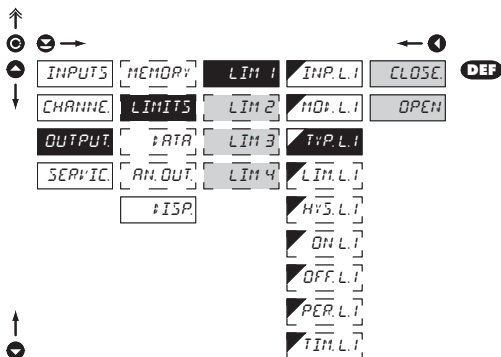


#### Typ.L.I Selection of type of output

CLOSE Output switches on when condition is met

OPEN Output switches off when condition is met

Setting is identical for LIM 2, LIM 3 and LIM 4

#### 6.3.2d Setting values for limits evaluation

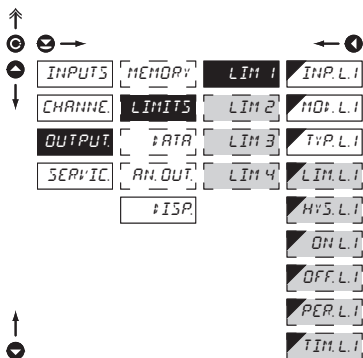

#### LIM.L.I Setting limit for switch-on

- for type "HYSTER"

#### HYS.L.I Setting hysteresis

- for type "HYSTER"  
- indicates the range around the limit (in both directions, LIM.  $\pm 1/2$  HYS.)

#### ON.L.I Setting the outset of the interval of limit switch-on

- for type "FROM"

#### OFF.L.I Setting the end of the interval of limit switch-on

- for type "FROM"

#### PER.L.I Setting the period of limit switch-on

- for type "DOSE"

#### TIM.L.I Setting the time switch-on of the limit

- for type "HYSTER" and "DOSE"

Setting is identical for LIM 2, LIM 3 and LIM 4

## 6.3.3a Selection of data output baud rate

↑

⊙ ↻ →

⬆

INPUTS MEMORY **BAUD** 600

CHANNEL LIMITS A:~R 1200

OUTPUT A:~R A:~MOD 2400

SERVIC AN. OUT PROT 4800

ISP 9600 **DEF**

19200

38400

57600

115200

230400

↑

⊙

**BAUD** Selection of data output baud rate

600	Rate - 600 Baud
1200	Rate - 1 200 Baud
2400	Rate - 2 400 Baud
4800	Rate - 4 800 Baud
9600	Rate - 9 600 Baud
19200	Rate - 19 200 Baud
38400	Rate - 38 400 Baud
57600	Rate - 57 600 Baud
115200	Rate - 115 200 Baud
230400	Rate - 230 400 Baud

## 6.3.3b Setting instrument address

↑

⊙ ↻ →

⬆

INPUTS MEMORY **BAUD**

CHANNEL LIMITS **A:~R**

OUTPUT A:~R A:~MOD

SERVIC AN. OUT PROT

ISP

↑

⊙


**A:~R** Setting instrument address

- setting in range 0...31
- **DEF** = 00

**A:~R** Setting instrument address - MODBUS

- setting in range 1...247
- **DEF** = 1

#### 6.3.3c Selection of data output protocol

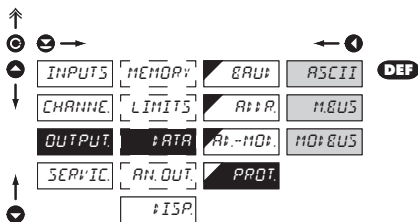

#### **PROT** Selection of the type of analog output


**ASCII** Data protocol ASCII

**M.EUS** Data protocol DIN MessBus

**MD:BUS** Data protocol MODBUS-RTU

- option is available only for RS 485

#### 6.3.4a Selection of input for analog output

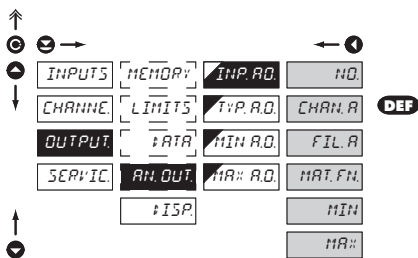

#### **INP.AO** Selection evaluation analog output

- selection of value from which the analog output will be evaluated

**NO** AO evaluation is off

**CHAN.A** AO evaluation from "Channel A"


**FIL.A** AO evaluation from "Channel A" after digital filters processing

**MAT.FN** AO evaluation from "Math.functions"

**MIN** AO evaluation from "Min.value"

**MA:..** AO evaluation from "Max.value"

### 6.3.4b Selection of the type of analog output

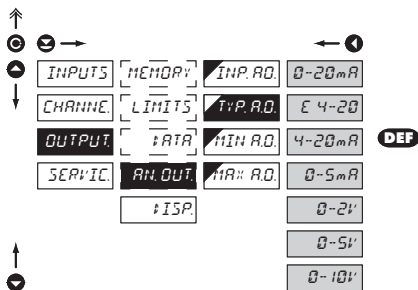

#### TYP. A.D. Selection of the type of analog output

0-20 mA Type - 0...20 mA

ε 4-20 Type - 4...20 mA

- with indication of error statement (< 3,0 mA)

4-20 mA Type - 4...20 mA


0-5 mA Type - 0...5 mA

0-2V Type - 0...2 V

0-5V Type - 0...5 V

0-10V Type - 0...10 V

### 6.3.4c Setting the analog output range

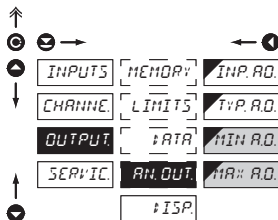

#### AN. OUT. Setting the analog output range

- analog output is isolated and its value corresponds with displayed data. It is fully programmable, i.e. it allows to assign the AO limit points to two arbitrary points of the entire measuring range

MIN. A.D. Assigning the display value to the beginning of the AO range

- range of the setting is -99999...99999


- DEF = 0

MA: A.D. Assigning the display value to the end of the AO range

- range of the setting is -99999...99999

- DEF = 100

#### 6.3.5a Selection of input for display projection

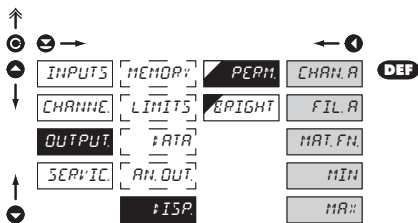


#### PERM. Selection display projection

- selection of value which will be shown on the instrument display

- CHANN.A** Projection of values from "Channel A"
- FIL.A** Projection of values from "Channel A" after digital filters processing
- MAT.FN** Projection of values from "Math.functions"
- MIN** Projection of values from "Min.value"
- MAX** Projection of values from "Max.value"

#### 6.3.5b Selection of display brightness

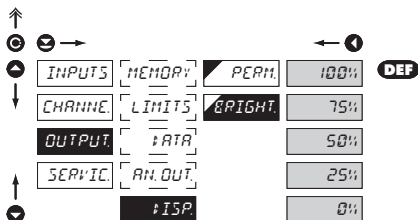


#### BRIGHT Selection of display brightness

- by selecting display brightness we may appropriately react to light conditions in place of instrument location

- 0%** Display is off
- 25%** Display brightness - 25%
- 50%** Display brightness - 50%
- 75%** Display brightness - 75%
- 100%** Display brightness - 100%


## 6.4 Setting "PROFI" - SERVIS

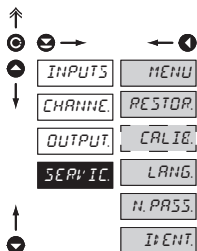

The instrument service functions are set in this menu

<b>MENU</b>	Selection of menu type LIGHT/PROFI
<b>RESTOR.</b>	Restore instrument manufacture setting and calibration
<b>CALIB.</b>	Input range calibration for „DU“ version
<b>LANG.</b>	Language version of instrument menu
<b>H.PASS.</b>	Setting new access password
<b>IDENT.</b>	Instrument identification

### 6.4.1 Selection of type of programming menu

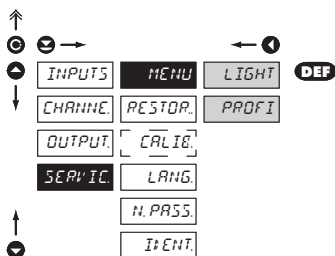

**MENU** Selection of menu type - LIGHT/PROFI

- enables setting the menu complexity according to user needs and skills

**LIGHT** Active LIGHT menu

- simple programming menu, contains only items necessary for configuration and instrument setting  
 - linear menu > items one after another



**PROFI** Active PROF I menu

- complete programming menu for expert users  
 - tree menu



Change of setting is valid upon next access into menu

#### 6.4.2 Restoration of manufacture setting

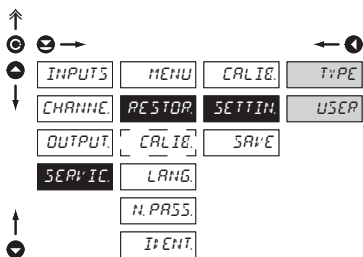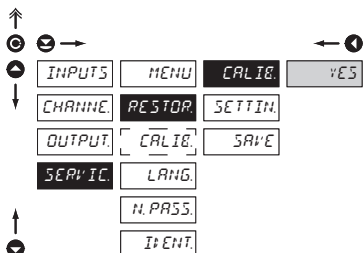

#### RESTOR. Restoration of manufacture setting

- in the event of error setting or calibration, manufacture setting may be restored.

**CALIB.** Restoration of manufacture calibration of the instrument

- prior executing the changes you will be asked to confirm your selection „YES“

#### NRSTAB. Restoration of instrument manufacture setting

**TYPE** Restoration of instrument manufacture setting

- generating the manufacture setting for currently selected type of instrument (items marked DEF)

**USER** Restoration of instrument user setting

- generating the instrument user setting, i.e. setting stored under SERVIC./RESTOR./SAVE

**SAVE** Save instrument user setting

- storing the user setting allows the operator to restore it in future if needed


Jobs performed	Restore	
	Calibration	Setting
cancels USER menu rights	✓	✓
deletes table of items order in USER - LIGHT menu	✓	✓
adds items from manufacture to LIGHT menu	✓	✓
deletes data stored in FLASH	✓	✓
cancels or linearization tables	✓	✓
clears tare	✓	✓
clears conduct resistances	✓	✓
restore manufacture calibration	✓	x
restore manufacture setting	x	✓



After restoration the instrument switches off for couple seconds


## 6.4.3 Calibration - Input range

DU

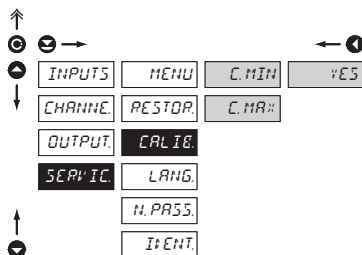**CALIB.** Input range calibration


- when "C. MIN" is displayed, move the potentiometer traveller to the required minimum position and confirm by „Enter“, calibration is confirmed by "YES"
- when "C. MAX" is displayed, move the potentiometer traveller to the required maximum position and confirm by „Enter“, calibration is confirmed by „YES"

## 6.4.4 Selection of instrument menu language version

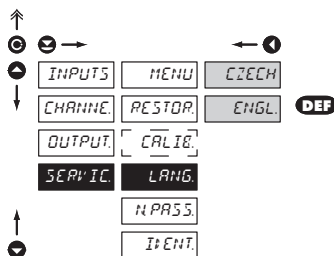**LANG.** Selection of instrument menu language version

- CZECH** Instrument menu is in Czech
- ENGL.** Instrument menu is in English


## 6.4.5 Setting new access password

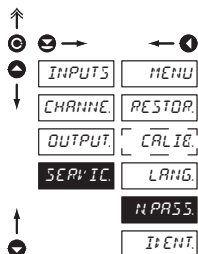**N.PASS.** Setting new password for access to LIGHT and PROFi menu

- this selection enables changing number code that blocks the access into LIGHT and PROFi Menu.
- range of the number code is 0...9999
- universal password in the event of loss is „8177"




### 6.4.6 Instrument identification

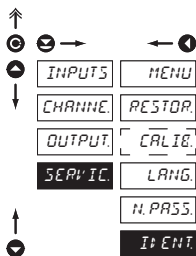

#### **I: ENT.** Projection of instrument SW version

- display shows type identification of the instrument, SW number, SW version and current input setting (Mode)
- if the SW version reads a letter on first position, it is a customer SW

## 7.0 Setting items into "USER" menu

- **USER** menu is designed for users who need to change only several items of the setting without the option to change the primary instrument setting (e.g. repeated change of limit setting)
- there are no items from manufacture permitted in **USER** menu
- on items indicated by inverse triangle  L i
- setting may be performed in **LIGHT** or **PROFI** menu, with the **USER** menu then overtaking the given menu structure



- For user operation
- Menu items are set by the user (Profi/Light) as per request
- Access is not password protected

## Setting

flashing legend - current setting is displayed



**NO**

item will not be displayed in USER menu

**YES**

item will be displayed in USER menu with editing option

**SHOW**

item will be solely displayed in USER menu

### Setting sequence of items in "USER" menu

In compiling USER menu from active LIGHT menu the items (max. 10) may be assigned a sequence, in which they will be projected in the menu



#### Example:

Into USER menu were selected these items


(keys + ) > CL. TAR., LIM 1, LIM 2, LIM 3, for which we have preset this sequence (keys + )>

CL. TAR.	5
LIM 1	0 (sequence not determined)
LIM 2	2
LIM 3	1

Upon entering USER menu

(key ) items will be projected in the following sequence: LIM 3 > LIM 2 > CL.TAR. > LIM 1

Instrument with input for temperature measurement with thermocouple allows to set two types of measurement of cold junction.

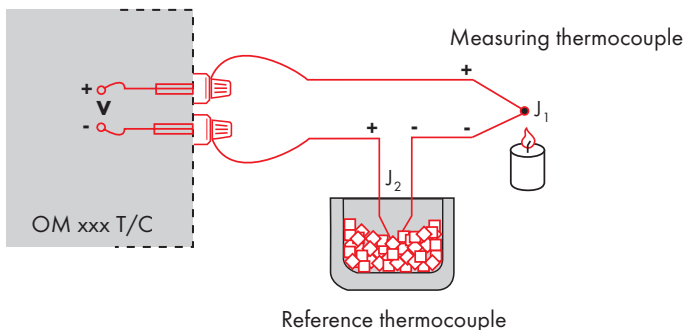

#### WITH REFERENCE THERMOCOUPLE

- a reference thermocouple may be located in the same place as the measuring instrument or in place with stable temperature/compensation box
- when measuring with reference thermocouple set *CONNECT* in the instrument menu to *INT2TC* or *E::T2TC*
- when using a thermostat (a compensation box or environment with constant temperature) set in the instrument menu *CJCTEM* its temperature (applies for setting *CONNECT* to *E::T2TC*)
- if the reference thermocouple is located in the same environment as the measuring instrument then set in the instrument menu *CONNECT* to *INT2TC*. Based on this selection the measurement of the ambient temperature is performed by a sensor located in the instrument terminal board.

#### WITHOUT REFERENCE THERMOCOUPLE

- inaccuracy originating from the creation of dissimilar thermocouples on the transition point terminal/conductor of the thermocouple is not compensated for in the instrument
- when measuring without reference thermocouple set *CONNECT* in the instrument menu to *INT1TC* or *E::T1TC*
- when measuring temperature without reference thermocouple the error in measured data may be as much as 10°C (applies for setting *CONNECT* to *E::T1TC*)



The instruments communicate via serial line RS232 or RS485. For communication they use the ASCII protocol. Communication runs in the following format:

ASCII: 8 bit, no parity, one stop bit  
 DIN MessBus: 7 bit, even parity, one stop bit

The transfer rate is adjustable in the instrument menu. The instrument address is set in the instrument menu in the range of 0 ÷ 31. The manufacture setting always presets the ASCII protocol, rate of 9600 Baud, address 00. The type of line used - RS232 / RS485 - is determined by an output board automatically identified by the instrument.

The commands are described in specifications you can find at [na www.orbit.merret.cz/rs](http://na.www.orbit.merret.cz/rs) or in the OM Link program.

### DETAILED DESCRIPTION OF COMMUNICATION VIA SERIAL LINE

Event	Type	Protocol	Transmitted data																	
Data solicitation (PC)	232	ASCII	#	A	A	<CR>														
		MessBus	No - data is transmitted permanently																	
	485	ASCII	#	A	A	<CR>														
		MessBus	<SADR>	<ENQ>																
Data transmission (instrument)	232	ASCII	>	D	(D)	(D)	(D)	(D)	(D)	(D)	(D)	(D)	(D)	(D)	(D)	(D)	(D)	<CR>		
		MessBus	<SADR>	D	(D)	(D)	(D)	(D)	(D)	(D)	(D)	(D)	(D)	(D)	(D)	(D)	(D)	(D)	<ETX>	<BCC>
	485	ASCII	>	D	(D)	(D)	(D)	(D)	(D)	(D)	(D)	(D)	(D)	(D)	(D)	(D)	(D)	<CR>		
		MessBus	<SADR>	D	(D)	(D)	(D)	(D)	(D)	(D)	(D)	(D)	(D)	(D)	(D)	(D)	(D)	<ETX>	<BCC>	
Confirmation of data acceptance (PC) - OK	485	MessBus	<DLE>	1																
Confirmation of data acceptance (PC) - Bad			<NAK>																	
Sending address (PC) prior command			<EADR>	<ENQ>																
Confirmation of address (instrument)			<SADR>	<ENQ>																
Command transmission (PC)	232	ASCII	#	A	A	N	P	(D)	(D)	(D)	(D)	(D)	(D)	(D)	(D)	(D)	(D)	<CR>		
		MessBus	<STX>	\$	N	P	(D)	(D)	(D)	(D)	(D)	(D)	(D)	(D)	(D)	(D)	<ETX>	<BCC>		
	485	ASCII	#	A	A	N	P	(D)	(D)	(D)	(D)	(D)	(D)	(D)	(D)	(D)	(D)	<CR>		
		MessBus	<SADR>	\$	N	P	(D)	(D)	(D)	(D)	(D)	(D)	(D)	(D)	(D)	<ETX>	<BCC>			
Command confirmation (instrument)	232	ASCII	OK	!	A	A	<CR>													
			Bad	?	A	A	<CR>													
		MessBus	No - data is transmitted permanently																	
	485	ASCII	OK	!	A	A	<CR>													
			Bad	?	A	A	<CR>													
		MessBus	OK	<DLE>	1															
			Bad	<NAK>																
Command confirmation (inst.) - OK	485	MessBus	!	A	A	<CR>														
?			A	A	<CR>															
Instrument identification			#	A	A	1Y	<CR>													
HW identification			#	A	A	1Z	<CR>													
One-time transmission			#	A	A	7X	<CR>													
Repeated transmission			#	A	A	8X	<CR>													

## LEGEND

#	35	23 <sub>H</sub>	Command beginning
A	A	0...31	Two characters of instrument address (sent in ASCII - tens and units, e.g. "01", "99" universal
<CR>	13	0D <sub>H</sub>	Carriage return
<SP>	32	20 <sub>H</sub>	Space
N, P			Number and command - command code
D			Data - usually characters "0"... "9", "-", ".", ";"; (D) - dp. and (-) may prolong data
R	30 <sub>H</sub> ...3F <sub>H</sub>		Relay and tare status
!	33	21 <sub>H</sub>	Positive confirmation of command (ok)
?	63	3F <sub>H</sub>	Negative confirmation of command (point)
>	62	3E <sub>H</sub>	Beginning of transmitted data
<STX>	2	02 <sub>H</sub>	Beginning of text
<ETX>	3	03 <sub>H</sub>	End of text
<SADR>	address +60 <sub>H</sub>		Prompt to send from address
<EADR>	address +40 <sub>H</sub>		Prompt to accept command at address
<ENQ>	5	05 <sub>H</sub>	Terminate address
<DLE>1	16 49	10 <sub>H</sub> 31 <sub>H</sub>	Confirm correct statement
<NAK>	21	15 <sub>H</sub>	Confirm error statement
<BCC>			Check sum -XOR

## RELAY, TARE

Sign	Relay 1	Relay 2	Tare	Change relay 3/4
P	0	0	0	0
Q	1	0	0	0
R	0	1	0	0
S	1	1	0	0
T	0	0	1	0
U	1	0	1	0
V	0	1	1	0
W	1	1	1	0
p	0	0	0	1
q	1	0	0	1
r	0	1	0	1
s	1	1	0	1
t	0	0	1	1
u	1	0	1	1
v	0	1	1	1
w	1	1	1	1

Relay status is generated by command #AA6X <CR>.

The instrument immediately returns the value in the format >HH <CR>, where HH is value in HEX format and range 00<sub>H</sub>...FF<sub>H</sub>. The lowest bit stands for „Relay 1“, the highest for „Relay 8“

ERROR	CAUSE	ELIMINATION
<i>E. I. U<sub>n</sub></i>	Number is too small (large negative) to be displayed	change DP setting, channel constant setting
<i>E. I. D<sub>r</sub></i>	Number is too large to be displayed	change DP setting, channel constant setting
<i>E. T. U<sub>n</sub></i>	Number is outside the table range	increase table values, change input setting (channel constant setting)
<i>E. T. D<sub>r</sub></i>	Number is outside the table range	increase table values, change input setting (channel constant setting)
<i>E. I. U<sub>n</sub></i>	Input quantity is smaller than permitted input quantity range	change input signal value or input (range) setting
<i>E. I. D<sub>r</sub></i>	Input quantity is larger than permitted input quantity range	change input signal value or input (range) setting
<i>E. HW</i>	A part of the instrument does not work properly	send the instrument for repair
<i>E. EE</i>	Data in EEPROM corrupted	perform restoration of manufacture setting, upon repeated error statement send instrument for repair
<i>E. I. ATA</i>	Data in EEPROM outside the range	perform restoration of manufacture setting, upon repeated error statement send instrument for repair
<i>E. CLR</i>	Memory was empty (presetting carried out)	upon repeated error statement send instrument for repair, possible failure in calibration



The instrument allows to add two descriptive characters to the classic numeric formats (at the expense of the number of displayed places). The setting is performed by means of a shifted ASCII code. Upon modification the first two places display the entered characters and the last two places the code of the relevant symbol from 0 to 95. Numeric value of given character equals the sum of the numbers on both axes of the table.

Description is cancelled by entering characters with code 00

	0	1	2	3	4	5	6	7		0	1	2	3	4	5	6	7	
0		7	"	#	\$	%	&	'		0	!	"	#	\$	%	&	'	
8	:	)	*	+	,	-	.	/		8	(	)	*	+	,	-	.	/
16	0	1	2	3	4	5	6	7		16	0	1	2	3	4	5	6	7
24	8	9	:	"	'	-	.	7		24	8	9	:	;	<	=	>	?
32	P	R	E	C	T	E	F	G		32	@	A	B	C	D	E	F	G
40	H	I	J	K	L	M	N	O		40	H	I	J	K	L	M	N	O
48	P	Q	R	S	T	U	V	W		48	P	Q	R	S	T	U	V	W
56	X	Y	Z	[	\	]	^	_		56	X	Y	Z	[	\	]	^	_
64	`	a	b	c	d	e	f	g		64	`	a	b	c	d	e	f	g
72	h	i	j	k	l	m	n	o		72	h	i	j	k	l	m	n	o
80	p	q	r	s	t	u	v	w		80	p	q	r	s	t	u	v	w
88	X	Y	Z	{		}	~			88	x	y	z	{		}	~	

## INPUT

range is adjustable

±60 mV	>100 MOhm
±150 mV	>100 MOhm
±300 mV	>100 MOhm
±1200 mV	>100 MOhm

DC

Input U  
Input U  
Input U  
Input UVoltage of lin. pot. 2,5 VDC/6 mA  
min. potentiometer resistance is 500 Ohm

DU

## PROJECTION

Display: 999999, intensive red or green  
14-segment LED, digit height 14 mm  
Projection: ±99999...9999999  
Decimal point: adjustable - in menu  
Brightness: adjustable - in menu

range is adjustable

±0,1 A	< 300 mV
±0,25 A	< 300 mV
±0,5 A	< 300 mV
±1 A	< 30 mV
±5 A	< 150 mV
±100 V	20 MOhm
±250 V	20 MOhm
±500 V	20 MOhm

DC - option "A"

Input I  
Input I  
Input I  
Input I  
Input I  
Input U  
Input U  
Input U

## INSTRUMENT ACCURACY

TC: 100 ppm/°C  
Accuracy: ±0,1 % of range + 1 digit  
±0,15 % of range + 1 digit  
±0,3 % of range + 1 digit  
**Above accuracies apply for projection 9999**RTD, T/C  
PWR

range is adjustable

0/4...20 mA	< 400 mV
±2 V	1 MOhm
±5 V	1 MOhm
±10 V	1 MOhm
±40 V	1 MOhm

PM

Input I  
Input U  
Input U  
Input U  
Input U

Resolution: 0,01°/0,1°/1° RTD

Rate: 0,1...400 measurements/s\*\*

Overload capacity: 10x (t < 100 ms) not for 400 V and 5 A,  
2x (long-term)Linearisation: by linear interpolation in 50 points  
- solely via OM LinkDigital filters: Averaging, Floating overage, Exponential filter, Rounding  
Comp. of conduct: max. 40 Ohm/100 Ohm RTD  
Comp. of cold junct.: adjustable T/CFunctions: 0°...99°C or automatic  
Tare - display resetting  
Hold - stop measuring (at contact)  
Lock - control key locking  
MM - min/max value  
Mathematic functionsOM Link: company communication interface for setting, operation  
and update of instrument SWWatch-dog: reset after 400 ms  
Calibration: at 25°C and 40 % of r.h.

range is adjustable

0...100 Ohm
0...1 kOhm
0...10 kOhm
0...100 kOhm
Autorange

OHM

Connection:

2, 3 or 4 wire

RTD

Pt xxxx	-200°...850°C
Pt xxxx/3910 ppm	-200°...1 100°C
Ni xxxx	-50°...250°C
Cu/4260 ppm	-50°...200°C
Cu/4280 ppm	-200°...200°C

Type Pt: EU > 100/500/1 000 Ohm, with 3 850 ppm/°C  
US > 100 Ohm, with 3 920 ppm/°C  
RU > 50/100 Ohm, with 3 910 ppm/°C

Type Ni: Ni 1 000/ Ni 10 000 with 5 000/6 180 ppm/°C

Type Cu: Cu 50/Cu 100 with 4 260/4 280 ppm/°C

Connection: 2, 3 or 4 wire

range is adjustable in configuration menu

Type:	J (Fe-CuNi)	-200°...900°C
	K (NiCr-Ni)	-200°...1 300°C
	T (Cu-CuNi)	-200°...400°C
	E (NiCr-CuNi)	-200°...690°C
	B (PtRh30-PtRh6)	300°...1 820°C
	S (PtRh10-Pt)	-50°...1 760°C
	R (Pt13Rh-Pt)	-50°...1 740°C
	N (Omegalloy)	-200°...1 300°C

T/C

## COMPARATOR

Type: digital, adjustable in menu  
Mode: Hysteresis, From, Dosing  
Limits: -99999...999999  
Hysteresis: 0...999999  
Delay: 0...99,9 s  
Outputs: 2x relays with switch-on contact (Form A)  
(230 VAC/30 VDC, 3 A)\*  
2x relays with switch-off contact (Form C)  
(230 VAC/50 VDC, 3 A)\*  
2x SSR (250 VAC/ 1 A)\*  
2x/4x open collector (30 VDC/100 mA)  
2x bistabil relays (250 VAC/250 VDC, 3 A/0,3 A)\*  
Relay: 1/8 HP 277 VAC, 1/10 HP 125 V, Pilot Duty D300

\* values apply for resistance load

**DATA OUTPUTS**

Protocols: ASCII, DIN MessBus, MODBUS, PROBUS  
 Data format: 8 bit + no parity + 1 stop bit (ASCII)  
 7 bit + even parity + 1 stop bit (MessBus)  
 Rate: 600...230 400 Baud  
 RS 232: isolated, two-way communication  
 RS 485: isolated, two-way communication,  
 addressing (max. 31 instruments)  
 PROFIBUS Data protocol SIEMENS

**ANALOGO OUTPUTS**

Type: isolated, programmable with resolution of max.10 000 points, analog output corresponds with displayed data, type and range are adjustable  
 Non-linearity: 0,2% of range  
 TC: 100 ppm/°C  
 Rate: response to change of value < 150 ms  
 Voltage: 0...2 V/5 V/10 V  
 Current: 0...5/20 mA/4...20 mA  
 - compensation of conduct to 500 Ohm/12 V or 1 000 Ohm/24 V

**MEASURED DATA RECORD**

Type RTC: time-controlled logging of measured data into instrument memory, allows to log up to 250 000 values  
 Type FAST: fast data logging into instrument memory, allows to log up to 8 000 values at a rate of 40 records/s  
 Transmission: via data output RS 232/485 or via OM Link

**EXCITABLE**

Adjustable: 5...24 VDC/max. 1,2 W, isolated

**POWER SUPPLY**

Options: 10...30 V AC/DC, 10 VA, isolated,  
 - fuse inside (T 4000 mA)  
 80...250 V AC/DC, 10 VA, isolated  
 - fuse inside (T 630 mA)

**MECHANICAL PROPERTIES**

Material: Noryl GFN2 SE1, incombustible UL 94 V-I  
 Dimensions: 96 x 48 x 120 mm  
 Panel cut-out: 90,5 x 45 mm

**OPERATING CONDITIONS**

Connection: connector terminal board, conductor cross-section <1,5 mm<sup>2</sup> / <2,5 mm<sup>2</sup>  
 Stabilisation period: within 15 minutes after switch-on  
 Working temp.: 0°...60°C  
 Storage temp.: -10°...85°C  
 Cover: IP65 (front panel only)  
 Construction: safety class I  
 Overvoltage category: EN 61010-1, A2  
 Insulation resistance: for pollution degree II, measurement category III  
 instrum.power supply > 670 V (PI), 300 V (DI)  
 Input/output > 300 V (PI), 150 (DI)  
 EN 61000-3-2+A12; EN 61000-4-2, 3, 4, 5, 8, 11;  
 EN 55022, A1, A2


\*\*Table of rate of measurement in relation to number of inputs

Channels/Rate	40	20	10	5	2	1	0,5	0,2	0,1
No. of channels: 1 (Type: DC, PM, DU)	40,00	20,00	10,00	5,00	2,00	1,00	0,50	0,20	0,10
No. of channels: 2	5,00	2,50	1,25	1,00	0,62	0,38	0,22	0,09	0,05
No. of channels: 3	3,33	1,66	0,83	0,66	0,42	0,26	0,14	0,06	0,03
No. of channels: 4	2,50	1,25	0,62	0,50	0,31	0,19	0,11	0,05	0,02
No. of channels: 1 (Type: OHM, RTD, T/C)	5,00	2,50	1,25	1,00	0,62	0,38	0,22	0,09	0,05
No. of channels: 2	3,33	1,066	0,83	0,66	0,42	0,26	0,14	0,06	0,03
No. of channels: 3	2,50	1,25	0,62	0,50	0,31	0,19	0,11	0,05	0,02
No. of channels: 4	2,00	1,00	0,50	0,40	0,25	0,15	0,08	0,04	0,02


Front view



Panel cut

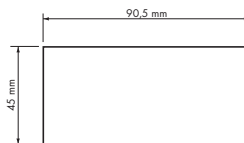



Side view

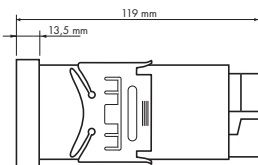

Panel thickness: 0,5...20 mm

### Instrument installation

1. insert the instrument into the panel cut-out
2. fit both travellers on the box
3. press the travellers close to the panel

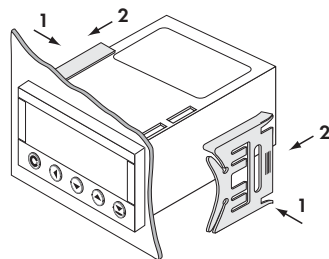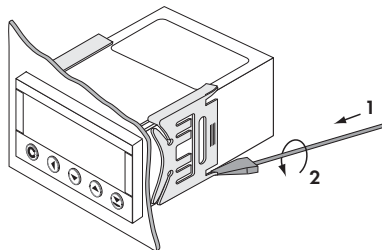

### Instrument disassembly

1. slide a screw driver under the traveller wing
2. turn the screw driver and remove the traveller
3. take the instrument out of the panel

Product **OM 402UNI**      **A**   **B**  
 Type .....  
 Manufacturing No. ....  
 Date of sale .....

# GUARANTEE

A guarantee period of 60 months from the date of sale to the user applies to this instrument.  
 Defects occurring during this period due to manufacture error or due to material faults shall be eliminated free of charge.

For quality, function and construction of the instrument the guarantee shall apply provided that the instrument was connected and used in compliance with the instructions for use.

The guarantee shall not apply to defects caused by:

- mechanic damage
- transportation
- intervention of unqualified person incl. the user
- unavoidable event
- other unprofessional interventions

The manufacturer performs guarantee and post.guarantee repairs unless provided for otherwise.

Y E A R S

Stamp, signature





# DECLARATION OF CONFORMITY

**Company:** **ORBIT MERRET, spol. s r.o.**  
Klánska 81/141, 142 00 Prague 4, Czech Republic, IDNo: 00551309

**Manufactured:** **ORBIT MERRET, spol. s r.o.**  
Vodňanská 675/30, 198 00 Prague 9, Czech Republic

declares at its full responsibility that the product presented hereunder meets all technical requirements, is safe for use when utilised under the terms and conditions determined by ORBIT MERRET, spol.s r.o. and that our company has taken all measures to ensure conformity of all products of the type listed hereunder, which are being brought out to the market, with technical documentation and requirements of the appurtenant statutory orders.

**Product:** 4-digit programmable panel instrument

**Type:** **OM 402**

**Version:** UNI, PWR

Conformity is assessed pursuant to the following standards:

El. safety:	EN 61010-1
EMC:	EN 50131-1, chapter 14 and chapter 15
	EN 50130-4, chapter 7
	EN 50130-4, chapter 8
	EN 50130-4, chapter 9
	EN 50130-4, chapter 10
	EN 50130-4, chapter 11
	EN 50130-4, chapter 12
	EN 50130-4, chapter 13
	EN 50130-5, chapter 20
	prEN 50131-2-1, par. 9.3.1
	EN 61000-4-8
	EN 61000-4-9
	EN 61000-3-2 ed. 2:2001
	EN 61000-3-3: 1997, Cor. 1:1998, Z1:2002
	EN 55022, chapter 5 and chapter 6

and Ordinance on:

El. safety:	No. 168/1997 Coll.
EMC:	No. 169/1997 Coll.

The evidence are the protocols of authorized and accredited organizations:

VTÚE Praha, experimental laboratory No. 1158, accredited by ČIA  
VTÚPV Vyškov, experimental laboratory No. 1103, accredited by ČIA

Place and date of issue: Prague, 18. March 2006

Miroslav Hackl v.r.  
Company representative

Mode of asses. of conformity §12, par. 4 b, d Act No. 22/1997 Coll.