




OMD 201 RS

**4/6 DIGIT PROGRAMMABLE
LAGRE DISPLAY**

DATA DISPLAY
ASCII/MESSBUS/PROFIBUS

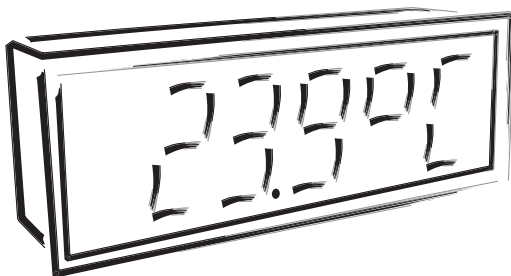

SAFETY INSTRUCTIONS

Please, read the enclosed safety instructions carefully and observe them!
These instruments should be safeguarded by isolated or common fuses (breakers)!
For safety information the EN 61 010-1 + A2 standard must be observed.
This instrument is not explosion-safe!

TECHNICAL DATA

Measuring instruments of the OMD 201 series conform to the European regulation 89/336/EWG and the Ordinance 168/1997 Coll.

The instruments are up to the following European standards:
EN 55 022, class B
EN 61000-4-2, -4, -5, -6, -8, -9, -10, -11

The instruments are applicable for unlimited use in agricultural and industrial areas.

CONNECTION

Supply of energy from the main line has to be isolated from the measuring leads.



ORBIT MERRET, spol. s r.o.

Vodnanská 675/30
198 00 Prague 9
Czech Republic

Tel: +420 - 281 040 200
Fax: +420 - 281 040 299
e-mail: orbit@merret.cz
www.orbit.merret.cz



1.	Contents	3
2.	Instrument description	4
3.	Instrument connection	6
4.	Instrument setting	8
	Symbols used in the instructions	10
	Setting the DP and the (-) sign	10
	Control keys function	11
	Setting/permitting items into "USER" menu	11
5.	Setting "LIGHT" menu	12
5.0	Description "LIGHT" menu	12
	Setting data input	14
	Setting Limits	32
	Setting analog output	34
	Setting display colors	36
	Nastavení adresy dálkového IR ovladače	38
	Selection of programming menu „LIGHT"/„PROFI"	38
	Restoration of manufacture setting	39
	Selection of instrument menu language version	39
	Setting new access password	40
	Instrument identification	40
6.	Setting "PROFI" menu	42
6.0	Description of "PROFI" menu	42
6.1	"PROFI" menu - INPUT	
6.1.1	Resetting internal values	46
6.1.2	Setting data input	47
6.1.3	External input function selection	55
6.1.4	Optional accessory functions of the keys	56
6.2	"PROFI" menu - CHANNEL	
6.2.1	Setting measuring parameters (projection, filters, decimal point, description)	60
6.2.2	Setting mathematic functions	63
6.2.3	Selection of evaluation of min/max. value	65
6.3	"PROFI" menu - OUTPUT	
6.3.1	Setting Limits	66
6.3.2	Setting analog output	70
6.3.3	Selection of display projection	71
6.4	"PROFI" menu - SERVICE	
6.4.1	Setting the address of IR remote control	74
6.4.2	Selection of programming menu „LIGHT"/„PROFI"	75
6.4.3	Restoration manufacture setting	75
6.4.4	Selection of instrument menu language version	76
6.4.5	Setting new access password	76
6.4.6	Instrument identification	76
7.	Setting items into "USER" menu	78
8.	Data protocol	80
9.	Error statements	82
10.	Table of symbols	83
	ASCII table	83
11.	Technical data	84
12.	Instrument dimensions and installation	86
13.	Certificate of guarantee	87
	Declaration of conformity	88

2.1 Description

The OMD 201 model series are 4/6 digit large panel programmable displays for the projection of data from data lines RS 232, RS 485 in protocols ASCII/MESSBUS/MODBUS/PROFIBUS.

The instrument is based on an 8-bit microcontroller, which secures high accuracy, stability and easy operation of the instrument.

PROGRAMMABLE PROJECTION

Setting:	Selection of integer/float input range
Protocol:	ASCII/MESSBUS MODBUS - RTU PROFIBUS DP*
Projection:	-9999...9999 (-99999...999999)

DIGITAL FILTERS

Exponen.average:	from 2...100 measurements
Rounding:	setting the projection step for display

MATHEMATIC FUCTIONS

Min/max. value:	registration of min./max. value reached during measurement
Tare:	designed to reset display upon non-zero input signal
Peak value:	the display shows only max. or min. value
Mat. operations:	polynome, 1/x, logarithm, exponential, power, root, sin x

EXTERNAL CONTROL

Lock:	control keys blocking
Hold:	display/instrument blocking
Tare:	tare activation/resetting tare to zero
Resetting MM:	resetting min/max value
Memory:	data storage into instrument memory

2.2 Operation

The instrument is set and controlled by IR Remote control. All programmable settings of the instrument are performed in three adjusting modes:

- LIGHT** **Simple programming menu**
- contains solely items necessary for instrument setting and is protected by optional number code
- PROFI** **Complete programming menu**
- contains complete instrument menu and is protected by optional number code
- USER** **User programming menu**
- may contain arbitrary items selected from the programming menu (LIGHT/PROFI), which determine the right (see or change)
- access without password

All programmable parameters are stored in the EEPROM memory (they hold even after the instrument is switched off).



Complete instrument operation and setting may be performed via OM Link communication interface, which is a standard equipment of all instruments.

The operation program is freely accessible (www.orbit.merret.cz) and the only requirement is the purchase of OML cable to connect the instrument to PC. It is manufactured in version RS 232 and USB and is compatible with all ORBIT MERRET instruments. Another option for connection is with the aid of data output RS 232 or RS 485 (without the need of the OML cable).

The program OM LINK in „Basic“ version will enable you to connect one instrument with the option of visualization and archiving in PC. The OM Link „Standard“ version has no limitation of the number of instruments connected.

2.3 Options

Excitation is suitable for supplying power to sensors and transmitters. It has a galvanic separation.

Comparators are assigned to monitor one, two, three or four limit values with relay output. The user may select limits regime: LIMIT/DOSING/FROM-TO. The limits have adjustable hysteresis within the full range of the display as well as selectable delay of the switch-on in the range of 0...99,9 s. Reaching the preset limits is signalled by LED and simultaneously by the switch-on of the relevant relay.

Analog outputs will find their place in applications where further evaluating or processing of measured data is required in external devices. We offer universal analog output with the option of selection of the type of output - voltage/current. The value of analog output corresponds with the displayed data and its type and range are selectable in Menu.


Measured data record is an internal time control of data collection. It is suitable where it is necessary to register measured values. Two modes may be used. FAST is designed for fast storage (40 records/s) of all measured values up to 8 000 records. Second mode is RTC, where data record is governed by Real Time with data storage in a selected time segment and cycle. Up to 250 000 values may be stored in the instrument memory. Data transmission into PC via serial interface RS232/485 and OM Link.

The instrument supply leads should not be in proximity of the incoming low-potential signals.


Contactors, motors with larger input power should not be in proximity of the instrument.

The leads into the instrument input (measured quantity) should be in sufficient distance from all power leads and appliances. Provided this cannot be secured it is necessary to use shielded leads with connection to ground (bracket E).

The instruments are tested in compliance with standards for use in industrial area, yet we recommend to abide by the above mentioned principles.

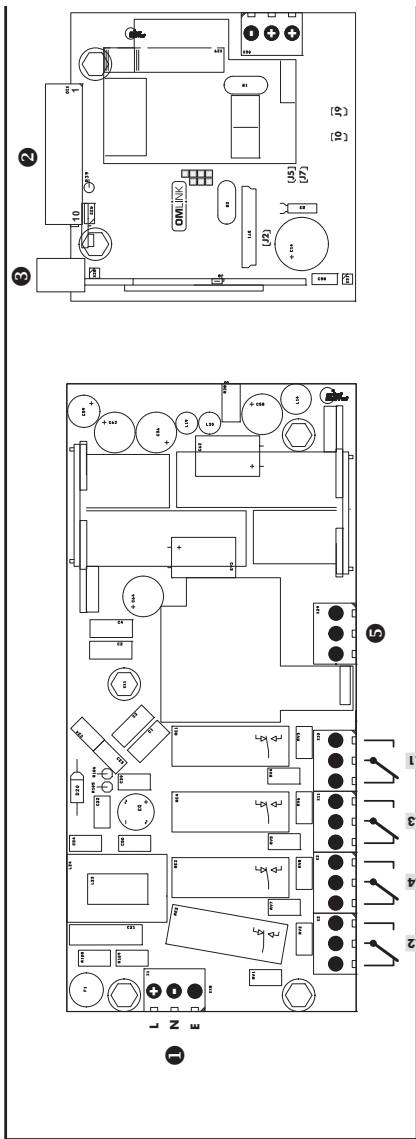

3 Input - vertical



2 Input - horizontal



1 Power supply



4 Analog output



5 Data output



6 Relays

PROFI

Setting

profi

- ▶ For expert users
- ▶ Complete instrument menu
- ▶ Access is password protected
- ▶ Possibility to arrange items of the „User“ menu
- ▶ Tree menu structure

LIGHT

Setting

light

- ▶ For trained users
- ▶ Only items necessary for instrument setting
- ▶ Access is password protected
- ▶ Possibility to arrange items of the „User“ menu
- ▶ Linear menu structure

USER

Setting

*profi light**user*

- ▶ For user operation
- ▶ Menu items are set by the user (Profi/Light) as per request
- ▶ Access is not password protected
- ▶ Optional menu structure either tree (PROFI) or linear (LIGHT)

4.1 Setting

The instrument is set and controlled by IR Remote control. All programmable settings of the instrument are performed in three adjusting modes:


- LIGHT** **Simple programming menu**
 - contains solely items necessary for instrument setting and is protected by optional number code
- PROFI** **Complete programming menu**
 - contains complete instrument menu and is protected by optional number code
- USER** **User programming menu**
 - may contain arbitrary items selected from the programming menu (LIGHT/PROFI), which determine the right (see or change)
 - acces without password

All programmable parameters are stored in the EEPROM memory (they hold even after the instrument is switched off).


Complete instrument operation and setting may be performed via OM Link communication interface, which is a standard equipment of all instruments.

The operation program is freely accessible (www.orbit.merret.cz) and the only requirement is the purchase of OML cable to connect the instrument to PC. It is manufactured in version RS 232 and USB and is compatible with all ORBIT MERRET instruments. Another option for connection is with the aid of data output RS 232 or RS 485 (without the need of the OML cable).






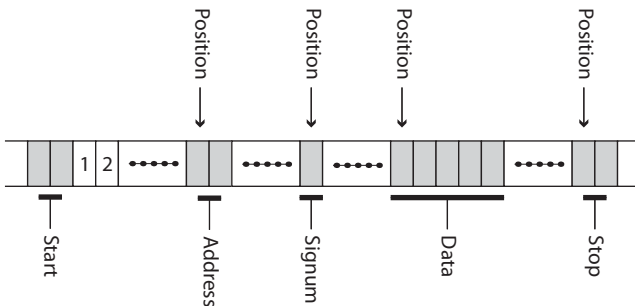
User data protocol

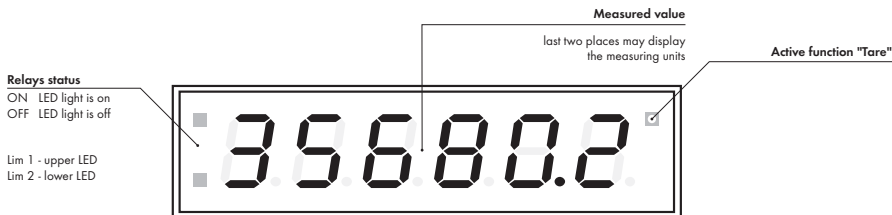

Setting and controlling the instrument is performed by means of the Remote control. With the aid of the Remote control it is possible to browse through the operation menu and to select and set the required values.






Symbols used in the instructions


- DEF** values preset from manufacture
-  symbol indicates a flashing light (symbol)
-  inverted triangle indicates the item that can be placed in USER menu
-  broken line indicates a dynamic item, i.e. it is displayed only in particular selection/version
-  after pressing the key the set value will not be stored
-  after pressing the key the set value will be stored
-  **30** continues on page 30

Setting the decimal point and the minus sign

DECIMAL POINT

Its selection in the menu, upon modification of the number to be adjusted it is performed by the control key  with transition beyond the highest decade, when the decimal point starts flashing . Positioning is performed by / .

THE MINUS SIGN

Setting the minus sign is performed by the key  on higher decade. When editing the item subtraction must be made from the current number (e.g.: 013 > , on class 100 > -87)


Control keys functions

Key	Measurement	Menu	Setting numbers/selection
	access into USER menu	exit menu	quit editing
	programmable key function	back to previous level	move to higher decade*
	programmable key function	move to previous item	move down*
	programmable key function	move to next item	move up*
	programmable key function	confirm selection	confirm setting/selection
	access into LIGHT/PROFI menu		
>3 s 	direct access into PROFi menu		
		configuration of an item for "USER" menu	
		determine the sequence of items in "USER - LIGHT" menu	

* alternatively, the setting may be done from the numeric keys of the remote control by selecting directly the number required

Setting items into „USER“ menu

- in LIGHT or PROFi menu
- no items permitted in USER menu from manufacture
- on items marked by inverted triangle



- item will not be displayed in USER menu
- item will be displayed in USER menu with the option of setting
- item will be solely displayed in USER menu

5.0 Setting "LIGHT"

LIGHT

Simple programming menu

- contains only items necessary for instrument setting and is protected by optional number code

SETTING LIGHT

light

- For capable users
- Only items necessary for instrument setting
- Access is password protected
- Possibility to arrange items of the „User“ menu
- Linear menu structure



Upon delay exceeding 60 s the programming mode is automatically discontinued and the instrument itself restores the measuring mode

Preset from manufacture

Password	"0"
Menu	LIGHT
USER menu	off
Setting the items	DEF

Access password

Baud rate Instrument address Data protocol Command

Setting - Integer Setting - Integer Setting - Integer Setting - Integer

Setting - Integer Setting - Integer Setting - Integer Setting - Integer

Setting - Float Setting - Float

Setting - 1.innitial sequence Setting - 2.innitial sequence Setting - Address position Setting - 1.address symbol

Setting - 2.address symbol Setting - Signum position Signum supression Setting - Data position

Setting - closing sequence Setting - Request (REQ.1...REQ.8) Setting - Communi. failure Setting - Timeout

Selection input range - min Selection input range - max Projection


Option - comparator


Option - Analog output

Primary color First color limit Color beyond first limit

Color beyond second limit Menu type Return to manufacture setting Language selection

New password Identification Instrument type Return to measuring mode

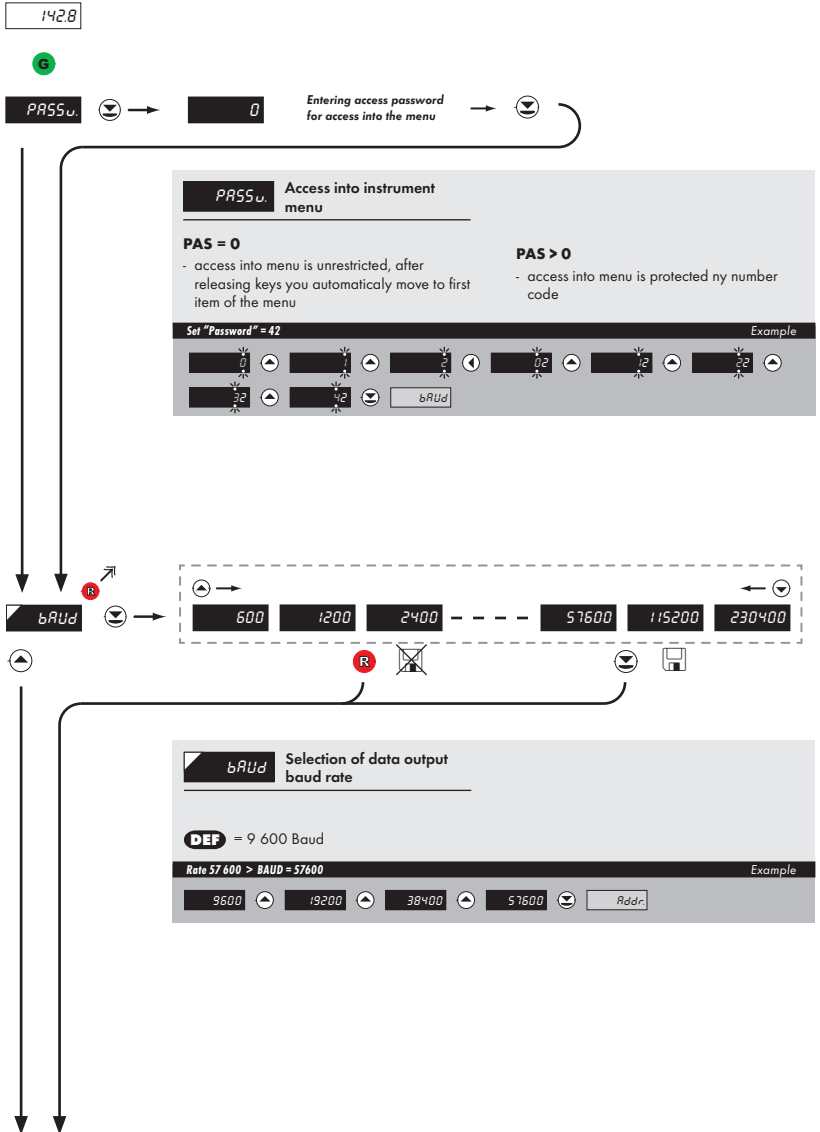

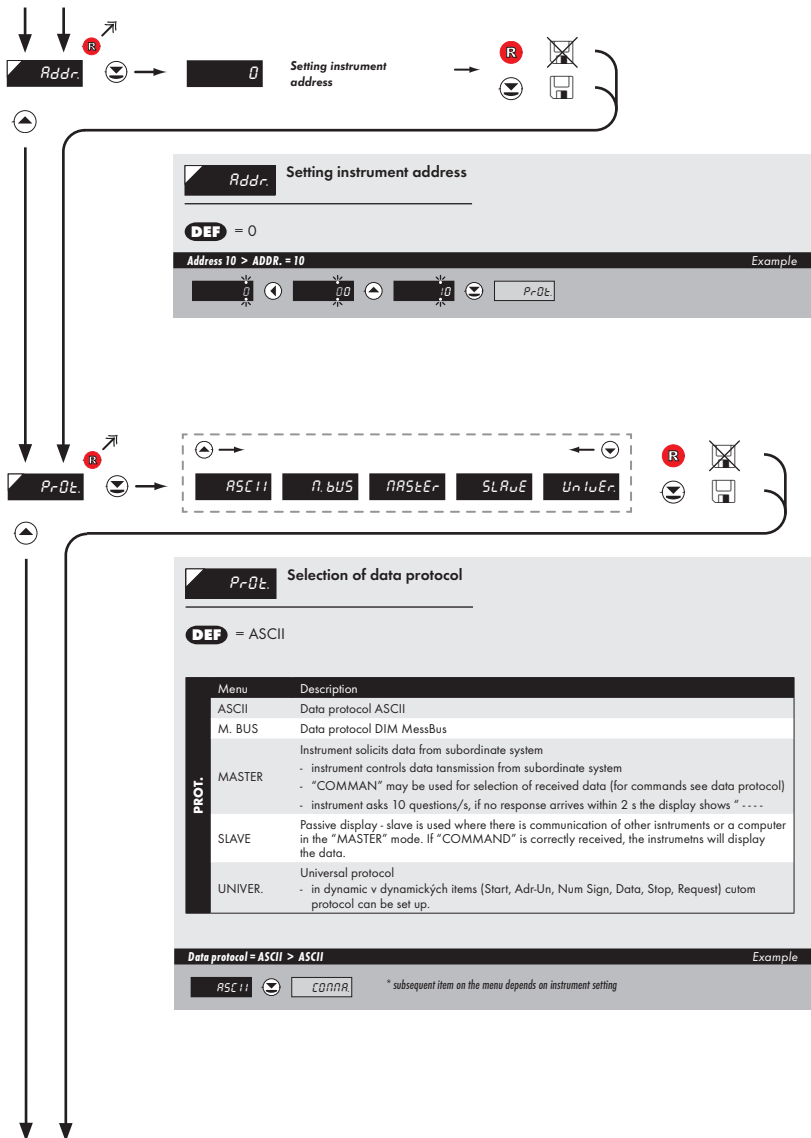

Addr. Setting instrument address

DEF = 0

Address 10 > ADDR. = 10 Example

0 00 10 PrOt.

PrOt.

ASCII M. BUS MASTER SLAVE UNIVER.

R


PrOt. Selection of data protocol

DEF = ASCII

Menu	Description
ASCII	Data protocol ASCII
M. BUS	Data protocol DIM MessBus
MASTER	Instrument solicits data from subordinate system - instrument controls data transmission from subordinate system - "COMMAND" may be used for selection of received data (for commands see data protocol) - instrument asks 10 questions/s, if no response arrives within 2 s the display shows "...."
	Passive display - slave is used where there is communication of other instruments or a computer in the "MASTER" mode. If "COMMAND" is correctly received, the instruments will display the data.
SLAVE	Universal protocol
UNIVER.	- in dynamic v dynamických items (Start, Adr-Un, Num Sign, Data, Stop, Request) custom protocol can be set up.

Data protocol = ASCII > ASCII Example

ASCII CONNR * subsequent item on the menu depends on instrument setting

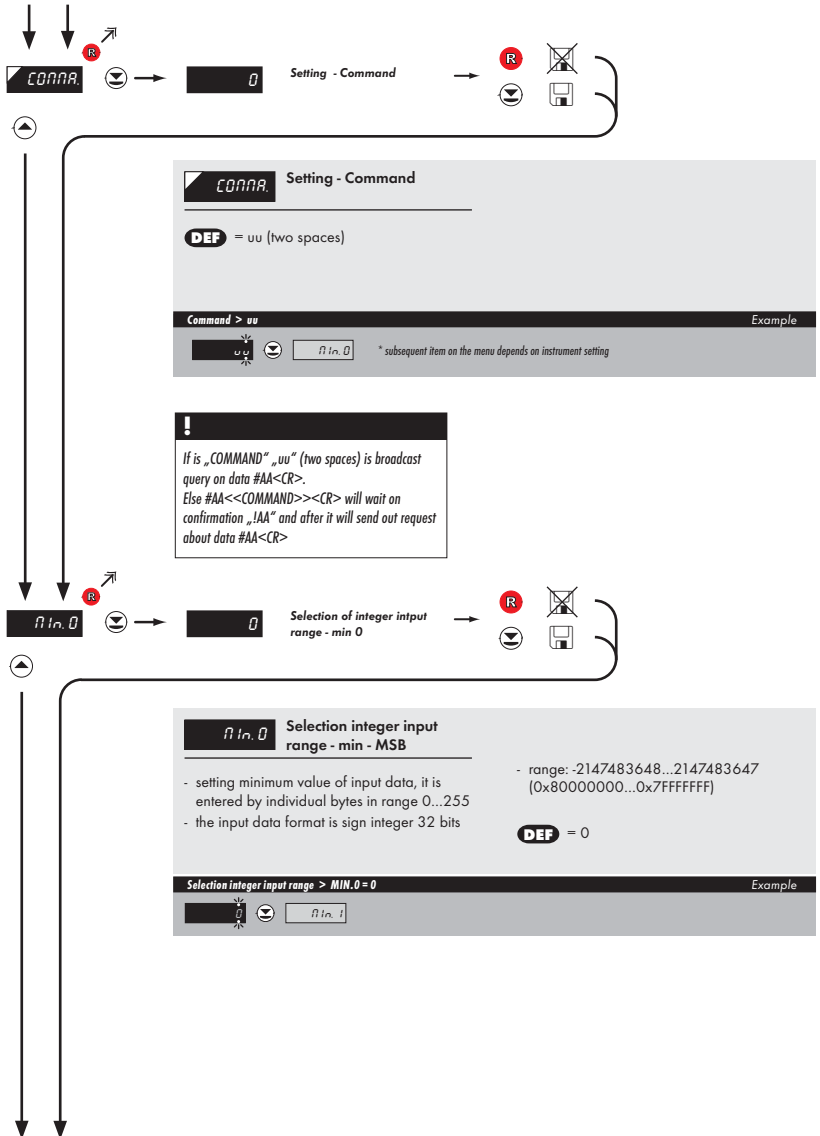



n In. 1 Selection of integer input range - min


- setting minimum value of input data, it is entered by individual bytes in range 0...255
- the input data format is sign integer 32 bits

- range: -2147483648...2147483647
(0x80000000...0x7FFFFFFF)

DEF = 0

Selection integer input range > MIN.1 = 0 Example

n In. 2



n In. 2 Selection of float input range - min


- setting minimum value of input data, it is entered by individual bytes in range 0...255
- the input data format is sign integer 32 bits

- range: -2147483648...2147483647
(0x80000000...0x7FFFFFFF)

DEF = 0

Selection integer input range > MIN.2 = 0 Example

n In. 3

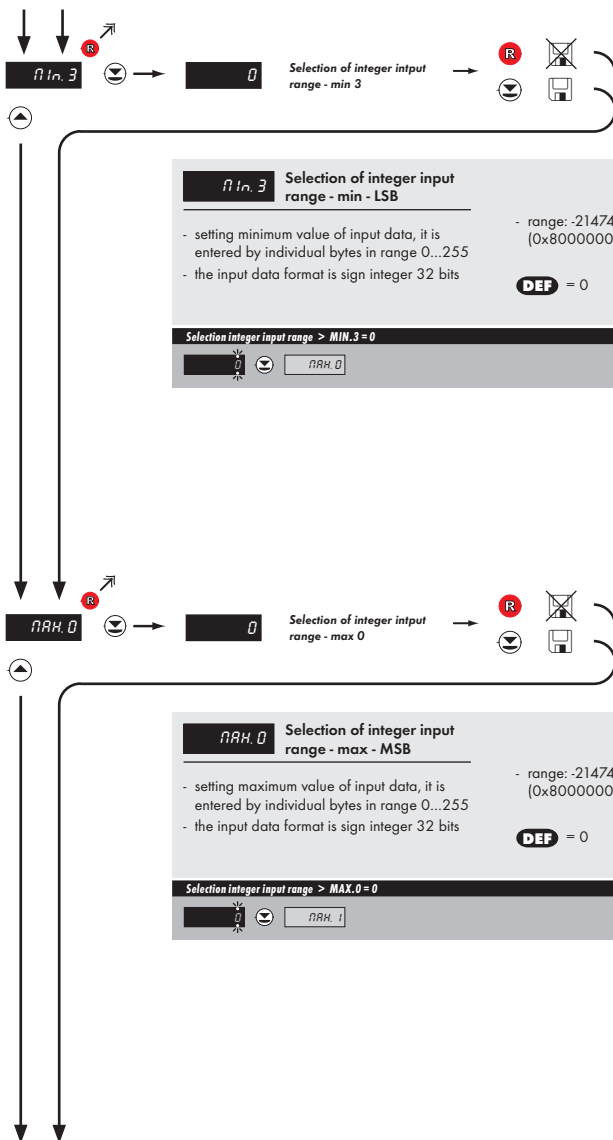



PAR. 1 Selection of integer input range - max

- setting maximum value of input data, it is entered by individual bytes in range 0...255
- the input data format is sign integer 32 bits

- range: -2147483648...2147483647 (0x80000000...0x7FFFFFFF)

DEF = 0

Selection integer input range > MAX.1 = 0 *Example*




PAR. 2 Selection of integer input range - max

- setting maximum value of input data, it is entered by individual bytes in range 0...255
- the input data format is sign integer 32 bits

- range: -2147483648...2147483647 (0x80000000...0x7FFFFFFF)

DEF = 0

Selection integer input range > MAX.1 = 0 *Example*

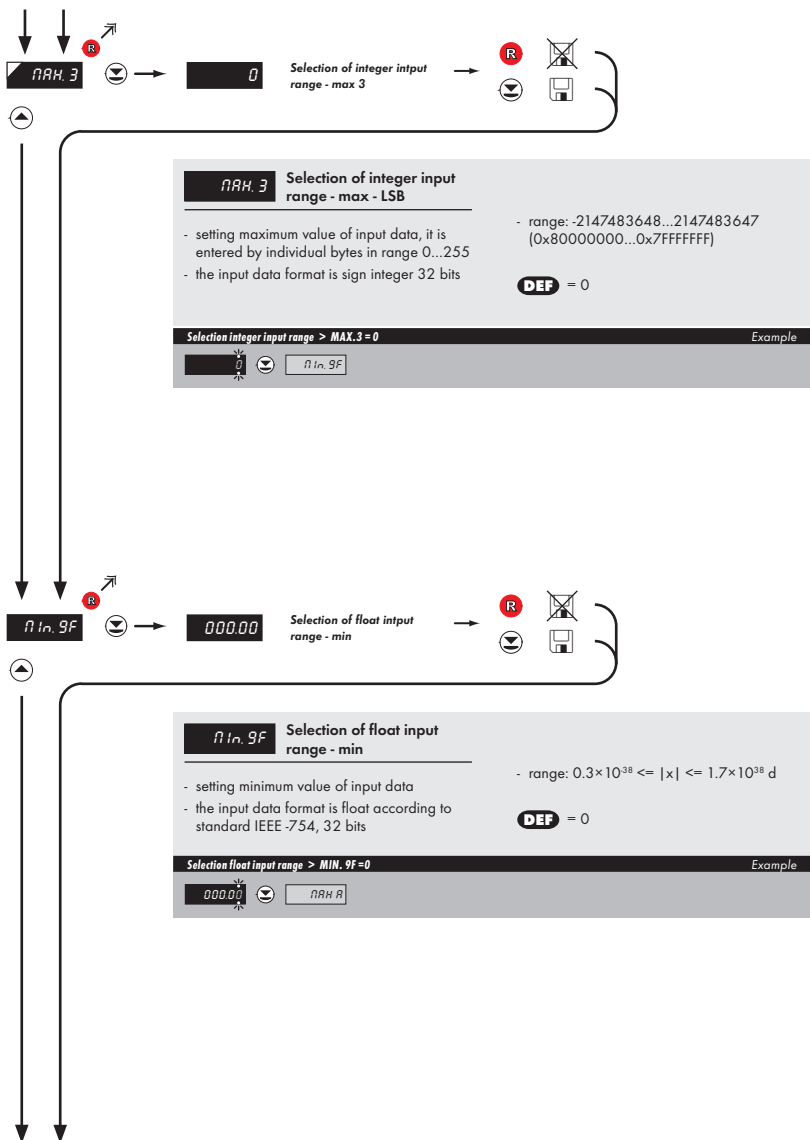



MAX. 9F

Selection of float input range - max

- setting maximum value of input data
- the input data format is float according to standard IEEE-754, 32 bits

- range: $0.3 \times 10^{38} \leq |x| \leq 1.7 \times 10^{38}$

DEF = 0


Selection float input range > MAX. 9F=100

100.00

100.00

* subsequent item on the menu depends on instrument setting

Example

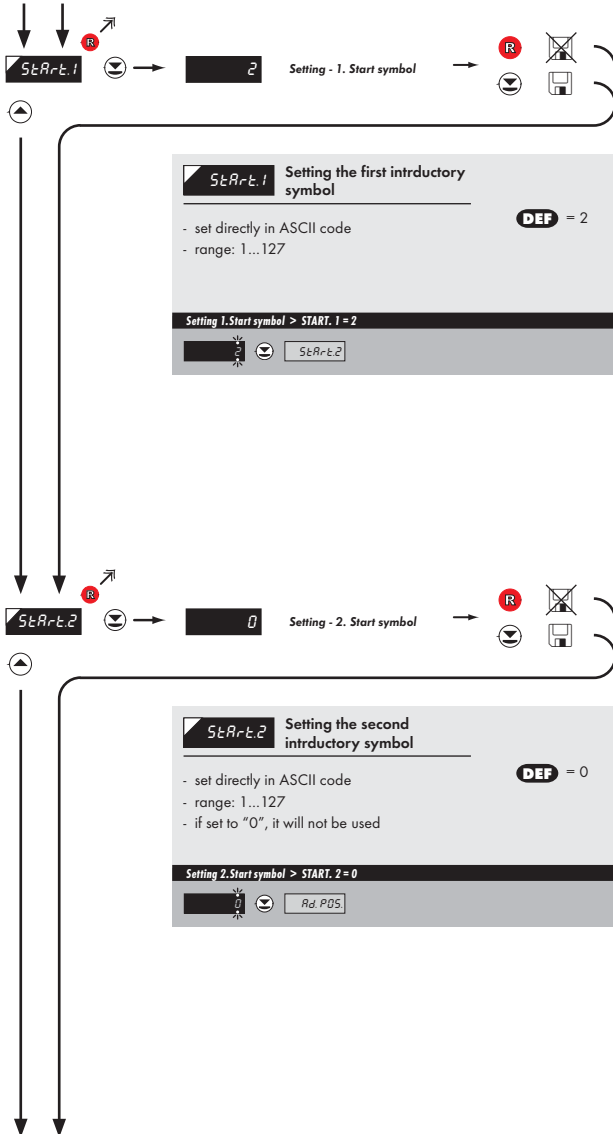



Adr. POS.

Setting the address position

- Position of the address and other symbols which have to have a set value. If set to 0, the block will not be taken into account. The block can be anywhere in the message.

- range: 0...245

DEF = 0

Setting address position > Adr. POS. = 0
Example

0

↻

Adr. 1



Adr. 1

First address symbol

- set directly in ASCII code
- range: 0...127


- DEF = 48


Setting 1. address symbol > Adr. 1 = 48
Example

48

↻

Adr. 2

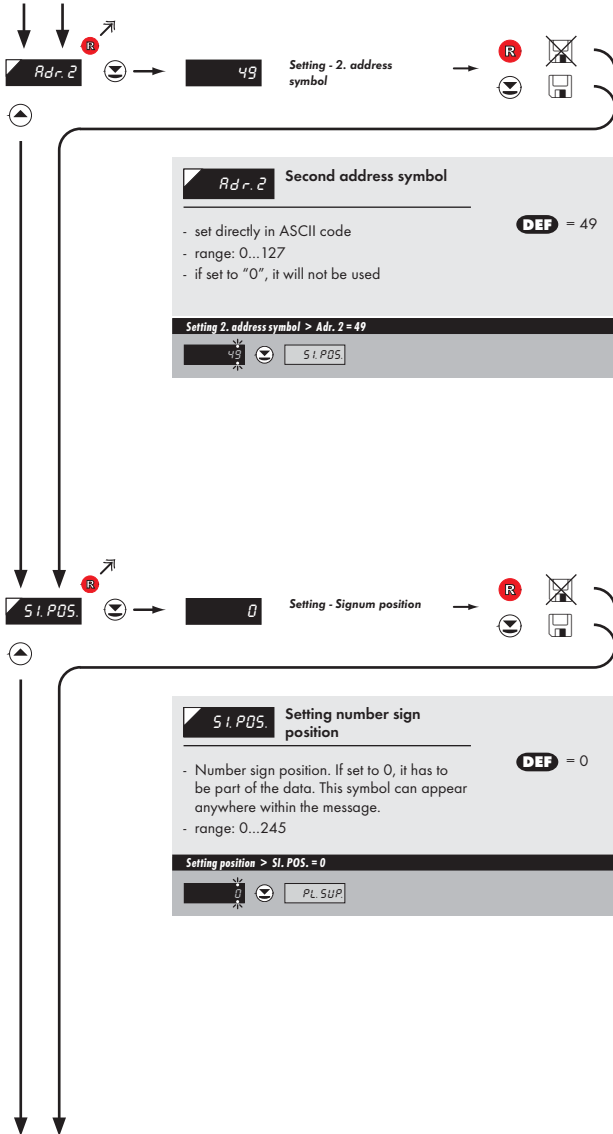

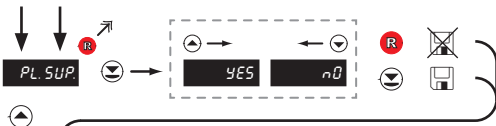

PL_SUP „Plus“ number sign suppression

- option "YES" > number sign "plus" will be replaced by space
- option "NO" > number sign "plus" will be displayed

DEF = YES

Sign suppression > PL_SUP = YES Example

Rn0 [] dR_POS



dR_POS Setting data position


- Data position. This block can be anywhere within the message. If ending sequence is received sooner than the set number of symbols, it is considered a successful reception.

- range: 1...245

DEF = 1

Setting data position > dA_POS = 0 Example

[] dR_LEN

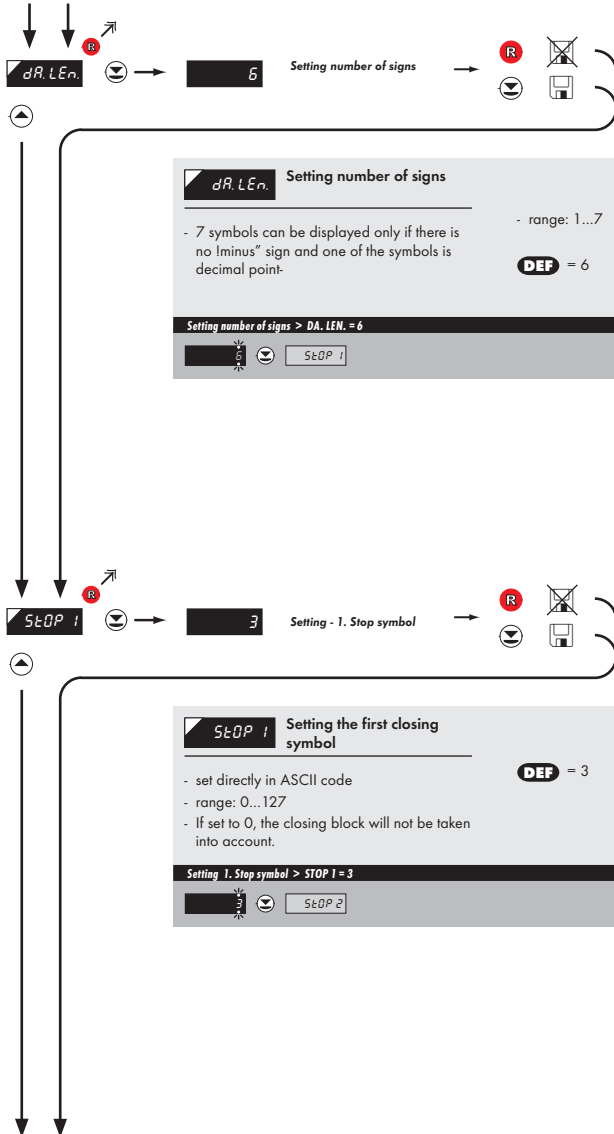



STOP 2

Setting the second closing symbol

- set directly in ASCII code
- range: 0...127
- If set to 0, the block will not be taken into account.


DEF = 0

Setting - 2. Stop symbol > STOP 2 = 0 Example

rEQ. 1

↻

rEQ. 1



rEQ. 1

First symbol of the request

- set directly in ASCII code
- range: 0...127
- If set to "0", request is not sent

DEF = 0

Setting - 1. symbol > REQ. 1 = 0 Example

rEQ. 2

↻

rEQ. 2

•

rEQ. 8

↻

n0d t.D

*
Same procedure for REQ. 2...REQ. 8

MOD t.O. failure

Selecting display mode in case of communication failure

DEF = DASHES

Menu	Description
NO	No reaction
BLANK	Display goes off
FLASH	Last displayed value starts flashing
DASHES	Dash symbols displayed
DOT	Decimal point is displayed

Select mode > Dashes Example

dASHES **tIMEOU**

!
Item will not appear in "MASTER" protocol

tIMEOU Setting - Timeout constant

5

Setting - Constant > tIMEOU = 1 Example

tIMEOU Setting the time constant for Timeout

- range: 0...99,9 s
- **DEF** = 1.0 s

!
Item will not appear in "MASTER" protocol and when "MOD t.O." is disabled



n In R

Selection of integer input range - max

- range of the setting is -99999...999999
- position of the DP does not affect display projection

- the DP is automatically shifted after the value is confirmed

DEF = 0.00

Projection for min > MIN A = 0.00 Example

000.00

↕

n In R



n In R

Selection of float input range - min

- range of the setting is -99999...999999
- position of the DP does not affect display projection

- the DP is automatically shifted after the value is confirmed


DEF = 100.00


Projection for max > MAX A = 100.00 Example

100.00

↕

FD-R R

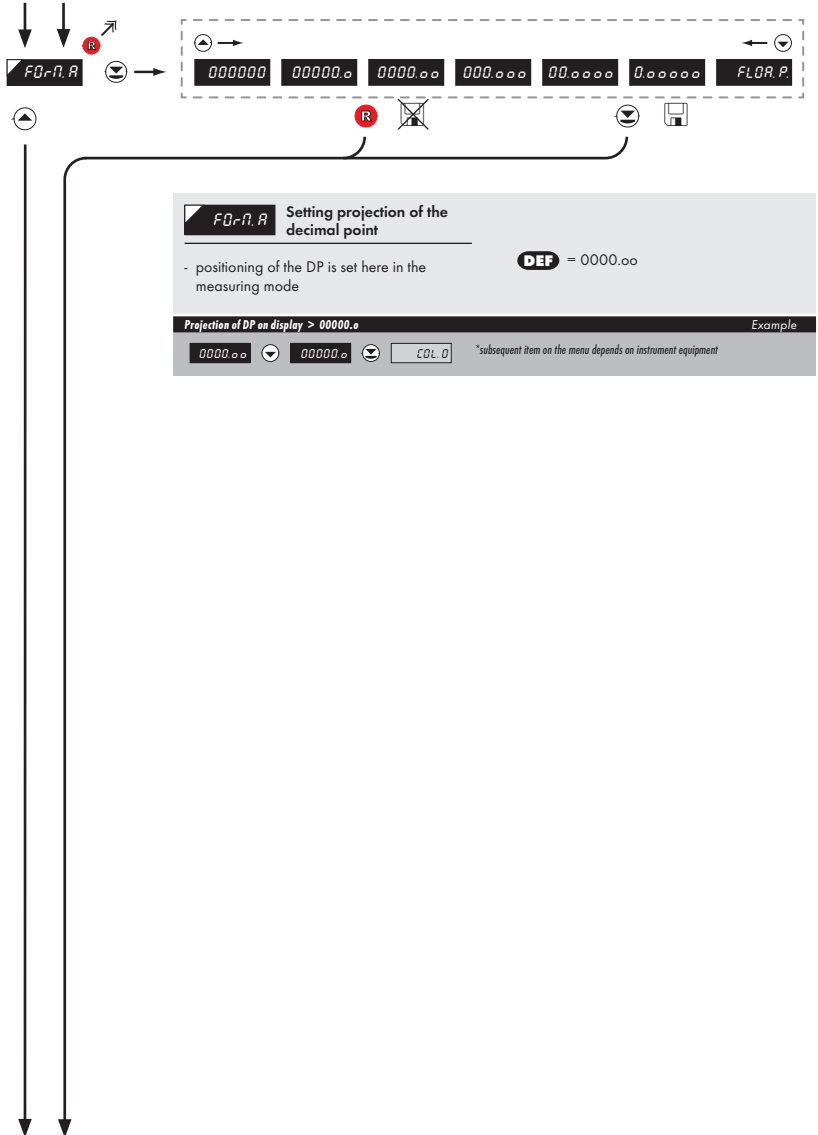

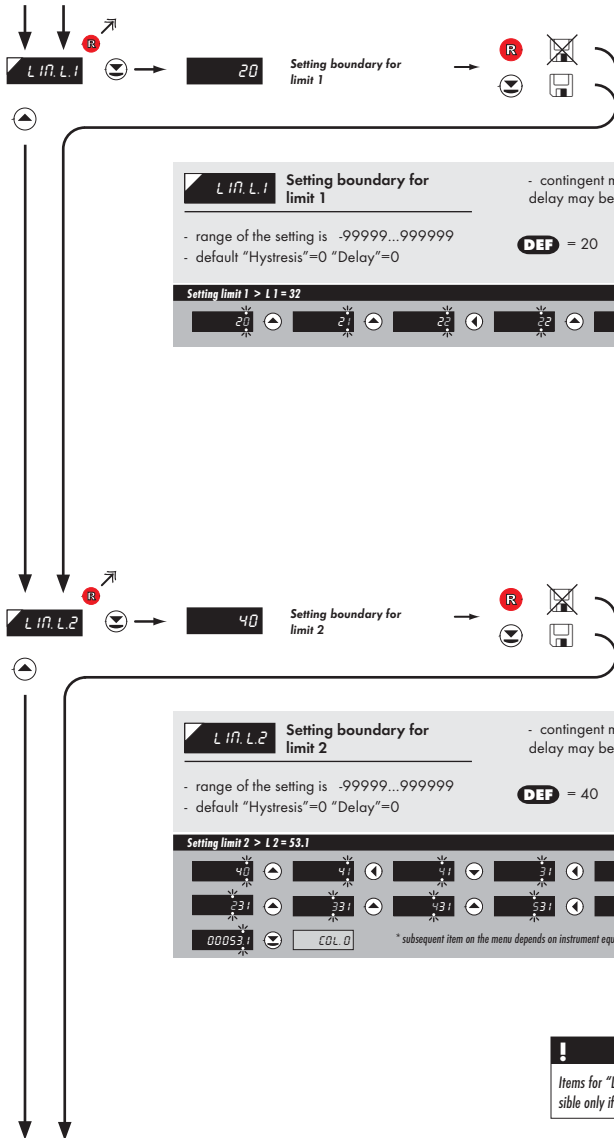



LIM.L3 Setting boundary for limit 3

- range of the setting is -99999...999999
- default "Hysteresis"=0 "Delay"=0

DEF = 60

Setting limit 3 > L3 = 85 Example

80	61	62	63	64	65
65	65	85	COL 0	* subsequent item on the menu depends on instrument equipment	



LIM.L4 Setting boundary for limit 4

- range of the setting is -99999...999999
- default "Hysteresis"=0 "Delay"=0

DEF = 80

Setting limit 4 > L4 = 103 Example

80	81	82	83	83	83
03	03	103	COL 0	* subsequent item on the menu depends on instrument equipment	

Setting the type of analog output

Menu	Range	Description
0-20mA	0...20 mA	
E. 4-20mA	4...20 mA	with indication of error statement (<3,6 mA)
4-20mA	4...20 mA	
0.5mA	0...5 mA	
0.2 V	0...2 V	
0.5 V	0...5 V	
0-10 V	0...10 V	

DEF = 4...20 mA

Type of analog output - 0...10 V > TYP. A.O. = 0-10 V Example

4-20mA 0-5mA 0-2V 0-5V 0-10V **FIN A.O.**

Assigning the display value to the beginning of the AO range

0

Assigning the display value to the beginning of the AO range


DEF = 0

- range of the setting is -99999...99999

Display value for the beginning of the AO range > MIN A.O. = 0 Example

!

Items for "Limits" and "Analog output" are accessible only if incorporated in the instrument.

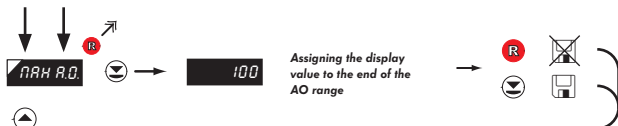


MAX A.O. Assigning the display value to the end of the AO range **DEF** = 100

- range of the setting is -99999...999999

Display value for the end of the AO range > MAX A.O. = 120 Example

Displayed only with options > **Analog output**

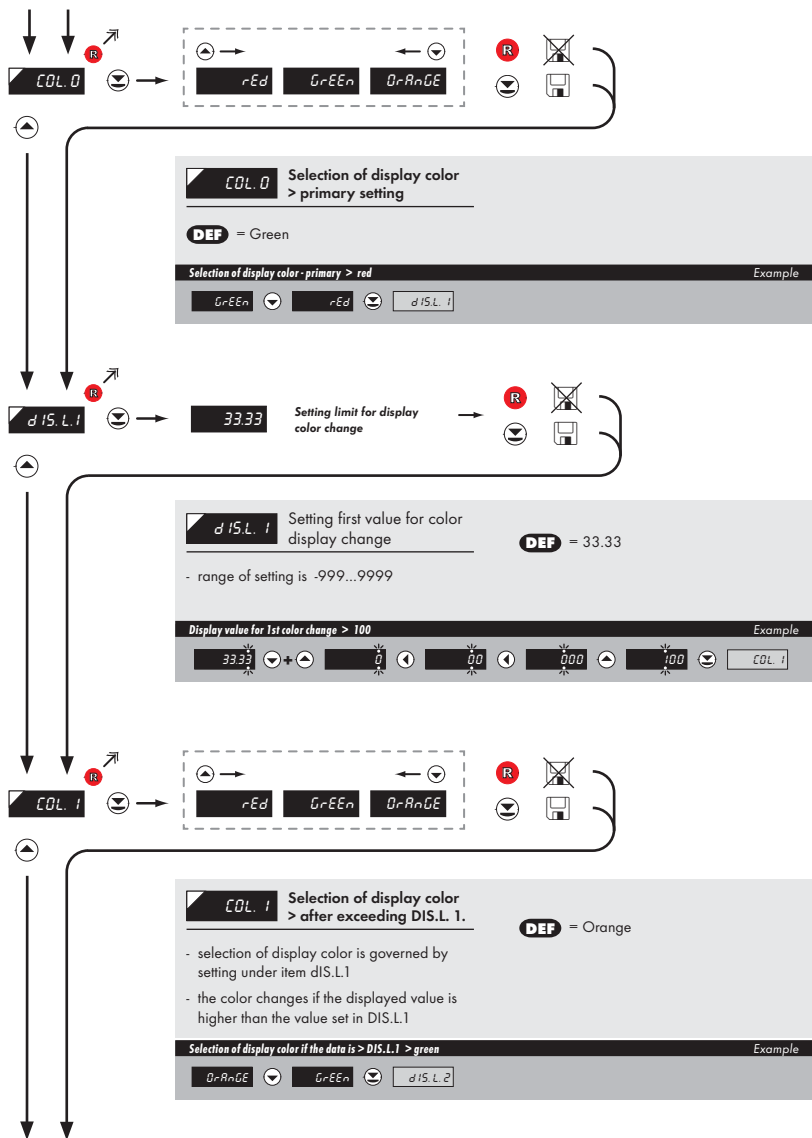



d 15.L.2

Setting second value for display color change

DEF = 66.67

- range of setting is -999...9999

Display value for 1st color change > 400

Example

66.67

+

0

-

00

-

000

200

300

400

COL.2



COL.2

Selection of display color > after exceeding DIS.L.2

DEF = Red

- selection of display color is governed by setting under item DIS.L.2

- the color changes if the displayed value is higher than the value set in DIS.L.2


Selection of display color if the data is > DIS.L.2 > orange


Example

rEd

OrAnGE

nEnU

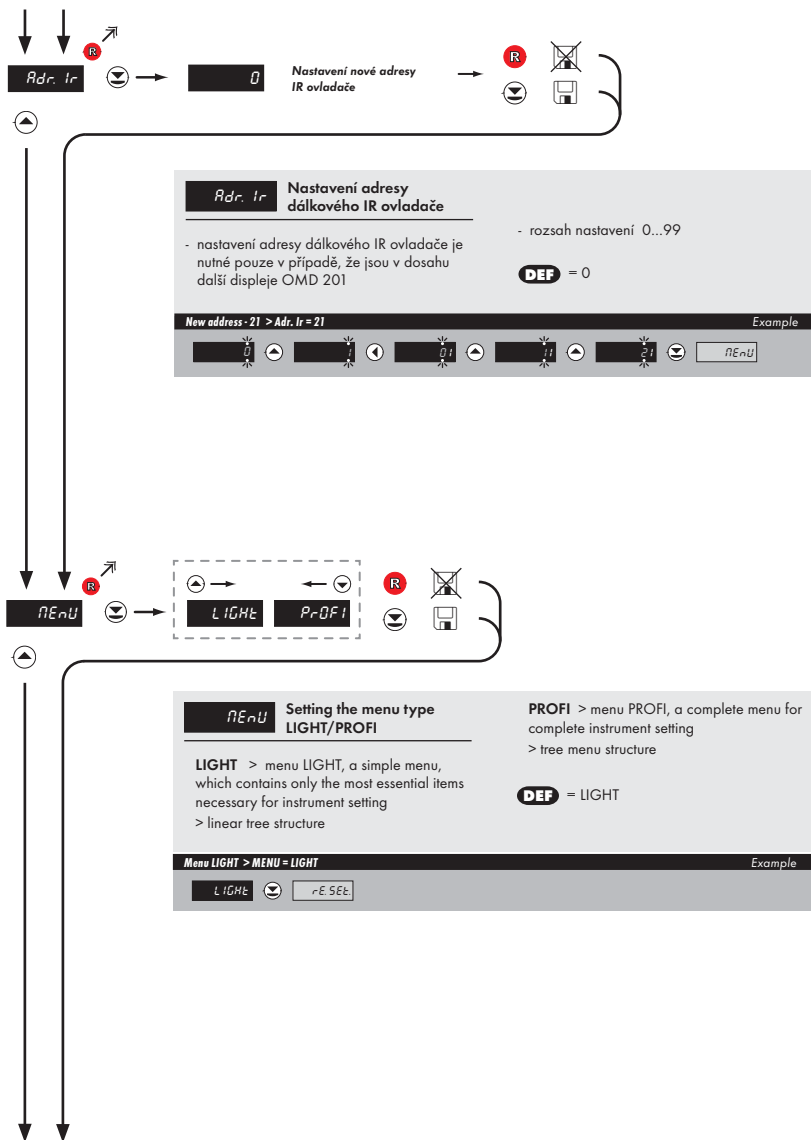

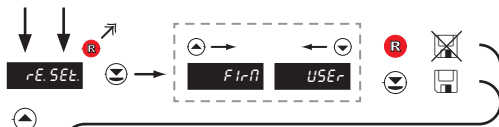


rE.SEt. Restoration of manufacture instrument setting

- in the event of error setting the manufacture setting may be restored
- restoration is performed for the currently selected type of the instrument input (select "FIRM")
- provided you stored your user setting in the "PROFI" menu, it may also be restored (select "USER")
- loading manufacture calibration and primary setting of items on the menu (DEF)

Restoration of manufacture setting > FIRM Example

rE.SEt. ◀ ▶ FIRM ▶ ◀ LANG




LANG. Selection of language in instrument menu

- selection of language version of the instrument menu

DEF = ENGL

Language selection - ENGLISH > LANG. = ENGL. Example

ENGL. ▶ ◀ PRS.LI

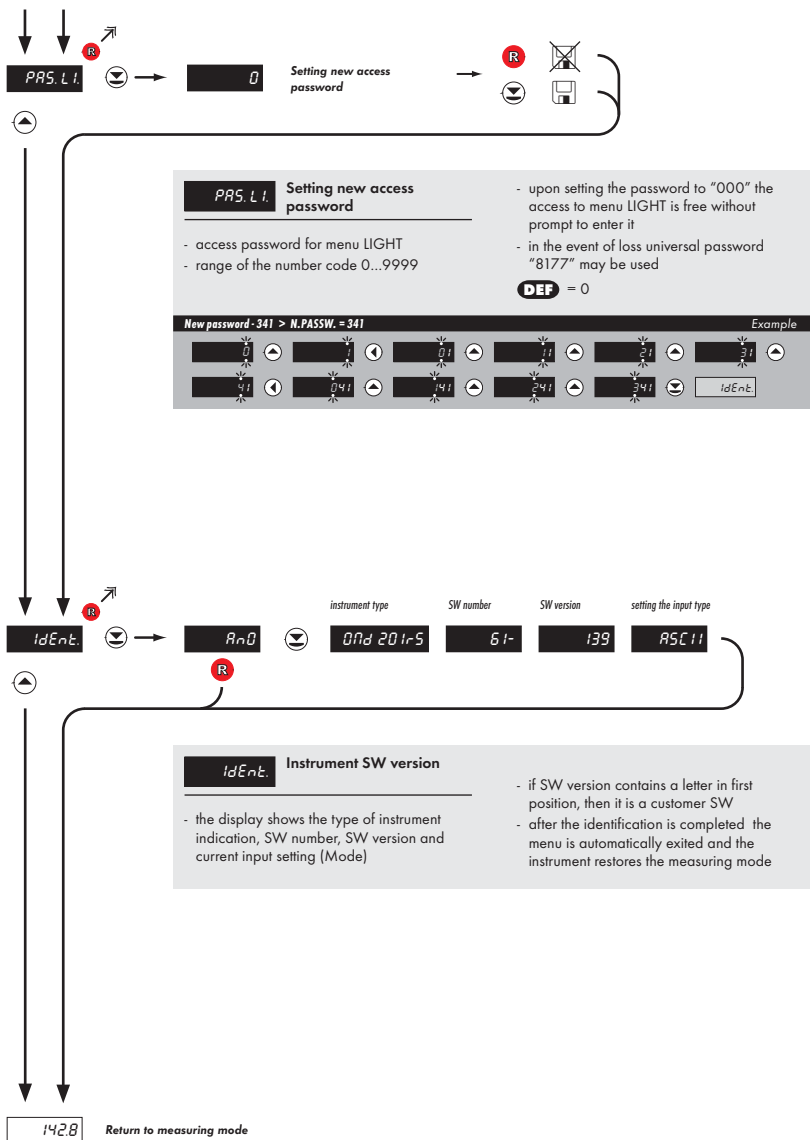

6.0

Setting "PROFI"

PROFI

Complete programming menu

- contains complete instrument menu and is protected by optional number code
- designed for expert users
- preset from manufacture is menu **LIGHT**

 SETTING
 PROFIL
 


- For expert users
- Complete instrument menu
- Access is password protected
- Possibility to arrange items of the „User“ menu
- Tree menu structure

Switching over to "PROFI" menu


>3 s




- temporary switch-over to **PROFI** menu, which is suitable to edit a few items
- after quitting **PROFI** menu the instrument automatically switches to **LIGHT** menu
- access is password protected (if it was not set under item N. PASS. =0)



- access into **LIGHT** menu and transition to item „MENU“ with subsequent selection of „PROFI“ and confirmation
- after re-entering the menu the **PROFI** type is active
- access is password protected (if it was not set under item N. PASS. =0)

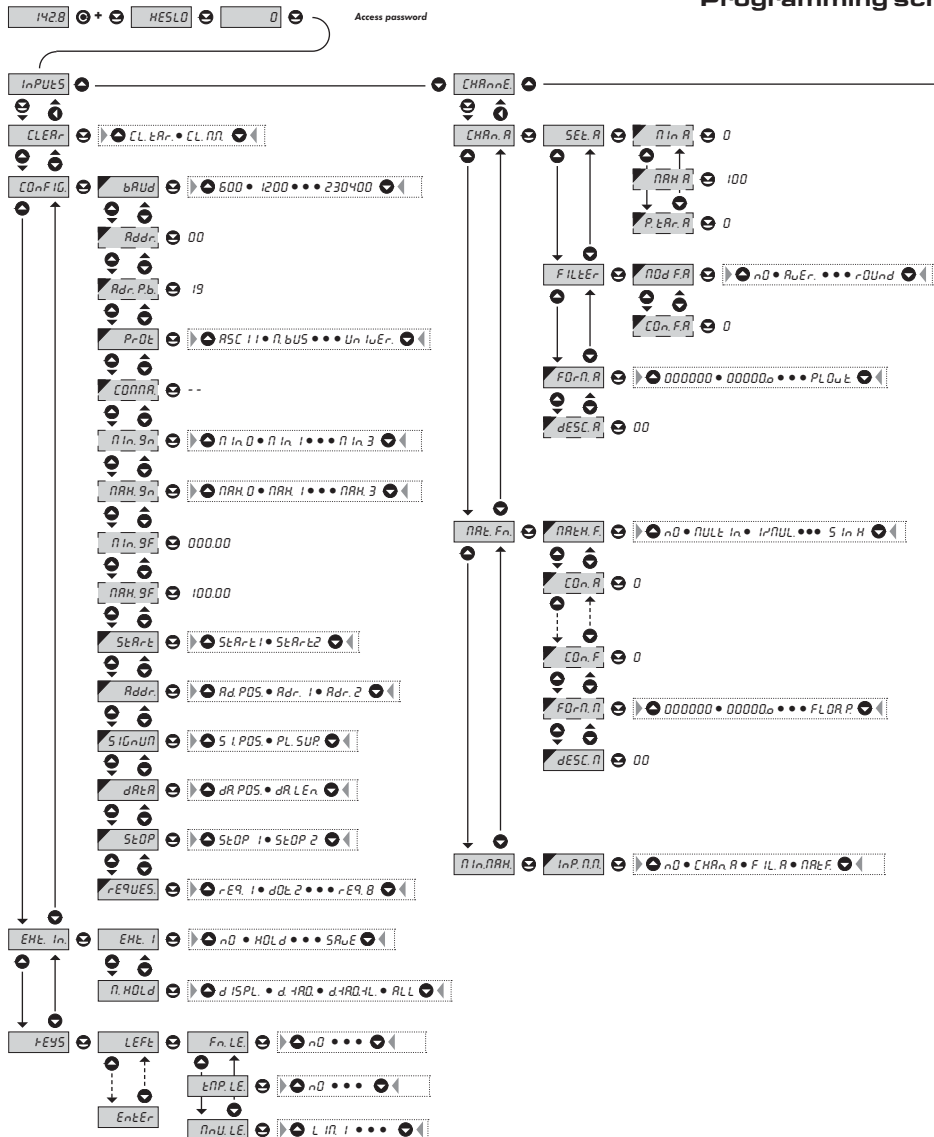


name PROFI MENU

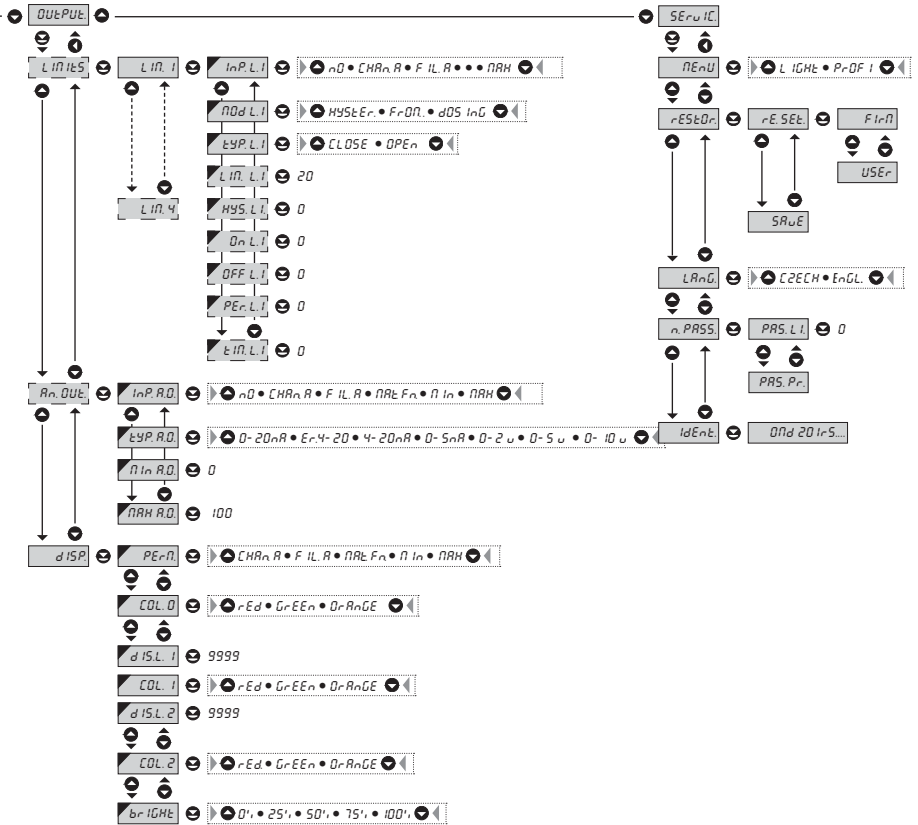

!
Upon delay exceeding 60 s the programming mode is automatically discontinued and the instrument itself restores the measuring mode


6.1 Setting "PROFI" - INPUT

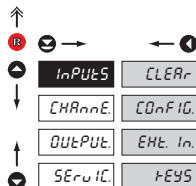

The primary instrument parameters are set in this menu

CLEAR	Resetting internal values
CONFIG.	Selection of measuring range and parameters
EXT. In.	Setting external inputs functions
FEYS	Assigning further functions to keys on the instrument

6.1.1 Resetting internal values

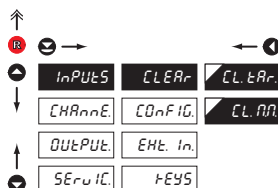

CLEAR	Resetting internal values
CL. TAR.	Tare resetting
CL. MIN.	Resetting min/max value

- resetting memory for the storage of minimum and maximum value achieved during measurement

6.1.2a Selection of data baud rate

inPUTES CLEAR bAud 600
CHARnnE CONF ID Addr 1200
OUTPUT EHE In Addr.Pb 2400
SERwIC KEYS PrOt 4800
CONNA 9600 DEF
n In. 9n 19200
nAH. 9n 38400
n In. 9F 57600
nAH. 9F 115200
StArt 230400
Adr-Un
SIGNUR
dARA
StOP
rEQUES
nOde.O
tINEDU

bAud	Selection of data baud rate
600	Rate - 600 Baud
1200	Rate - 1 200 Baud
2400	Rate - 2 400 Baud
4800	Rate - 4 800 Baud
9600	Rate - 9 600 Baud
19200	Rate - 19 200 Baud
38400	Rate - 38 400 Baud
57600	Rate - 57 600 Baud
115200	Rate - 115 200 Baud
230400	Rate - 230 400 Baud

6.1.2b Setting instrument address

inPUTES CLEAR bAud 00 DEF
CHARnnE CONF ID Addr
OUTPUT EHE In Addr.Pb
SERwIC KEYS PrOt
•
•
•
rEQUES
nOde.O
tINEDU

Addr.	Setting instrument address
-	setting in range 0...31
- DEF	= 00
Addr.Pb.	Setting instrument address - PROFIBUS
-	setting in range 0...125
- DEF	= 19

! When selecting the "UNIVER." protocol, the address is set in "Adr-Un."

6.1.2c Selection of data protocol

	inPUtS	CLear	bRUD	ASCI	DEF		
	CHARnE	CONF iG	Addr	n.bUS			
	OUTpUt	EHt. In	Adr. P.b	nRStEr			
	SERv iC	tEYS	PrOt	SLRvE			
			COMMAN	Un iUEr			
			n In. 9n				
			nRH. 9n				
			n In. 9F				
			nRH. 9F				
			StArE				
			Adr.-Un				
			SiGnUn				
			dRtR				
			StOP				
			rEQUES				
			nOd tG				
			t INEDU				



If is „COMMAND“ „uu“ (two spaces) is broadcast query on data #AA<CR>.
Else #AA<<COMMAND>><CR> will wait on confirmation „!AA“ and after it will send out request about data #AA<CR>

PrOt Selection of data protocol

- | | |
|----------------|--|
| ASCI | Data protocol ASCII |
| n.bUS | Data protocol DIN MessBus |
| nRStEr | Instrument solicits data from subordinate system |
| | - instrument controls data transmission from subordinate system |
| | - "COMMAN" may be used for selection of received data (for commands see data protocol) |
| | - instrument asks 10 questions/s, if no response arrives within 2 s the display shows "----" |
| SLRvE | Passive Display - Slave |
| | - passive display - slave is used where there is communication of other instruments or a computer in the "MASTER" mode. If "COMMAND" is correctly received, the instruments will display the data. |
| Un iUEr | Universal protocol |
| | - in dynamic v dynamických items (Start, Adr-Un, Num Sign, Data, Stop, Request) custom protocol can be set up. |

6.1.2d Selection of integer input range - minimum

ASCII, MESSBUS

n In 9n Selection of integer input range - min

- setting minimum value of input data, it is entered by individual bytes in range 0...255
- the input data format is sign integer 32 bits
- range: -2147483648...2147483647 (0x80000000...0x7FFFFFFF)

DEF = 0

n In 0 Most significant byte - "MSB"

n In 3 Least significant byte - "LSB"

6.1.2e Selection of integer input range - maximum

ASCII, MESSBUS

NAH. 9n Selection of integer input range - max

- setting minimum value of input data, it is entered by individual bytes in range 0...255
- the input data format is sign integer 32 bits
- range: -2147483648...2147483647 (0x80000000...0x7FFFFFFF)


DEF = 100

NAH. 0 Most significant byte - "MSB"

NAH. 3 Least significant byte - "LSB"

DEF = 100


6.1.2f Selection of float input range - minimum

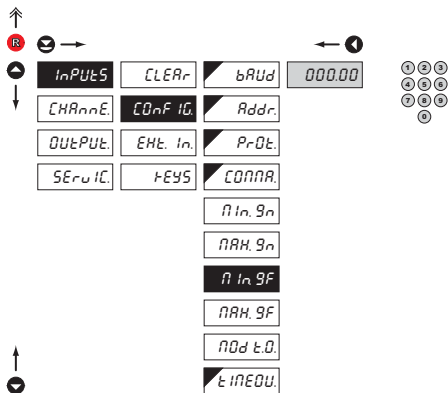**n In 9F** Selection of float input range - min.

- setting minimum value of input data
- input data format is float according to standard IEEE-754, 32 bits
- range: $0.3 \times 10^{38} \leq |x| \leq 1.7 \times 10^{38}$

- **DEF** = 0


6.1.2g Selection of float input range - maximum

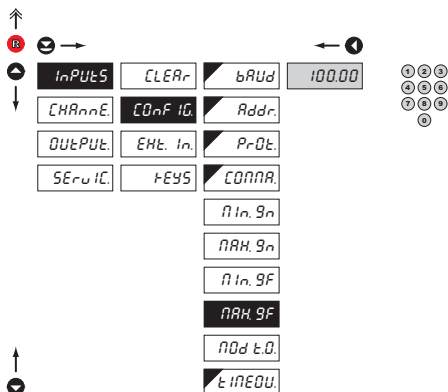**nRH 9F** Selection of float input range - max

- setting minimum value of input data
- input data format is float according to standard IEEE-754, 32 bits
- range: $0.3 \times 10^{38} \leq |x| \leq 1.7 \times 10^{38}$

- **DEF** = 100

6.1.2h Selecting display mode in case of communication failure

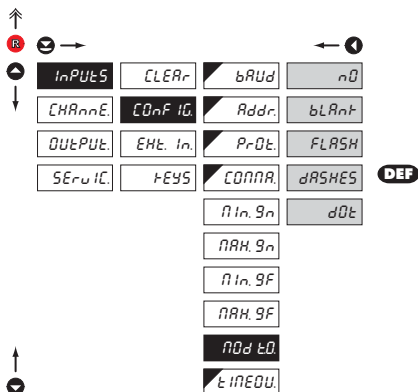


nD t.0. Selecting display mode in case of communication failure

- nD** No reaction
- bLAnT** Display goes off
- FLASH** Last displayed value starts flashing
- dRASHES** Dash symbols displayed
- dDt** Decimal point is displayed



Item will not appear in "MASTER" protocol

6.1.2i Setting the time constant for Timeout

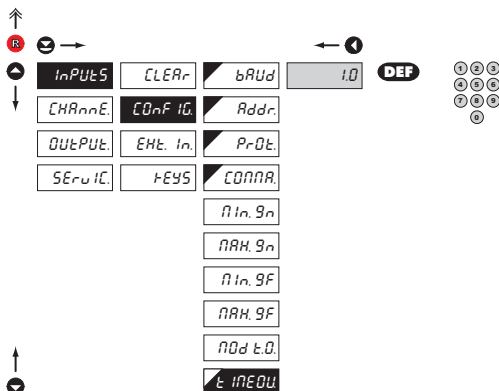

t nEQU. Setting the time constant for Timeout

- setting the time delay after which the indication of interrupted communication will appear on the display in the mode of "Mod t.0."
- range: 0...99,9 s
- **DEF** = 1.0 s



Item will not appear in "MASTER" protocol and when "MOD t.0." is disabled

6.1.2*1* | Setting initial two-symbol sequence

Protocol "UNIVERSAL"

StAr.t. Setting initial two-symbol sequence**StAr.t.1** Setting the first introductory symbol

- set directly in ASCII code
- range: 1...127
- **DEF** = 2

StAr.t.2 Setting the second introductory symbol

- set directly in ASCII code
- range: 0...127
- if set to "0", it will not be used
- **DEF** = 0

6.1.2*2* | Setting the instrument address

Protocol "UNIVERSAL"

Addr. Setting the instrument address

- either address in universal protocol or one (or two) symbols of fixed value

Ad.POS. Setting the address position

- Position of the address and other symbols which have to have a set value. If set to 0, the block will not be taken into account. The block can be anywhere in the message.
- range: 0...245
- **DEF** = 0

Ad.r. 1 First address symbol

- set directly in ASCII code
- range: 0...127
- **DEF** = 48

Ad.r. 2 Second address symbol

- set directly in ASCII code
- range: 0...127
- if set to "0", it will not be used
- **DEF** = 49

6.1.2l Setting number sign

Protocol "UNIVERSAL"

Navigation diagram for setting number sign. The grid contains the following items:

- Row 1: InPUtS, CLEAR, bAUD, **SI.POS.** (with '0' in a grey box), keypad icon.
- Row 2: CHAnnE, CONF ID, PrDt, PL SUP.
- Row 3: OutPUt, EHL In, StARt.
- Row 4: SEruiC, KEYS, Addr.
- Row 5: **SiGnUr**
- Row 6: dRAr
- Row 7: StOP
- Row 8: rEQUeS.
- Row 9: nOd t.O.
- Row 10: tInEQU.

SiGnUr Setting number sign

SI.POS. Setting number sign position

- Number sign position. If set to 0, it has to be part of the data. This symbol can appear anywhere within the message. range: 0...245

DEF = 0

PL SUP. „Plus“ number sign suppression

- option "YES" > number sign "plus" will be replaced by space
- option "NO" > number sign "plus" will be displayed

DEF = YES



Dispal ed data will be one position short when the number sign is displayed.

6.1.2m Setting data format

Protocol "UNIVERSAL"

Navigation diagram for setting data format. The grid contains the following items:

- Row 1: InPUtS, CLEAR, bAUD, **dR.POS.** (with '0' in a grey box), keypad icon.
- Row 2: CHAnnE, CONF ID, PrDt, dR.LEn.
- Row 3: OutPUt, EHL In, StARt.
- Row 4: SEruiC, KEYS, Addr.
- Row 5: SiGnUr
- Row 6: **dRAr**
- Row 7: StOP
- Row 8: rEQUeS.
- Row 9: nOd t.O.
- Row 10: tInEQU.

dRAr Setting data format

dR.POS. Setting data position

- Data position. This block can be anywhere within the message. If ending sequence is received sooner than the set number of symbols, it is considered a successful reception.

- range: 1...245

DEF = 1

dR.LEn. Settin number of signs


- 7 symbols can be displayed only if there is no "minus" sign and one of the symbols is decimal point

- range: 1...7

DEF = 6

6.1.2n Setting of closing two-symbol sequence

Protocol "UNIVERSAL"

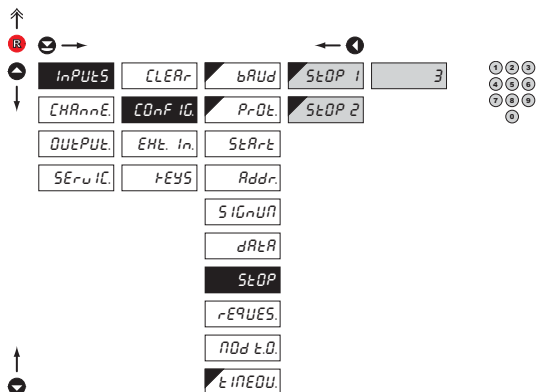**StOP** Setting of closing two-symbol sequence.

- Closing sequence. None, one or two symbols. If both symbols are "0", data will be displayed after their reception.

StOP 1 Setting the first closing symbol

- set directly in ASCII code
- range: 0...127
- If set to 0, the closing block will not be taken into account.


- **DEF** = 3**StOP 2** Setting the second closing symbol

- set directly in ASCII code
- range: 0...127
- If set to 0, the block will not be taken into account.

- **DEF** = 0

6.1.2o Setting of the request to receive data

Protocol "UNIVERSAL"

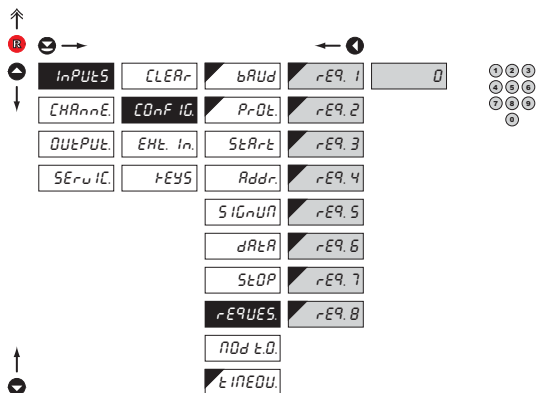**rEQUESt** Setting of the request to receive data.**rEQ. 1** First symbol of the request

- set directly in ASCII code
- range: 0...127
- If set to "0", request is not sent

- **DEF** = 0


*

Same procedure for REQ. 2...REQ. 8

!

How to set items "Mod. t.O." and "tIMEOu." see p. 51

6.1.3a External input function selection

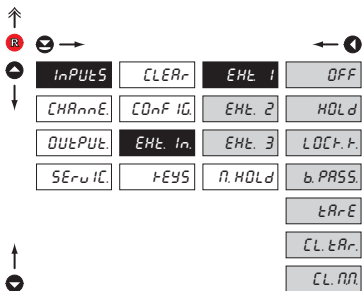

*


Setting procedure is identical for EXT. 2 and EXT. 3

EXT. In. External input function selection

OFF	Input is off
HOLD	Activation of HOLD
LOCK K.	Locking keys on the instrument
b. PASS.	Activation of locking access into programming menu LIGHT/PROFI
tARE	Tare activation
CL. tAR.	Tare resetting
CL. NN.	Resetting min/max value

- DEF EXT. 1 > HOLD
- DEF EXT. 2 > LOCK K.
- DEF EXT. 3 > TARE


6.1.3b Selection of function "HOLD"

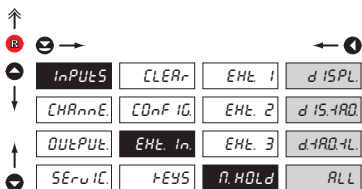

N. HOLD Selection of function "HOLD"

d ISPL.	"HOLD" locks only the value displayed
d IS. tAR.	"HOLD" locks the value displayed and on AO
d. tAR.D. tL.	"HOLD" locks the value displayed, on AO and limit evaluation
ALL	"HOLD" locks the entire instrument

6.1.4a Optional accessory functions of the keys

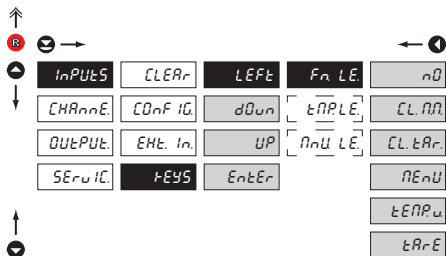

Fn. LE: Assigning further functions to instrument keys

- „FN. LE.“ > executive functions
- „TMP. LE.“ > temporary projection of selected values
- „MNU. LE.“ > direct access into menu on selected item

nD Key has no further function

CL NN Resetting min/max value

CL tAr Tare resetting

nENU Direct access into menu on selected item

- after confirmation of this selection the „MNU. LE.“ item is displayed on superior menu level, where required selection is performed

tENP u Temporary projection of selected values

- after confirmation of this selection the item „TMP. LE.“ is displayed on superior menu level, where required selection is performed

tArE Tare function activation




Preset values of the control keys **DEF**:

LEFT	Show Tare
UP	Show Max. value
DOWN	Show Min. value
ENTER	w/o function



Setting is identical for LEFT, DOWN, UP and ENTER

6.1.4b Optional accessory functions of the keys - Temporary projection

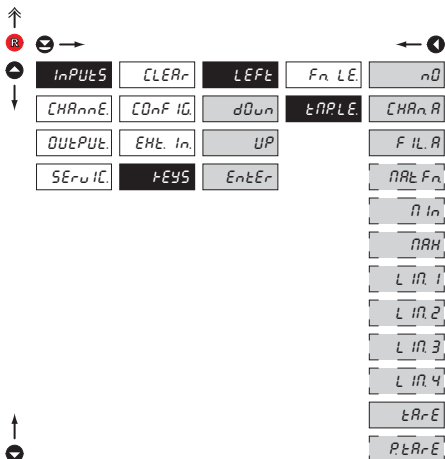

tAP L.E. Temporary projection of selected item


- "Temporary" projection of selected value is displayed for the time of keystroke
- "Temporary" projection may be switched to permanent by pressing **RE** + "Selected key", this holds until the stroke of any key

- nD** Temporary projection is off
- CHAN A** Temporary projection of "Channel A" value
- FIL R** Temporary projection of "Channel A" value after processing digital filters
- nRH Fn** Temporary projection of "Mathematic functions" value
- n In** Temporary projection of "Min. value"
- nRH** Temporary projection of "Max. value"
- L In 1** Temporary projection of "Limit 1" value
- L In 2** Temporary projection of "Limit 2" value
- L In 3** Temporary projection of "Limit 3" value
- L In 4** Temporary projection of "Limit 4" value
- tAr-E** Temporary projection of "TIME" value
- dAr-E** Temporary projection of "DATE" value
- tAr-E** Temporary projection of "TARE" value
- P.tAr-E** Temporary projection of "P. TARE" value



Setting is identical for LEFT, DOWN, UP and ENTER

6.1.4c Optional accessory functions of the keys - Direct access to item

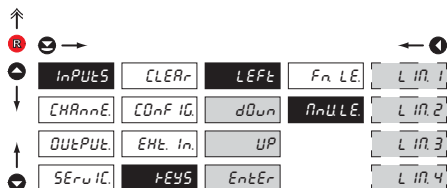


nonUE Assigning access to selected menu item

- LIM 1** Direct access to item "LIM 1"
- LIM 2** Direct access to item "LIM 2"
- LIM 3** Direct access to item "LIM 3"
- LIM 4** Direct access to item "LIM 4"

!
Setting is identical for LEFT, DOWN, UP and ENTER


6.2 Setting "PROFI" - CHANNELS

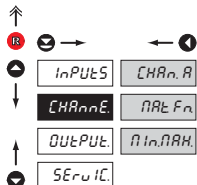

The primary instrument parameters are set in this menu

- CHAn.A** Setting parameters of measuring "Channel"
- nAR.Fn** Setting parameters of mathematic functions
- nIn.nARH** Selection of access and evaluation of Min/max value

6.2.1a Display projection

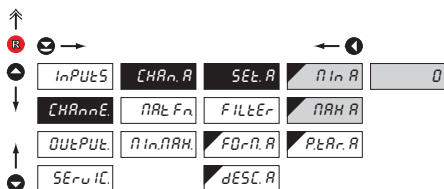


SEt.A Setting display projection

nIn.A Setting display projection for minimum value of input signal
 - range of the setting is -99999...999999
 - **DEF** = 0

nAR.H Setting display projection for maximum value of input signal
 - range of the setting is -99999...999999
 - **DEF** = 100

!
 This setting is only for ASCII protocol using commands 9N and 9F

6.2.1b Setting fixed tare

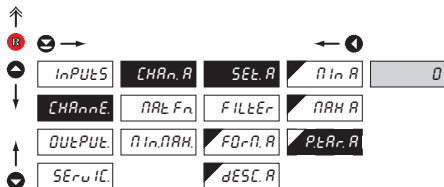


P.tAR.A Setting "Fixed tare" value

- setting is designed for the event when it is necessary to firmly shift the beginning of the range by known size
- when setting (P.TAR. A > 0) display shows "T" symbol
- range of the setting is 0...999999
- **DEF** = 0

!
 This setting is only for ASCII protocol using commands 9N and 9F

6.2.1c Digital filters

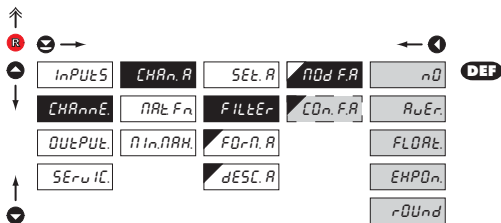

CON.F.A Selection of digital filters

- at times it is useful for better user projection of data on display to modify it mathematically and properly, wherefore the following filters may be used:

nD Filters are off

RuEr Measured data average

- arithmetic average from given number („CON.F.A.“) of measured values
- range 2...100

FLDRt Selection of floating filter

- floating arithmetic average from given number („CON.F.A.“) of measured data and updates with each measured value
- range 2...30

EHPDn Selection of exponential filter

- integration filter of first prvnho grade with time constant („CON.F.A.“) measurement
- range 2...100


rDUnd Measured value rounding

- is entered by any number, which determines the projection step (e.g: "CON.F.A."=2,5 > display 0, 2.5, 5,...)

CON.F.A Setting constants

- this menu item is always displayed after selection of particular type of filter
- **DEF** = 2

6.2.1d Projection format - positioning of decimal point

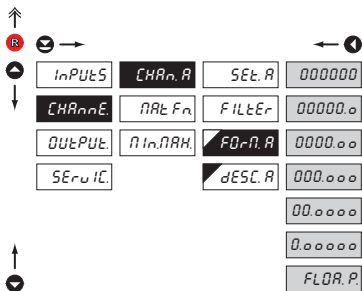

FOr.n.A Selection of decimal point

- the instrument allows for classic projection of a number with positioning of the DP as well as projection with floating DP, allowing to display a number in its most exact form „FLOA.P.“

000000 Setting DP - XXXXXX.

00000.0 Setting DP - XXXXX.x

0000.00 Setting DP - XXXX.xx

000.000 Setting DP - XXX.xxx


DEF

00.0000 Setting DP - XX.xxxx

0.00000 Setting DP - X.xxxxx

FLOR.P Floating DP

6.2.1e Projection of description - the measuring units

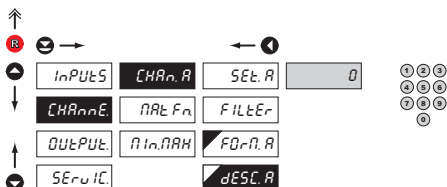

dESC.A Setting projection of descrpt. for "Channel A"

- projection of measured data may be extended (at the expense of the number of displayed places) by two characters for description

- description is set by shifted ASCII code, when two first places show the set description and two last characters their code in period 0...95


- description is cancelled by code 00

- **DEF** = no description



Table of signs on page 83

6.2.2a Mathematic functions

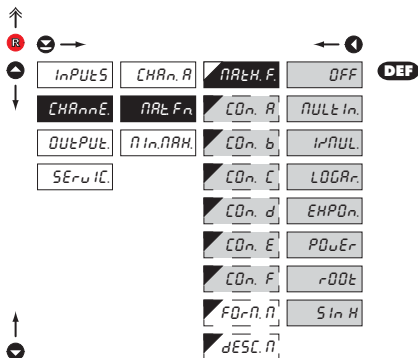

MATH.F. Selection of mathematic functions

OFF Mathematic functions are off

NULL In Polynomial

$$Ax^2 + Bx^4 + Cx^3 + Dx^2 + Ex + F$$

I/P.NUL. $1/x$

$$\frac{A}{x^2} + \frac{B}{x^4} + \frac{C}{x^3} + \frac{D}{x^2} + \frac{E}{x} + F$$

LOGAR. Logarithm

$$A \times \ln\left(\frac{Bx+C}{Dx+E}\right) + F$$

EHPON. Exponential

$$A \times e^{\left(\frac{Bx+C}{Dx+E}\right)} + F$$

POWEr Power

$$A \times (Bx+C)^{(Dx+E)} + F$$

rOOT Root


$$A \times \sqrt{\frac{Bx+C}{Dx+E}} + F$$

Sin H Sin x

$$A \sin^5 x + B \sin^4 x + C \sin^3 x + D \sin^2 x + E \sin x + F$$

CON. - Setting constants for calculation of mat. functions

- this menu is displayed only after selection of given mathematic function

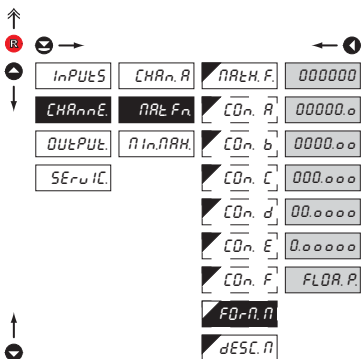6.2.2b **Mathematic functions - decimal point****F0r.n.n** Selection of decimal point

- the instrument allows for classic projection of a number with positioning of the DP as well as projection with floating DP, allowing to display a number in its most exact form „FLOA.P.“

000000 Setting DP - XXXXXX.

00000.0 Setting DP - XXXX.X

0000.00 Setting DP - XXXX.xx


000.000 Setting DP - XXX.xxx

00.0000 Setting DP - XX.xxxx

0.00000 Setting DP - X.xxxxx

FLOr.P Floating DP

DEF

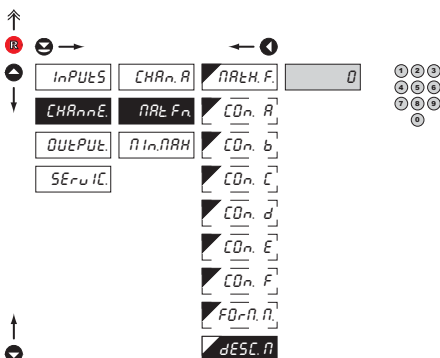6.2.2c **Mathematic functions - measuring units****dESC.n** Setting projection of description for “MATH.F.”


- projection of measured data may be extended (at the expense of the number of displayed places) by two characters for description
- description is set by shifted ASCII code, when two first places show the set description and two last characters their code in period 0...95
- description is cancelled by code 00

DEF = no description



Table of signs on page 83

6.2.3 Selection of evaluation of min/max value

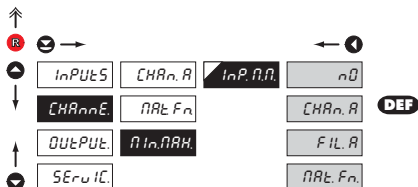

InP. n.n. Selection of evaluation of min/max value

- selection of value from which the min/max value will be calculated


n0 Evaluation of min/max value is off

CHAn.A From "Channel A"

FIL.A From "Channel A" after digital filters processing

nA.t. F.n. From "Mathematic functions"


6.3 Setting „PROFI“ - OUTPUTS

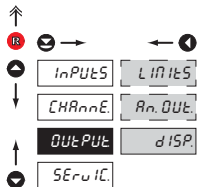

In this menu it is possible to set parameters of the instrument output signals

- LIMITS Setting type and parameters of limits
- ANALOG Setting type and parameters of analog output
- DISP Setting display projection and brightness

6.3.1a Selection of input for limits evaluation

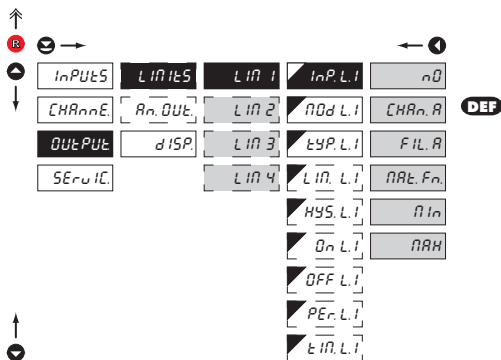


LIMIT 1 Selection evaluation of limits

- selection of value from which the limit will be evaluated

- n0 Limit evaluation is off
- CHANNEL Limit evaluation from "Channel A"
- FILTER Limit evaluation from "Channel A" after digital filters processing
- MATH.FN Limit evaluation from "Mathematic functions"
- MIN Limit evaluation from "Min.value"
- MAX Limit evaluation from "Max.value"

!
Setting is identical for LIM 2, LIM 3 and LIM 4

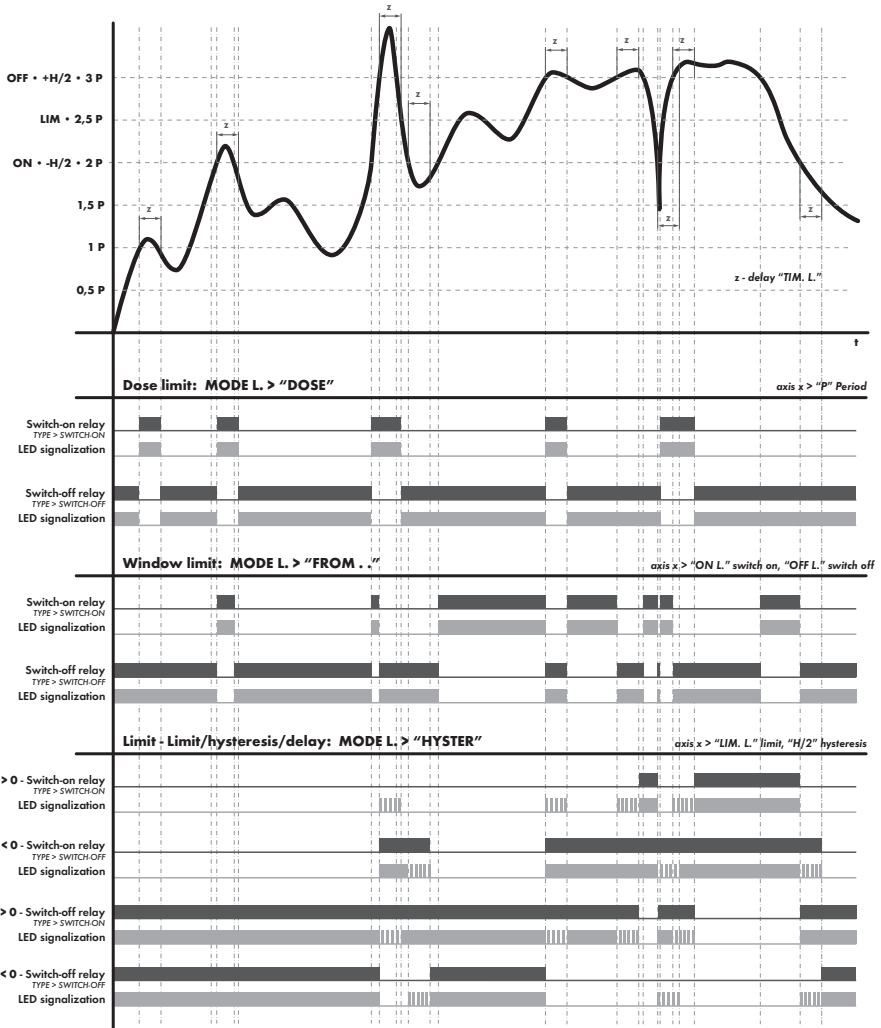

6.3.1b Volba typu limit

↑

IR →

← I

DEF

inPuts	LIM1bS	LIM 1	inP.L.1	HYS.tEr.
CHARnE	An.QUt.	LIM 2	NOd.L.1	FrOn.
QUtPUL	dISP.	LIM 3	tYP.L.1	dOS InG
SERuIC.		LIM 4	LIM.L.1	
			HYS.L.1	
			On.L.1	
			OFF.L.1	
			PER.L.1	
			tIM.L.1	

↓

↑

↓

Setting is identical for LIM 2, LIM 3 and LIM 4

NOd.L.1 Selection the type of limit

HYS.tEr. Limit is in mode "Limit, hysteresis, delay"

- for this mode the parameters of "LIM. L." are set, at which the limit will shall react, "HYS. L." the hysteresis range around the limit ($LIM \pm 1/2 HYS$) and time "TIM. L." determining the delay of relay switch-on

FrOn. Frame limit

- for this mode the parameters are set for interval "ON. L." the relay switch-on and "OFF. L." the relay switch-off

dOS InG Dose limit (periodic)

- for this mode the parameters are set for "PER. L." determining the limit value as well as its multiples at which the output is active and "TIM. L." indicating the time during which is the output active

6.3.1c Selection of type of output

↑

IR →

← I

DEF

inPuts	LIM1bS	LIM 1	inP.L.1	CLOSE
CHARnE	An.QUt.	LIM 2	NOd.L.1	OPEn
QUtPUL	dISP.	LIM 3	tYP.L.1	
SERuIC.		LIM 4	LIM.L.1	
			HYS.L.1	
			On.L.1	
			OFF.L.1	
			PER.L.1	
			tIM.L.1	

↓

↑

↓


tYP.L.1 Selection of type of output

CLOSE. Output switches on when condition is met

OPEn. Output switches off when condition is met

Setting is identical for LIM 2, LIM 3 and LIM 4


6.3.1d Setting values for limits evaluation

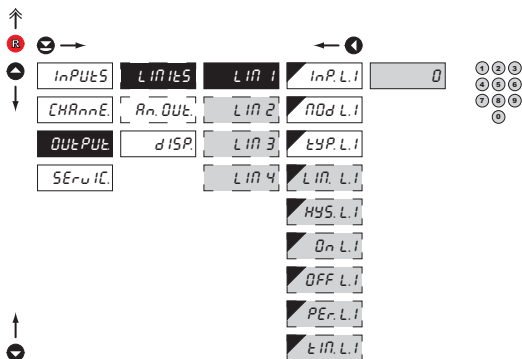

Setting is identical for LIM 2, LIM 3 and LIM 4

- LIM.L.i** Setting limit for switch-on
 - for type "HYSTER"
- HYS.L.i** Setting hysteresis
 - for type "HYSTER"
 - indicates the range around the limit (in both directions, LIM. $\pm 1/2$ HYS.)
- On.L.i** Setting the outset of the interval of limit switch-on
 - for type "FROM"
- OFF.L.i** Setting the end of the interval of limit switch-on
 - for type "FROM"
- PEr.L.i** Setting the period of limit switch-on
 - for type "DOSE"
- tIn.L.i** Setting the time switch-on of the limit
 - for type "HYSTER" and "DOSE"


6.3.2a Selection of input for analog output

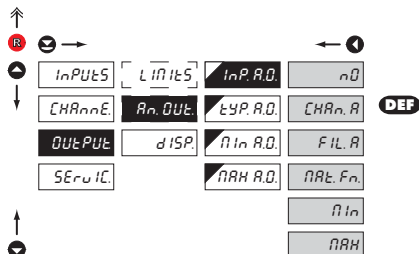**InP.A.O.** Selection evaluation analog output

- selection of value from which the analog output will be evaluated


- AO evaluation is off
- AO evaluation from "Channel A"
- AO evaluation from "Channel A" after digital filters processing
- AO evaluation from "Math.functions"
- AO evaluation from "Min.value"
- AO evaluation from "Max.value"

6.3.2b Selection of the type of analog output

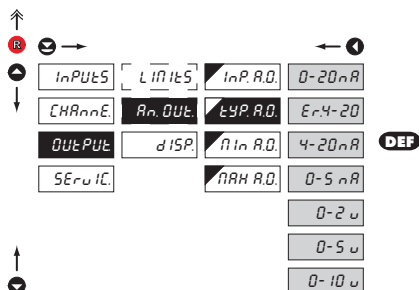**tYP.A.O.** Selection of the type of analog output

- Type - 0...20 mA
- Type - 4...20 mA
- with indication of error statement (< 3,0 mA)
- Type - 4...20 mA
- Type - 0...5 mA
- Type - 0...2 V
- Type - 0...5 V
- Type - 0...10 V

6.3.2c Setting the analog output range

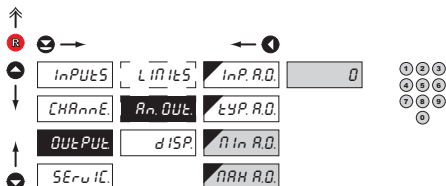


An. OUt. Setting the analog output range

- analog output is isolated and its value corresponds with displayed data. It is fully programmable, i.e. it allows to assign the AO limit points to two arbitrary points of the entire measuring range

nIn R.D. Assigning the display value to the beginning of the AO range
 - range of the setting is -99999...999999
DEF = 0

nRH R.D. Assigning the display value to the end of the AO range
 - range of the setting is -99999...999999
DEF = 100

6.3.3a Selection of input for display projection

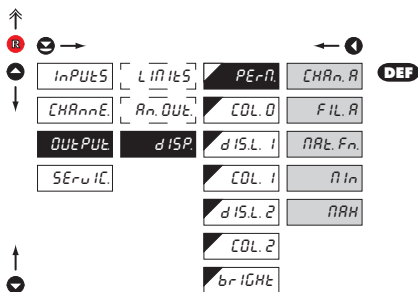


PEr.n. Selection display projection

- selection of value which will be shown on the instrument display

- CHAnn. A** Projection of values from "Channel A"
- FiL. A** Projection of values from "Channel A" after digital filters processing
- nRH. Fn.** Projection of values from "Math.functions"
- nIn** Projection of values from "Min.value"
- nRH** Projection of values from "Max.value"

6.3.3b Selection of display color

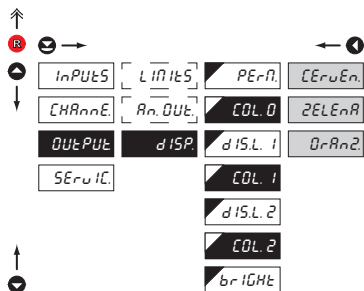
COL. - Selection of display color

- the color selection is governed by setting under items "DIS.L1." and "DIS.L2."


rEd Red color

GrEEEn Green color

OrAnGE Orange color

- "COL 0." **DEF** = Green
- "COL 1." **DEF** = Orange
- "COL 2." **DEF** = Red


6.3.3c Selection of display color change

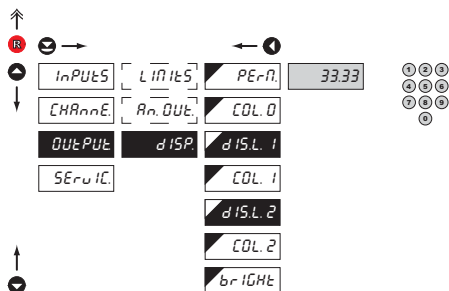
d'IS.L. - Selection of display color change

- under items "DIS.L 1" and "DIS.L2" the limit is set for the time when the display color shall change

- "DIS.L 1." **DEF** = 33.33
- "DIS.L 2." **DEF** = 66.67

6.3.3d Selection of display brightness

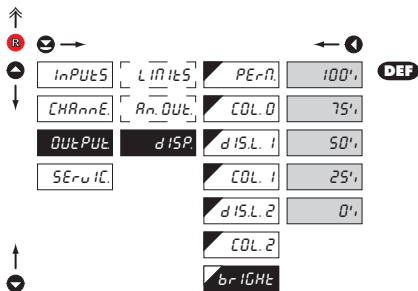


brIGHt Selection of display brightness

- by selecting display brightness we may appropriately react to light conditions in place of instrument location

- 0% Display is off
- after keystroke display turns on for 10 s
- 25% Display brightness - 25%
- 50% Display brightness - 50%
- 75% Display brightness - 75%
- 100% Display brightness - 100%


6.4 Setting "PROFI" - SERVICE

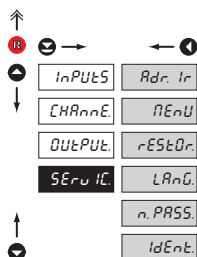

The instrument service functions are set in this menu

Adr. Ir	Setting the address of IR control
nEnU	Selection of menu type LIGHT/PROFI
rESTOr	Restore instrument manufacture setting and calibration
LRnG	Language version of instrument menu
n.PASS	Setting new access password
idEnt	Instrument identification


6.4.1 Setting the address of IR remote control

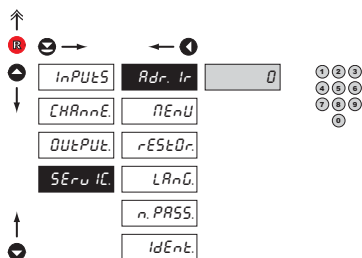

Adr. Ir Setting the address of IR remote control

- setting the remote control address is inevitable only in case there are other large displays OMD 201 within the reach of IR remote control
- range of the setting is 0...99
- **DEF** = 0

6.4.2 Selection of type of programming menu

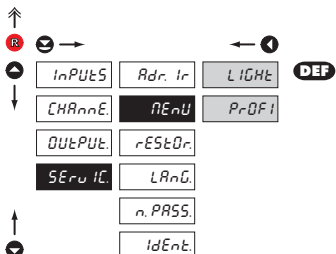

Change of setting is valid upon next access into menu

MENU Selection of menu type - LIGHT/PROFI

- enables setting the menu complexity according to user needs and skills


LIGHT Active LIGHT menu

- simple programming menu, contains only items necessary for configuration and instrument setting
- linear menu > items one after another

PROFI Active PROFI menu

- complete programming menu for expert users
- tree menu

6.4.3 Restoration of manufacture setting

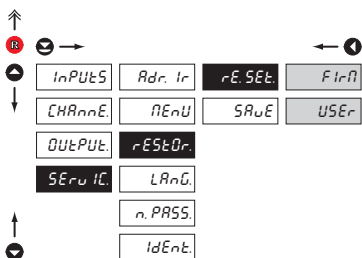

After restoration the instrument switches off for couple seconds

rE.SET. Restoration of instrument manufacture setting

TYPE Restoration of instrument manufacture setting

- generating the manufacture setting for currently selected type of instrument (items marked DEF)


USEr Restoration of instrument user setting

- generating the instrument user setting, i.e. setting stored under SERVIC./RESTOR./SAVE

SARvE Save instrument user setting

- storing the user setting allows the operator to restore it in future if needed

6.4.4 Selection of instrument menu language version

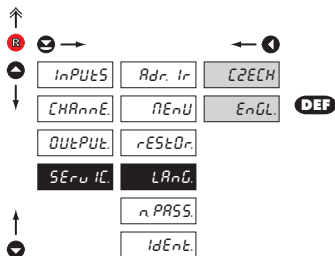


LANG Selection of instrument menu language version

CZECH Instrument menu is in Czech

EnGL Instrument menu is in English

6.4.5 Setting new access password

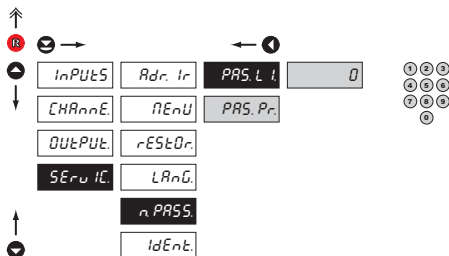


n.PASS Setting new password for access to LIGHT and

PROFI menu

- this option allows to change the numeric code, which blocks the access into LIGHT and PROFi Menu.
- numeric code range: 0...9999
- universal passwords in the event of loss: LIGHT Menu > „8177” PROFi Menu > „7915”


6.4.6 Instrument identification

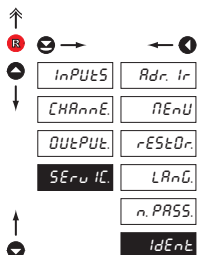

IdEnt Projection of instrument SW version

- display shows type identification of the instrument, SW number, SW version and current input setting (Mode)
- if the SW version reads a letter on first position, it is a customer SW

7.0 Setting items into "USER" menu

- **USER** menu is designed for users who need to change only several items of the setting without the option to change the primary instrument setting (e.g. repeated change of limit setting)
- there are no items from manufacture permitted in **USER** menu
- on items indicated by inverse triangle  L i
- setting may be performed in **LIGHT** or **PROFI** menu, with the **USER** menu then overtaking the given menu structure



- For user operation
- Menu items are set by the user (Profi/Light) as per request
- Access is not password protected

Setting

flashing legend - current setting is displayed



n0

item will not be displayed in USER menu

YES

item will be displayed in USER menu with editing option

SHOU

item will be solely displayed in USER menu

Setting sequence of items in "USER" menu

In compiling USER menu from active LIGHT menu the items (max. 10) may be assigned a sequence, in which they will be projected in the menu

setting projection sequence



Example:

Into USER menu were selected these items

(keys ①) > CL. TAR., LIM 1, LIM 2, LIM 3, for which we have preset this sequence (keys ②):

CL. TAR.	5
LIM 1	0 (sequence not determined)
LIM 2	2
LIM 3	1

Upon entering USER menu

(key ③) items will be projected in the following sequence: LIM 3 > LIM 2 > CL.TAR. > LIM 1

The instruments communicate via serial line RS232 or RS485. For communication they use the ASCII protocol. Communication runs in the following format:

ASCII: 8 bit, no parity, one stop bit
 DIN MessBus: 7 bit, even parity, one stop bit

The transfer rate is adjustable in the instrument menu. The instrument address is set in the instrument menu in the range of 0...31. The manufacture setting always presents the ASCII protocol, rate of 9600 Baud, address 00. The type of line used - RS232 / RS485 - is determined by an output board automatically identified by the instrument.

The commands are described in specifications you can find at [na www.orbit.merret.cz/rs](http://na.www.orbit.merret.cz/rs) or in the OM Link program.

DETAILED DESCRIPTION OF COMMUNICATION VIA SERIAL LINE

Event	Type	Protocol	Transmitted data																	
Data solicitation (PC)	232	ASCII	#	A	A	<CR>														
		MessBus	No - data is transmitted permanently																	
	485	ASCII	#	A	A	<CR>														
		MessBus	<SADR>	<ENQ>																
Data transmission (instrument)	232	ASCII	>	D	(D)	(D)	(D)	(D)	(D)	(D)	(D)	(D)	(D)	(D)	(D)	(D)	<CR>			
		MessBus	<SADR>	D	(D)	(D)	(D)	(D)	(D)	(D)	(D)	(D)	(D)	(D)	(D)	(D)	(D)	<ETX>	<BCC>	
	485	ASCII	>	D	(D)	(D)	(D)	(D)	(D)	(D)	(D)	(D)	(D)	(D)	(D)	(D)	(D)	<CR>		
		MessBus	<SADR>	D	(D)	(D)	(D)	(D)	(D)	(D)	(D)	(D)	(D)	(D)	(D)	(D)	(D)	<ETX>	<BCC>	
Confirmation of data acceptance (PC) - OK	485	MessBus	<DLE>	1																
Confirmation of data acceptance (PC) - Bad			<NAK>																	
Sending address (PC) prior command			<EADR>	<ENQ>																
Confirmation of address (instrument)			<SADR>	<ENQ>																
Command transmission (PC)	232	ASCII	#	A	A	N	P	(D)	(D)	(D)	(D)	(D)	(D)	(D)	(D)	(D)	<CR>			
		MessBus	<STX>	\$	N	P	(D)	(D)	(D)	(D)	(D)	(D)	(D)	(D)	(D)	<ETX>	<BCC>			
	485	ASCII	#	A	A	N	P	(D)	(D)	(D)	(D)	(D)	(D)	(D)	(D)	(D)	<CR>			
		MessBus	<SADR>	\$	N	P	(D)	(D)	(D)	(D)	(D)	(D)	(D)	(D)	(D)	<ETX>	<BCC>			
Command confirmation (instrument)	232	ASCII	OK	!	A	A	<CR>													
			Bad	?	A	A	<CR>													
		Messbus No - data is transmitted permanently																		
		485	ASCII	OK	!	A	A	<CR>												
	Bad			?	A	A	<CR>													
	MessBus		OK	<DLE>	1															
			Bad	<NAK>																
			485	MessBus	!	A	A	<CR>												
					?	A	A	<CR>												
	Command confirmation (inst.) - OK	485	MessBus	!	A	A	<CR>													
?	A			A	<CR>															
Command confirmati (instrument) - Bad			?	A	A	<CR>														
Instrument identification			#	A	A	1Y	<CR>													
HW identification			#	A	A	1Z	<CR>													
One-time transmission			#	A	A	7X	<CR>													
Repeated transmission			#	A	A	8X	<CR>													

LEGEND

#	35	23 _H	Command beginning
A	A	0...31	Two characters of instrument address (sent in ASCII - tens and units, e.g. "01", "99" universal
<CR>	13	0D _H	Carriage return
<SP>	32	20 _H	Space
N, P			Number and command - command code
D			Data - usually characters "0"... "9"; ";", ":", (D) - dp. and {} may prolong data
R	30 _H ...3F _H		Relay and tare status
I	33	21 _H	Positive confirmation of command (ok)
?	63	3F _H	Negative confirmation of command (point)
>	62	3E _H	Beginning of transmitted data
<STX>	2	02 _H	Beginning of text
<ETX>	3	03 _H	End of text
<SADR>	address + 60 _H		Prompt to send from address
<EADR>	address + 40 _H		Prompt to accept command at address
<ENQ>	5	05 _H	Terminate address
<DLE>1	16 49	10 _H 31 _H	Confirm correct statement
<NAK>	21	15 _H	Confirm error statement
<BCC>			Check sum -XOR

RELAY, TARE

Sign	Relay 1	Relay 2	Tare	Change relay 3/4
P	0	0	0	0
Q	1	0	0	0
R	0	1	0	0
S	1	1	0	0
T	0	0	1	0
U	1	0	1	0
V	0	1	1	0
W	1	1	1	0
p	0	0	0	1
q	1	0	0	1
r	0	1	0	1
s	1	1	0	1
t	0	0	1	1
u	1	0	1	1
v	0	1	1	1
w	1	1	1	1

Relay status is generated by command #AA6X<CR>. The instrument immediately returns the value in the format >HH<CR>, where HH is value in HEX format and range 00_H...FF_H. The lowest bit stands for „Relay 1“, the highest for „Relay 8“

COMMANDS RS MONITORS

- #AA9dddd<CR> Reception of alpha-numerical data
 - ddddd is data which is to be displayed
 - maximum of 6 symbols and 2 decimal points
- #AA9NHHHHHHH<CR> Selection of integer input range
 - hexa number in sign long integer format (signed long integer)
 - range: -2147483648...2147483647 (0x80000000...0x7FFFFFFF)
- #AA9FHHHHHHH<CR> Selection of float input range
 - hexa number, corresponding binary presentation of number with floating DP according to standard IEEE-754 (single/short float)
 - significance of individual bites
SEEEEEEE EMMMMMMM MMMMMMMM MMMMMMMM
where: S ... signum (1 bit)
E ... exponent, incl. the signum (8 bitů)
M ... mantissa (23 bits)
 - range: $0.3 \times 10^{-38} \leq |x| \leq 1.7 \times 10^{38}$

For both commands applies the rule:

If less data is sent out, they are supplemented from the right with zeros to full length. It enables contingent acceleration of communication. E.g.: #009F4<CR> is identical as #009F4000000<CR>. They both send away number 2,0.

Protocol DIN MessBus

<EADR><ENQ> >>> odpověď OK <DLE> 1
<STX>\$9 ddddd <ETX><BCC>

!
If channel Mathematical Functions (MF) is active, the first symbol must not be "x". This symbol is not supported.

ERROR	CAUSE	ELIMINATION
<i>E. d. U_n</i>	Number is too small (large negative) to be displayed	change DP setting, channel constant setting
<i>E. d. O_n</i>	Number is too large to be displayed	change DP setting, channel constant setting
<i>E. t. U_n</i>	Number is outside the table range	increase table values, change input setting (channel constant setting)
<i>E. t. O_n</i>	Number is outside the table range	increase table values, change input setting (channel constant setting)
<i>E. i. U_n</i>	Input quantity is smaller than permitted input quantity range	change input signal value or input (range) setting
<i>E. i. O_n</i>	Input quantity is larger than permitted input quantity range	change input signal value or input (range) setting
<i>E. H_n</i>	A part of the instrument does not work properly	send the instrument for repair
<i>E. EE</i>	Data in EEPROM corrupted	perform restoration of manufacture setting, upon repeated error statement send instrument for repair
<i>E. dRtR</i>	Data in EEPROM outside the range	perform restoration of manufacture setting, upon repeated error statement send instrument for repair
<i>E. CLr.</i>	Memory was empty (presetting carried out)	upon repeated error statement send instrument for repair, possible failure in calibration

The instrument allows to add two descriptive characters to the classic numeric formats (at the expense of the number of displayed places). The setting is performed by means of a shifted ASCII code. Upon modification the first two places display the entered characters and the last two places the code of the relevant symbol from 0 to 95. Numeric value of given character equals the sum of the numbers on both axes of the table.

Description is cancelled by entering characters with code 00

	0	1	2	3	4	5	6	7		0	1	2	3	4	5	6	7
0		l	"	Y	S	'	2	'	0	!	"	#	\$	%	&	'	
8	[]	H	+	,	-		^	8	()	*	+	,	-	.	/
16	0	1	2	3	4	5	6	7	16	0	1	2	3	4	5	6	7
24	8	9	:	;	<	=	>	?	24	8	9	:	;	<	=	>	?
32	J	R	b	c	d	E	F	G	32	@	A	B	C	D	E	F	G
40	H	I	J	K	L	M	N	O	40	H	I	J	K	L	M	N	O
48	P	Q	R	S	T	U	V	W	48	P	Q	R	S	T	U	V	W
56	H	Y	Z	[\]	^	_	56	X	Y	Z	[\]	^	_
64	'	R	b	c	d	E	F	G	64	`	a	b	c	d	e	f	g
72	h	i	j	k	l	m	n	o	72	h	i	j	k	l	m	n	o
80	P	Q	R	S	T	U	V	W	80	p	q	r	s	t	u	v	w
88	H	Y	Z	[\]	^	_	88	x	y	z	{		}	~	

Table ASCII

0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19
NUL	SOH	STX	ETX	EOT	ENQ	ACK	BEL	BS	HT	LF	VT	FF	CR	SO	SI	DLE	DC1	DC2	DC3
20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39
DC4	NAC	SYN	ETB	CAN	EM	SUB	ESC	FS	CS	RS	US	SP	!	"	#	\$	%	&	'
40	41	42	43	44	45	46	47	48	49	50	51	52	53	54	55	56	57	58	59
()	*	+	,	-	.	/	0	1	2	3	4	5	6	7	8	9	:	;
60	61	62	63	64	65	66	67	68	69	70	71	72	73	74	75	76	77	78	79
<	=	>	?	@	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O
80	81	82	83	84	85	86	87	88	89	90	91	92	93	94	95	96	97	98	99
P	Q	R	S	T	U	V	W	X	Y	Z	[\]	^	_	`	a	b	c
100	101	102	103	104	105	106	107	108	109	110	111	112	113	114	115	116	117	118	119
d	e	f	g	h	i	j	k	l	m	n	o	p	q	r	s	t	u	v	w
120	121	122	123	124	125	126	127												
x	y	z	{		}	~	DEL												

INPUT

Protocol:	ASCII, MESSBUS, MODBUS - RTU, PROFIBUS DP
Data format:	8 bit + no parity + 1 stop bit (ASCII) 7 bit + even parity + 1 stop bit (MESSBUS) Universal protocol
Rate:	600...230 400 Baud 9 600...12 000 KBaud (PROFIBUS)
RS 232:	isolated, two-way communication
RS 485:	isolated, two-way communication, addressing (in range 1...247)

PROJECTION

Display:	999999, intensive red/green/orange 7 segment LED, digit height 57 or 100 or 125 mm
Projection:	±9999 (-99999...999999)
Decimal point:	adjustable - in menu
Brightness:	adjustable - in menu

INSTRUMENT ACCURACY

Linearisation:	by linear interpolation in 50 points - solely via OM Link
Digital filters:	Averaging, Floating average, Exponential filter, Rounding
Functions:	Tare - display resetting Hold - stop measuring (at contact) Lock - control key locking MM - min/max value Mathematic functions
OM Link:	company communication interface for setting, operation and update of instrument SW
Watch-dog:	reset after 400 ms
Calibration:	at 25°C and 40 % of r.h.

COMPARATOR

Type:	digital, adjustable in menu
Mode:	Hysteresis, From, Dosing
Limita:	.99999...999999
Hysteresis:	0...999999
Delay:	0...99,9 s
Outputs:	4x relays with switch-off contact (Form C) (230 VAC/50 VDC, 3 A)*
Relay:	1/8 HP 277 VAC, 1/10 HP 125 V, Pilot Duty D300

ANALOGO OUTPUTS

Type:	isolated, programmable with resolution of max.10 000 points, analog output corresponds with displayed data, type and range are adjustable
Non-linearity:	0,2 % of range
TC:	100 ppm/°C
Rate:	response to change of value < 150 ms
Voltage:	0...2 V/5 V/10 V
Current:	0...5/20 mA/4...20 mA - compensation of conduct to 500 Ohm/12 V or 1 000 Ohm/24 V

EXCITATION

Adjustable:	5...24 VDC/max. 1,2 W, isolated
-------------	---------------------------------

POWER SUPPLY

Options:	10...30 V AC/DC, max. 27 VA, isolated, - fuse inside (T 4A) 80...250 V AC/DC, max. 27 VA, isolated - fuse inside (T 4A)
----------	--

MECHANICAL PROPERTIES

Material:	anodized aluminum, black
Dimensions:	see chapter 13
Panel cut-out:	see chapter 13

OPERATING CONDITIONS


Connection:	through cable bushings to terminal boards inside the instrument, conductor section up to $1,5 \text{ mm}^2$ / <math>< 2,5 \text{ mm}^2</math>
Stabilisation period:	within 15 minutes after switch-on
Working temp.:	0°...60°C
Storage temp.:	-10°...85°C
Cover:	IP64
Construction:	safety class I
Overvoltage category:	EN 61010-1, A2
Dielectric strength:	4 kVAC after 1 min between supply and input 4 kVAC after 1 min between supply and data/analog output 4 kVAC after 1 min between supply and relay output 2,5 kVAC after 1 min between supply and data/analog output
Insulation resistance:	for pollution degree II, measurement category III instrum.power supply > 670 V (PI), 300 V (DI) Input/output > 300 V (PI), 150 (DI)
EMC:	EN 61000-3-2-A12; EN 61000-4-2, 3, 4, 5, 8, 11; EN 550222, A1, A2

* values apply for resistance load


Front view



Side view



Panel cut-out

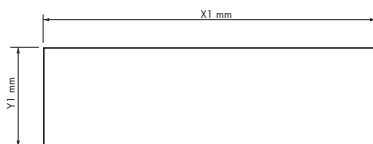


Height	X	Y	X1	Y1
57	372	116	364	108
100-4	465	181	457	173
100-6	651	181	643	173
125-4	539	237	531	228
125-6	754	237	746	228

Tolerance: ± 1 mm

Panel thickness: 0,5 ... 50 mm

Wall mounting

As a standard, large displays are designed for panel installation. Upon request we may also supply a holder for wall mounting, see picture.

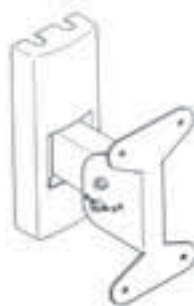

Product **OMD 201RS**
 Type
 Manufacturing No.
 Date of sale

GUARANTEE

A guarantee period of 60 months from the date of sale to the user applies to this instrument.
 Defects occurring during this period due to manufacture error or due to material faults shall be eliminated free of charge.

For quality, function and construction of the instrument the guarantee shall apply provided that the instrument was connected and used in compliance with the instructions for use.

The guarantee shall not apply to defects caused by:

- mechanic damage
- transportation
- intervention of unqualified person incl. the user
- unavoidable event
- other unprofessional interventions

The manufacturer performs guarantee and post.guarantee repairs unless provided for otherwise.



Y E A R S

Stamp, signature

DECLARATION OF CONFORMITY

Company: **ORBIT MERRET, spol. s r.o.**
Klánska 81/141, 142 00 Prague 4, Czech Republic, IDNo: 00551309

Manufactured: **ORBIT MERRET, spol. s r.o.**
Vodňanská 675/30, 198 00 Prague 9, Czech Republic

declares at its full responsibility that the product presented hereunder meets all technical requirements, is safe for use when utilised under the terms and conditions determined by ORBIT MERRET, spol.s r.o. and that our company has taken all measures to ensure conformity of all products of the type listed hereunder, which are being brought out to the market, with technical documentation and requirements of the appurtenant statutory orders.

Product: 4/6-digit programmable large display

Type: **OMD 201**

Version: UNI, PWR, UQC, RS

Conformity is assessed pursuant to the following standards:

El. safety:	EN 61010-1
EMC:	EN 50131-1, chapter 14 and chapter 15
	EN 50130-4, chapter 7
	EN 50130-4, chapter 8
	EN 50130-4, chapter 9
	EN 50130-4, chapter 10
	EN 50130-4, chapter 11
	EN 50130-4, chapter 12
	EN 50130-4, chapter 13
	EN 50130-5, chapter 20
	prEN 50131-2-1, par. 9.3.1
	EN 61000-4-8
	EN 61000-4-9
	EN 61000-3-2 ed. 2:2001
	EN 61000-3-3: 1997, Cor. 1:1998, Z1:2002
	EN 55022, chapter 5 and chapter 6

and Ordinance on:

El. safety:	No. 168/1997 Coll.
EMC:	No. 169/1997 Coll.

The evidence are the protocols of authorized and accredited organizations:

VTÚE Praha, experimental laboratory No. 1158, accredited by ČIA
VTÚPV Vyškov, experimental laboratory No. 1103, accredited by ČIA

Place and date of issue: Prague, 12. Juni 2001

Miroslav Hackl v.r.
Company representative

Mode of asses. of conformity §12, par. 4 b, d Act No. 22/1997 Coll.